



INTERNATIONAL PROGRAMMING GUIDE

XTLplus

DIGITAL MONITORING PRODUCTS, INC.

MODEL XTLplusINT SERIES INSTALLATION AND PROGRAMMING GUIDE

If necessary, the installer should consult the dealer or an experienced radio/television technician for additional suggestions. The installer may find the following booklet, prepared by the Federal Communications Commission, helpful:

“How to identify and Resolve Radio-TV Interference Problems.”

This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402
Stock No. 004-000-00345-4

© 2022 Digital Monitoring Products, Inc.
Information furnished by DMP is believed to be accurate and reliable.
This information is subject to change without notice.

CONTENTS

Panel Specifications.....	1	Flash LOAD Button	6
Power Supply	1	On-Board Z-Wave Connection	6
Communication.....	1	On-Board Wi-Fi Network.....	6
Keypads	1	Wi-Fi LEDs	6
Number of Zones.....	1	Cellular Connection	6
Enclosure Specifications.....	1	Wireless Keypads	7
Introduction	2	Programming Introduction	8
System Configurations	2	Before You Begin.....	8
Caution Notes.....	2	Getting Started	8
Compliance Instructions	2	Entering Characters Using the Number Pad.....	10
System Components	2	Entering Characters	
Accessory Devices.....	2	Using the Standard Keyboard	
Installation.....	3	(Graphic Touchscreen Keypads)	10
Mounting Location Information	3	Keypad Displays Current Programming.....	10
Mounting the Enclosure	3	Programming Menu.....	10
Primary Power Supply.....	3	Programmer Lockout Codes.....	11
Secondary Power Supply	4	Reset Timeout	11
Standby Battery.....	4	Initialization	11
Replacement.....	4	Initialization	12
Battery Supervision	4	Clear All Codes	12
LED Operation.....	5	Clear All Schedules	12
RESET Button.....	5	Clear Display Events Memory.....	12
TAMPER Button	5	Clear Zone Information.....	12
PROG Programming Connection.....	5	Clear Communication Options.....	12
On-Board 1100INT Series Wireless.....	5	Clear Wi-Fi	12
Wireless Zones.....	5	Set to Factory Defaults	12
Wireless Key Fobs and Outputs.....	5	Fast Programming	13
		Fast Program	13
		Account Number.....	13
		First IP Address.....	13

App Key	13	Second IP Port	15
System.....	13	Receiver 2 Programming	16
Hours from GMT.....	13	Receiver 2 Backup?.....	16
Weather Postal Code.....	13	Alarm Reports	16
Enter Siren Serial Number	13	Supervisory/Trouble Reports	16
Zone Number.....	13	Opening/Closing and User Reports.....	16
Zone Name.....	13	Test Report.....	16
Zone Type	13	First IP Address.....	16
Area Assignment	13	First IP Port	16
Serial Number Entry	13	Second IP Address	16
Stop	13	Second IP Port	16
Communication.....	14	Network Options	17
Communication.....	14	Network Options	17
Account Number.....	14	Wi-Fi Setup	17
Transmission Delay.....	14	WPS	17
Communication Type	14	List.....	17
Backup Cellular	14	Manual.....	17
Test Time	14	Test.....	18
Test Days.....	14	Wireless Security Type.....	18
Check-In Minutes	14	Wireless Network Key	18
Fail Time	14	DHCP	18
First Cell APN	15	Local IP Address.....	18
Receiver 1 Programming	15	Gateway Address.....	18
Alarm Reports	15	Subnet Mask	18
Supervisory/Trouble Reports	15	DNS Server.....	19
Opening/Closing and User Reports.....	15	Programming Port.....	19
Test Report.....	15	Device Setup	20
First IP Address.....	15	Device Setup.....	20
First IP Port	15	Device Number	20
Second IP Address	15	Device Name.....	20

Door Device Type.....	20	Swinger Bypass Trips.....	25
Network (Display Only)	20	Zone Activity Hours	25
Wireless	20	Arm Activity Days	26
Serial Number.....	20	Time Zone Changes	26
Supervision Time	20	Time Display	26
Remote Options.....	21	House Code.....	26
Remote Key.....	21	Detect Wireless Jamming	26
Remote Disarm	21	Trouble Audible Annunciation	27
App Key (For EASYconnect only)	21	Enable Keypad Panic Keys	27
System Reports.....	22	Enter Passphrase	27
System Reports.....	22	Occupied Premises	27
Opening/Closing Reports.....	22	Use False Alarm Question	27
Abort Reports	22	Weather Postal Code.....	27
Zone Restoral Reports	22	Bell Options.....	28
Bypass Reports	22	Bell Options	28
Code Change Reports	22	Bell Cutoff Time	28
Send Stored Messages	22	Automatic Bell Test.....	28
Ambush.....	22	Bell Output.....	28
Late To Open	23	Bell Action.....	28
Early To Close.....	23	Fire	28
Entry Check-in Protection.....	23	Burglary	28
System Options.....	24	Supervisory	28
System Options.....	24	Panic	28
System.....	24	Emergency	28
Closing Code	24	Auxiliary 1	28
Closing Check.....	24	Auxiliary 2	29
Entry Delay.....	24	Carbon Monoxide (CO)	29
Exit Delay	24	Output Options.....	30
Cross Zone Time.....	25	Output Options.....	30
Power Fail Delay	25	Communication Failure Output.....	30

Fire Alarm Output	30	Zone Information.....	34
Fire Trouble Output	30	Zone Information.....	34
Ambush Output	30	Zone Number.....	34
Begin Exit Output.....	30	Key Fob.....	34
End Exit Output	30	Zone Name.....	34
Ready Output.....	30	Zone Type	34
Armed Output	30	Arming Zone Assignment.....	34
Disarmed Output.....	30	Area Assignment	35
Burglary Output.....	31	Style.....	35
Arm-Alarm Output	31	DMP Wireless.....	36
Heat Saver Temperature	31	Serial Number Entry	36
Cool Saver Temperature	31	Contact	36
Carbon Monoxide Alarm Output	31	Supervision Time	36
Zone Monitor Output.....	31	LED Operation.....	36
Output Setup.....	32	Disarm/Disable	36
Output Setup.....	32	Wireless PIR Pulse Count	36
Output Number.....	32	Wireless PIR Sensitivity	36
Output Name.....	32	Pet Immunity	37
Serial Number.....	32	Next Zone.....	37
Supervision Time	32	1144INT Series Key Fobs.....	37
Trip with Panel Bell Option	32	Key Fob User Number	37
Area Information	33	Key Fob Serial Number	37
Area Information	33	Key Fob Supervision Time.....	37
Area Number	33	Number of Key Fob Buttons.....	37
Area Name	33	Key Fob Button Selection (Four Buttons).....	37
Automatic Arming.....	33	Key Fob Button Selection (Two Buttons).....	37
Bad Zones	33	Button Action	38
Automatic Disarming.....	33	Button Press Time	38
		Arm/Disarm Area Selection.....	38
		Output Number.....	38
		Output Action	39

Alarm Action.....	39	Cross Zoning.....	48
Disarmed Open	39	Zone Type Descriptions.....	48
Message To Transmit	39	Zone Type Defaults.....	49
Output Number.....	39	Common Keypad Messages	49
Output Action	40		
Swinger Bypass.....	40		
Prewarn Address.....	40		
Chime	40		
Entry Delay.....	40		
Cross Zone	41		
Priority	41		
Traffic Count	41		
Zone Audit Days	41		
Receiver Routing	41		
Zone Number.....	41		
Stop	42		
Stop	42		
Set Lockout Code.....	43		
Set Lockout Code.....	43		
Appendix	44		
Status List.....	44		
Transmission Delay.....	44		
False Alarm Reduction.....	44		
Diagnostics Function.....	44		
Using the Walk Test	47		
Walk Test	47		
Trip Counter For DMP Wireless Test (WLS).....	47		
Test End Warning	47		
Failed Zones Display.....	47		
Keypad Speaker Operation.....	48		

PANEL SPECIFICATIONS

Power Supply

Model 372-500-W plug-in DC power supply

Input: 120 VAC, 60 Hz

Output: 12 VDC

Standby Battery: DMP 3.8 VDC Lithium, 800 mAh

Optional Standby Battery DMP 3.8 VDC Lithium, 3500 mAh

All circuits inherent power limited

Communication

Optional 265LTE-INT Series Cellular Communicator to send messages to DMP Model SCS-1R or SCS-VR Central Station Receivers.

Built-in Wi-Fi network alarm signal communication to DMP Model SCS-1R or SCS-VR Central Station Receivers.

Keypads

You can associate up to seven 9862INT Series Graphic Touchscreen Keypads.

Number of Zones

- XTLplusINT has 99 wireless initiating zones numbered 1-99
- Zone and Output numbers 51 to 54 and 61 to 64 can support 1144INT Series Key Fobs, Output Modules, or sirens

Enclosure Specifications

Size	Color
14 cm W x 9.5 cm H x 2.5 cm D	White (W)

XTLplusINT

Total Number of Zones 99

Number of Possible
Hardwired Zones 0

Number of Possible
Wireless Zones 99

Number of Areas 6

Event Buffer 200

Number of User Codes 99

Number of Door Access
Points 0

Number of Supervised
Keypads 7

31-34 Slow response time wireless outputs
(activates within 15 seconds)

41-44 Fast response time wireless outputs
(activates within 1 second)

F1 - F20 Used for Z-Wave favorites

INTRODUCTION

System Configurations

The panel can be programmed to operate as any of the following system types:

- All/Perimeter system that provides one perimeter area and one interior area
- Home/Sleep/Away system that provides one perimeter, one interior, and one bedroom area. The bedroom area provides for any protection devices the user wants disarmed during their sleeping hours and armed as Away.
- Six area system that provides areas of protection that can be independently armed or disarmed.

Caution Notes

Throughout this guide you will see caution notes containing information you need to know when installing the panel. These cautions are indicated with a yield sign. Whenever you see a caution note, make sure you completely read and understand its information. Failing to follow the caution note can cause damage to the equipment or improper operation of one or more components in the system.

Compliance Instructions

For applications that must conform to a local authorities installation standard or a National Recognized Testing Laboratory certificated system, please see the Listed Compliance Specifications section near the end of this guide for additional instructions.

SYSTEM COMPONENTS

Accessory Devices

Cellular Communicator Cards	
265LTE-INT Cellular Communicator	Allows you to connect the XTLplusINT to an LTE network.
DMP Two-Way Wireless Devices	
1100RINT Repeater	Provides additional range for wireless devices
1103INT Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter. Requires EOL resistor for external contact. Provides Disarm/Disable functionality.
1122INT PIR Motion Detector	Provides motion detection with pet immunity.
1128INT Glassbreak Detector	Provides fully supervised, low-current shock glassbreak detection.
1135INT Siren	Provides a wireless siren.
1142INT Two-button Panic Transmitter	Provides permanently mounted under-the-counter two-button panic operation.
1144-4INT (Four-Button) 1144-2INT (Two-Button) 1144-1INT (One-Button)	Key Fob transmitters designed to clip onto a key ring or lanyard.
Keypads	
9862INT Wireless Graphic Touchscreen Keypad	Allows you to control the panel from various remote locations.


INSTALLATION

Mounting Location Information

A location should be selected that is centrally located between the 1100INT Series transmitters used in the installation. Install the XTLplusINT away from metal objects. Mounting the panel on or near metal surfaces impairs performance. When selecting the proper mounting location of a transmitter, refer to the LED Survey Operation section of the specific installation guide for the transmitter being installed.

Mounting the Enclosure

The enclosure for the panel must be mounted using the provided #6 screws in the four mounting holes shown in Figure 1. Mount the enclosure in a secure, dry place away from metal objects to protect the panel from damage due to tampering or the elements. Mount the panel a minimum of 1.2 meters from any wireless transmitters or repeaters. It is not necessary to remove the PCB when installing the enclosure.

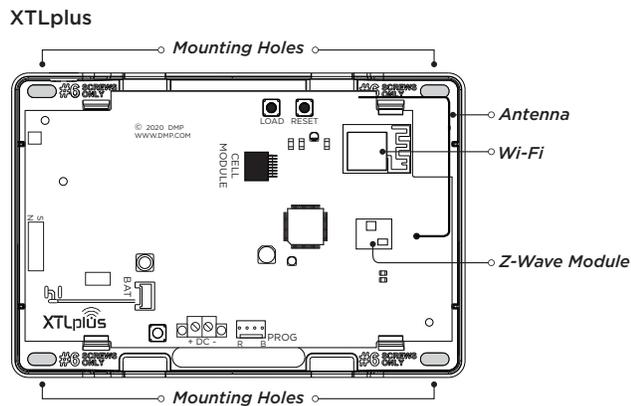


Primary Power Supply

DC Input

Mount the panel near a wall outlet for the Model 372-500-W plug-in DC power supply. In addition to powering the panel, the DC plug-in power supply also charges the back-up battery. The 372-500-W must be located within 100 feet of the panel using 22 AWG wire. Use the following steps to connect the plug-in power supply:

1. Using 22 AWG wire, connect the panel DC terminal (+) to the positive terminal on the power supply.
2. Connect the panel DC terminal (-) to the negative terminal on the power supply. See Figure 2.
3. Plug the power supply into a 120 VAC, 50 Hz dedicated outlet not controlled by a switch.

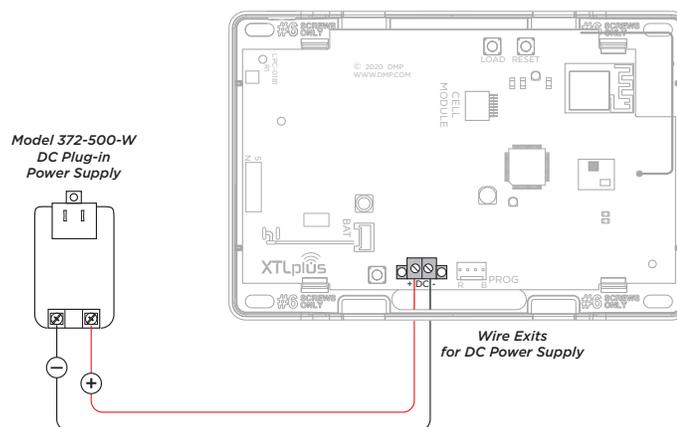

SECONDARY POWER SUPPLY

Standby Battery

The XTLplusINT 800 mAh rechargeable battery is used to provide 4 hours of standby battery power when DC power is not available. The battery is intended for backup power only and not to operate the panel on a daily basis. If the battery is low, or not plugged into the BAT battery connector, a low battery condition is indicated by the panel. If 24 hour standby battery power is needed, connect the 3500mAh battery. See Figure 3. If removing the panel from service, disconnect the backup battery from the BAT connector.

Replacement

Use the following steps to replace the XTLplusINT standby battery. DMP recommends replacing the battery every 3 years under normal use.


1. Unplug the BAT battery connector from the XTLplusINT panel.
2. Loosen the top PCB snaps.
3. Lean the panel PCB forward and lift out from the bottom PCB snaps.
4. Remove and properly dispose of the used battery.

Caution: Risk of fire, explosion, and burns. Do not disassemble, heat above 212°F (100°C), or incinerate. Properly dispose of used batteries.

5. Place the new battery into the XTLplusINT housing base with the battery wires directed toward the bottom left corner. See Figure 3.
6. Set the XTLplusINT PCB into the bottom snaps and press into the top snaps to secure in place.
7. Plug the battery into the BAT panel connector.

Battery Supervision

The panel tests the battery once every hour when DC power is present. This test occurs 15 minutes past each hour and lasts for five seconds. A load is placed on the battery and if the battery voltage is low, a low battery is detected. If DC power has failed, a low battery is detected any time the battery voltage falls below 3.7V.

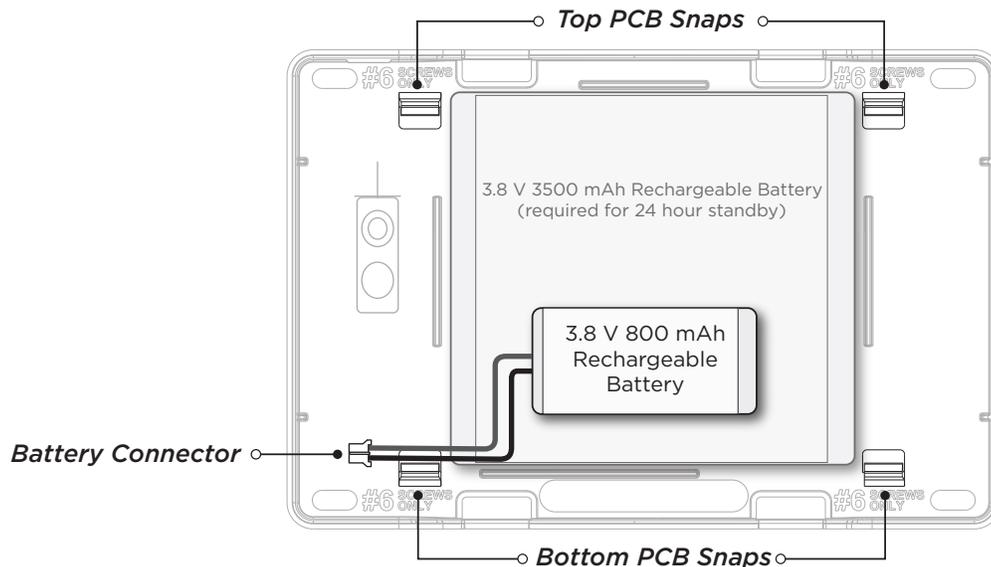

LED Operation

Backlit Logo

The backlit logo indicates the Power and Armed status of the panel. Depending on the operation, the LED displays in Red or Green as listed in the table.

Color and Activity	Operation
Green Steady	Panel Disarmed, Primary Power OK, Battery OK
Green Blinking	Panel Disarmed, Primary Power OK, Battery Fault
No Light	Panel Disarmed, Primary Power Fault, Battery OK
Red Steady	Panel Armed, Primary Power OK, Battery OK
Red/Green Alternate	Panel Armed, Primary Power OK, Battery Fault
Red Blinking	Panel Armed, Primary Power Fault, Battery OK

RESET Button

The RESET button is located on the top of the circuit board and is used to reset the XTLplusINT. To reset the panel prior to reprogramming, press the RESET button without powering down the system. After resetting the panel, begin programming within 30 minutes. If you wait longer than 30 minutes, you must reset the panel again. See Figure 5 for RESET button location.

TAMPER Button

The tamper button is pressed when the cover of the XTLplusINT is secured onto the enclosure. When the cover is removed, the XTLplusINT sends a Tamper Trouble message to the Central Station. The XTLplusINT has a second tamper button located on the back of the unit, as shown in Figure 4. This tamper is pressed when the unit is attached to the wall, and sends a Tamper Trouble message when the unit is removed.

PROG Programming Connection

Onsite programming can be completed using an associated wireless keypad or by connecting a hardwired keypad to the PROG header.

On-Board 1100INT Series Wireless

Wireless Antenna

The XTLplusINT Wireless Antenna is integrated into the circuit board. The panel's built-in wireless receiver operates with DMP 1100INT Series transmitters. See section 3.1 for a list of accessory devices.

Wireless LED Operation

The wireless LEDs are located in the upper right of the circuit board below the RESET button and function as follows:

Green: The green LED flashes every time the receiver transmits. If the panel is reset, or the panel is powered off, the green LED is off. Under normal operation, the green LED flashes constantly with no interruption or change.

Yellow: The yellow LED flashes every time the panel receives a message from a programmed wireless transmitter. When a message is sent by a transmitter, typically by pressing or releasing the TAMPER button, the yellow LED should flash indicating that the panel received a message from the transmitter. If the LED never flashes, the transmitter is not getting through to the panel. This could be because of a misprogrammed serial number or the transmitter is too far away. Under normal operation, the yellow LED flashes at every trip of every wireless transmitter and when the transmitters perform their periodic check-in. It is not unusual for this LED to stay off for many minutes at a time when no transmitters are communicating. See Figure 5 for Wireless LED locations.

Wireless Zones

XTLplusINT panels provide 99 wireless zones numbered 1 to 99. A default zone name, zone type, and area assignment are provided for zones 1-48 and can be changed in Zone Information programming as needed. The defaults are provided as a programming convenience to help reduce installation time.

Wireless Key Fobs and Outputs

XTLplusINT panels provide 8 wireless key fob or output addresses numbered 51 to 54 and 61 to 64. A default name is provided as a programming convenience to help reduce installation time. The default names are described in the programming sections of this guide and can be changed in Output Setup or Zone Information programming as needed.

Flash LOAD Button

The XTLplusINT panel software can be updated via the panel's PROG programming header. To update the panel with a new software version, complete the following steps at the protected premises:

Model 401 USB Flash Module

1. Press and hold the Reset (S1) button.
2. Connect the USB flash drive containing the firmware file to the Model 401 and connect the assembly to the panel's PROG header and press the button on the model 401 one time.
3. With your finger still on the Reset button, press and hold the LOAD (S2) button then release the Reset button.
4. Press and release the button on the 401. The green LED on the 401 should start a slow flash and run for 5 minutes. If the LED blinks rapidly, the update was not successful. Press and release the Reset (S1) button to resume normal operation and start again at Step 1.
5. After the green LED starts a slow flash, release the LOAD button.
6. After the firmware version is updated the green LED will be steady.
7. Press and hold the Reset button, remove the 401, then release the Reset button to resume normal operation.

On-Board Z-Wave Connection

The XTLplusINT features an on-board Z-Wave controller that allows short range radio control of Z-Wave devices that you or your installation company may provide such as; lighting control modules, thermostat controls, doors, and garage doors. Z-Wave Setup allows you to program the system to control the Z-Wave devices from Smartphones using the DMP Virtual Keypad App or from Virtualkeypad.com. The available setup options are: Add, List, Remove, Favorites, Transfer and Optimize.

On-Board Wi-Fi Network

The XTLplusINT connects directly to a Wi-Fi network for TCP communication using a Wireless-B/G connection. The XTLplusINT uses wireless 802.11b/g Wi-Fi technology.

Wi-Fi LEDs

The Green Wi-Fi LED is located to the right of the wireless LEDs in the upper right of the circuit board. Wi-Fi LED displays solid when the network is connected and is off when there is no network connectivity. See Figure 4 for Wi-Fi LED location.

Cellular Connection

The CELL MODULE header is provided to connect a 265 Series Cellular Communicator. The 265LTE-INT Series provides a fully supervised alarm communication path over an LTE network. Cellular communicators provide an external PCB antenna. Refer to the 265LTE-INT Series Cellular Communicator Installation Guide (LT-1703INT) for complete installation information.

Installing the 265LTE-INT on the XTLplusINT:

1. Place the antenna onto the SMA connector and twist the antenna until it is securely tightened on the 265.
2. Keep the 265 parallel to the XTLplusINT PCB and slide it into the eight-pin CELL MODULE connector.
3. Fully seat the 265 and snap its standoff hole onto the standoff pin on the XTLplusINT.

Wireless Keypads

Mounting Wireless Keypads

DMP Wireless keypads have removable covers that allow the base to be mounted on a wall, desk stand or other flat surface using the screw holes provided on each corner.

PROGRAMMING INTRODUCTION

Before You Begin

Before starting to program, we recommend you read through the contents of this manual. The information in this document allows you to quickly learn the programming options and operational capabilities of the XTLplusINT panel.

After this Introduction, the remaining sections describe the functions of each of the programming menu items along with their available options. The panel contains all of its programming information in an on-board processor and does not require an external programmer.

In addition to this manual, you should also be familiar with the following XTLplusINT documents:

- XTLplusINT User's Guide (LT-1442INT)
- XTLplusINT Fast Programming Sheet (LT-1441FINT)
- XTLplusINT Programming Sheet (LT-1441INT)

Programming Information Sheet

Included with each XTLplusINT panel is the Programming Sheet. This sheet lists the various options available for programming the panel. Before starting, completely fill out the sheet with the programming options you intend to enter into the panel.

Having completed programming sheets available while entering data helps to prevent errors and can shorten the length of time you spend programming. Completed sheets also provide you with an accurate account of the panel's program you can keep on file for future system service or expansion.

The remainder of the Introduction explains starting and ending a programming session.

Getting Started

Ground yourself before handling the panel! Touch any grounded metal before touching the panel to discharge static. The panel should be completely installed before you begin programming. Make sure the AC and battery wires are correctly installed.

Program from a Wireless or LCD Keypad

The panel can be programmed using a wireless keypad that has been auto paired or manually associated with the panel. You can also program the panel using an LCD keypad connected to the panel PROG header.

Auto WPS

The panel offers a convenient way to connect to a Wi-Fi network. Press the WPS button on your router within 5 minutes of powering the panel to automatically connect to the Wi-Fi network.

Wireless Keypad Auto Pairing

Wireless keypad auto pairing allows you to skip the Wireless Keypad Association process and automatically connect your keypad to the panel. Auto pairing is only available for 9862INT Series Wireless Graphics Touchscreen Keypads (Version 700 or higher) that do not have a previously assigned house code. A maximum of seven wireless keypads are allowed on each panel.

To pair a 9862INT Series keypad with an XTLplusINT panel, power up both the panel and the keypad. A 10 minute pairing timer begins. The auto pairing process starts immediately and the keypad displays Pairing Keypad With System. See Figure 7. If the panel acquires the keypad during that time, the home screen displays signaling that pairing is complete.

If the panel does not acquire the keypad by the end of the 10 minute pairing timer, the keypad displays Pairing Failed, followed by the Reset screen. See Figure 9 and Figure 10. Reset your panel and tap the Pair button to restart the pairing process.

If the keypad loses communication with the panel, the No Communication With System display appears and provides the option to reattempt pairing. See Figure 10.

Wireless Keypad Association

To enable association operation on a Wireless Graphics Touchscreen keypad, access the Options menu through the carousel menu. While in the Options display, press the Installer Options icon. Enter the code 3577 (INST) and press **CMD**. Press KPD RF to start the RF survey communication. The keypad displays its wireless serial number and RF SURVEY.

The keypad Power/Armed LED turns Red, indicating communication has not yet been established with the panel receiver.

To enable association operation in the XTLplusINT Series panel, press the XTLplusINT Series RESET button three times allowing the wireless TRANSMIT LED (TX) located near the top of the PCB to begin flashing between each press. When in keypad association, the XTLplusINT Series Red and Green logo LEDs turn on steady.

For 60 seconds, the panel listens for wireless keypads that are in RF Survey and have not been programmed, or associated into another panel. Wireless keypads are assigned to the first open device position in Device Setup automatically, based upon the order in which they are detected. When successful communication has been established, the Power/Armed LED turns Blue on Graphics keypads or Green on LCD keypads.

A maximum of seven wireless keypads are allowed on each panel.

Arming Type Auto Detect (on select keypads)

When the XTLplusINT panel's arming type (A/P, H/S/A, Area) is changed, 9862 Series keypads will automatically sync their arming type to match the panel. This prevents you from having to manually change the keypad arming type to match the XTLplusINT panel's settings.

Keypad

Associate up to seven DMP 9862INT Graphic Touchscreen Wireless Keypads to the XTLplusINT panel. The operation is shown and described in the following sections.

Special Keys

The following special keys or areas are common to all DMP keypads.

COMMAND (CMD) Key

Pressing **CMD** allows you to go forward through the programming menu and through each step of a programming section. As you go through the programming, the keypad display shows any current programming already stored in the panel memory. If no change is required for an option, press **CMD** to advance to the next step.

CMD is also used to enter information into the panel's memory such as phone numbers or zone names. Press **CMD** after entering information.

Back Arrow (<—) Key

Use the Back Arrow key to back up one step while programming. The Back Arrow key is also used when an error is made while entering information. Press the Back Arrow key once to erase the last character entered.

Select Keys or Areas

The top row of keys are called the select keys on Thinline keypads or select areas on Graphic Touchscreen keypads. Each time you need to press a select key or area, the keypad displays the function or options above one of the keys or in the select areas. Displaying choices above individual select keys or in select areas allows them to be used for many different applications. For example, you can enter AM or PM when programming the automatic test time or answer **YES** or **NO** for a system option.

During programming, the select keys allow you to change information currently in panel memory by pressing the appropriate select key under the display. You then enter the new information using the keypad data entry digit keys.

When there are more than four response options available, press **CMD** to display the remaining options. Pressing the Back Arrow key allows you to review the previous four choices.

The select keys are also used for choosing a section from the programming menu. When the programming section name you want displays, press any select key.

On Graphic Touchscreen Keypads, when instructed to press the first select key, touch select area 1; the second select key touch select area 2; third select key touch select area 3; and the fourth select key touch select area 4.

Entering Characters Using the Number Pad

1. Choose a character from the table.
2. Identify the **Number** the character correlates with and press it on the number pad.
3. Identify the **Select Key or Area** for that character and press that select key or area on the keypad. Press that select key or area again to access the uppercase letter.
4. When the desired character displays on the keypad, return to Step 1 to enter another character or press **CMD** if finished.

Entering Characters Using the Standard Keyboard (Graphic Touchscreen Keypads)

- Press **ABC** to access uppercase letters.
- Press **abc** to access lowercase letters.
- Press **!@#** to access symbols.
- Press **123** to access the number pad.

Not all keypad prompts accept letters and/or symbols. For example, pressing **P** on the **ENTER CODE** prompt could display a **6** on the keypad.

Keypad Displays Current Programming

Each programming option displayed at the keypad shows the currently selected option in the panel memory. These options are either shown as a number, a blank, or a NO or YES. To change a number or blank to a new number, press any select key. The current option is replaced with a dash. Press the number(s) on the keypad you want to enter as the new number for that option. It is not necessary to enter numbers with leading zeros. The panel automatically right justifies the number when you press **CMD**.

To change a programming option that requires a NO or YES response, press the select key for the response not selected. See Figure 13.

For example, if the current option is selected as YES and you want to change it to NO, press the third select key. The display changes to NO. Press **CMD** to display the next option.

Programming Menu

Accessing the Programmer

To access the programmer function of the XTLplusINT:

1. Use a standard LCD keypad, connect to the PROG header, and set the keypad to Address 1.
2. Press the RESET button for two seconds.
3. Enter the code 665 (PRO). The keypad displays: PROGRAMMER.

You are now ready to start programming the XTLplusINT panel. Pressing **CMD** scrolls you through the programming menu items listed below.

Menu Item	Section in This Manual	Menu Item	Section in This Manual
Initialization	20	Bell Options	29
Fast Program	21	Output Options	30
Communication	22	Output Setup	31
Network Options	23	Area Information	32
Messaging Setup	24	Zone Information	33
Device Setup	25	Stop	34
Remote Options	26	Set Lockout Code	35
System Reports	27	Appendix	36
System Options	28		

To select a section for programming, press any select key when the name of that section displays on the keypad. The detailed instructions for each programming step are found in sections 20 to 35 of this manual. Remove the hardwired keypad when programming is completed.

Programmer Lockout Codes

Although the XTLplusINT panel allows you to access the Programming menu without a lockout code, it is available to program one to restrict programming access to authorized individuals only. You can do this by using SET LOCKOUT CODE at the end of the programming menu.

Installing a lockout code

1. After entering the Programmer menu, the keypad displays PROGRAMMER. Press **CMD** until SET LOCKOUT CODE is displayed (after STOP).
2. Press any select key. At the ENTER CODE: - display, enter a 1- to 5-digit programmer lockout code. Press **CMD**.
3. The display shows ENTER AGAIN. Enter the same lockout code again and press **CMD**. The display shows CODE CHANGED. The new code number must now be entered before the Programmer menu can be accessed.

The lockout code should be written down and kept in a secure place with access limited to authorized persons only. Lost Lockout Code requires factory reset: If you lose or forget the lockout code, the panel must be sent back to the factory to be reset. There is no field option for gaining access to the panel without a valid lockout code.

Reset Timeout

The XTLplusINT has a feature that requires you to enter the Programmer within 30 minutes of resetting the panel. After 30 minutes, if you attempt to program by entering the 665 (PRO) code, the keypad displays: RESET PANEL. You must reset the panel and enter the program code within the next 30 minutes.

If you are already in the Programmer and do not press any keys on the programming keypad for 30 minutes, the panel terminates programming. All data entered up to that point is saved in the panel's memory.

To exit the panel's Programmer you must use the Stop function. The STOP option is the second to the last option in programming. The programming session is then terminated and the keypad returns to the Status List.

INITIALIZATION

INITIALIZATION

Initialization

This function allows you to clear selected parts of the panel program back to the factory defaults.

CODES?	NO	YES
--------	----	-----

Clear All Codes

NO leaves existing codes intact.

YES clears the user code and user profile memory and assigns user code number 99 to the highest user number.

SCHEDS?	NO	YES
---------	----	-----

Clear All Schedules

NO leaves existing schedules intact.

YES clears all shift and output schedules.

EVENTS?	NO	YES
---------	----	-----

Clear Display Events Memory

NO leaves existing event memory intact.

YES clears the events memory.

ZONES?	NO	YES
--------	----	-----

Clear Zone Information

NO leaves existing zone information intact.

YES clears the zone information for all zones.

COM/RMT?	NO	YES
----------	----	-----

Clear Communication Options

NO leaves existing communication options intact.

YES reset communication and remote options programming to factory defaults.

WIFI?	NO	YES
-------	----	-----

Clear Wi-Fi

NO leaves existing Wi-Fi programming intact.

YES reset Wi-Fi programming to factory defaults.

DEFAULTS	NO	YES
----------	----	-----

Set to Factory Defaults

NO leaves existing panel programming intact.

YES sets the panel's programming back to factory default selections. Selecting **YES** does not clear the panel's event memory, zones, user code information, or schedules.

FAST PROGRAMMING

FAST PROGRAM

Fast Program

The **Fast Program** section allows you to quickly configure the essential settings for the XTLplusINT panel.

ACCOUNT NO:

Account Number

Enter the account number sent to the receiver. The range of account numbers are 1 to 65535. For account numbers of four digits or less, you do not have to enter leading zeros. The panel automatically right justifies the account number. See Communication.

FIRST IP ADDR
WPS? NO YES

First IP Address

Enter the first (primary) IP address and press **CMD**. The panel displays WPS? NO YES. Press the fourth select area to choose YES. Press the WPS button on the router. WIFI SETUP SEARCHING displays until connected to the IP address.

APP KEY:

App Key

Enter the 8-digit App Key obtained in your Dealer Settings tab at DMPDealerAdmin.com. See Remote Options.

SYSTEM: ALL/PERIM
AREA A/P H/A

System

This configures the panel as either a six Area system, an All/Perimeter system (Perimeter/Interior), or a Home/Away system (Perimeter, Interior, and Bedrooms). See System Options.

HRS FROM GMT: 6

Hours from GMT

Enter the number (0-23) that indicates the Greenwich Time zone (GMT) where the panel is located. See System Options.

WEATHER POSTAL
CODE: 0

Weather Postal Code

Enter the zip code of the panel at this option. See System Options.

ENTER SIREN
SERIAL #: -

Enter Siren Serial Number

Enter the eight-digit serial number for the wireless siren. The siren is automatically set to Output 61. See Output Setup.

ZONE NO: -

Zone Number

Enter the zone number to program. See Zone Information.

* DEFAULT NAME *

Zone Name

Press any select area to display the default zone name. To change the default zone name, press any select area to clear name. Enter up to 16 characters for the new zone name.

ZONE TYPE: -

Zone Type

To change the default zone type press any select area. See Zone Information.

AREA: -

Area Assignment

To change the default area, press any select area.

SERIAL #: -

Serial Number Entry

Enter the eight digit serial number, including leading zeros, found on the wireless device.

STOP

Stop

Press **CMD** to display STOP and press any select area to exit the Fast Program function and save the programming. All programming options are still available by reentering the programming menu.

COMMUNICATION

COMMUNICATION

Communication

The Communication section allows you to configure the communication settings for the XTLplus INT panel.

ACCOUNT NO:

Account Number

Enter the account number sent to the receiver.

DD, NET, CELL - The range of account numbers for Digital Dialer, Network, and Cell is 1 to 65535. For account numbers of four digits or less, you do not have to enter leading zeros. The panel automatically right justifies the account number.

CID - The account number range for this format is 1 - 9999.

XMIT DELAY: 30

Transmission Delay

Enter the number of seconds (15 to 45 seconds) the panel waits before sending burglary alarm reports to the receiver. The wireless siren and relay outputs are not delayed during this period. Enter 0 (zero) to disable this function. The default is **30**.

COMM TYPE: CELL
WIFI CEL NONE

Communication Type

This specifies the communication method the panel uses to contact the receiver. Press any select area to display the following communication options:

- **WIFI:** Network communication to DMP Model SCS-1R or SCS-VR Receivers.
- **CEL:** This option allows communication over the cellular network using the 265LTE-INT Series Cellular Communicator to DMP Model SCS-1R or SCS-VR Receivers.
- **NONE:** For local systems. Selecting this ends communication programming.

If automatic cellular activation is unsuccessful, cellular communication must be activated using the Activate Cell option provided in Diagnostics Function located in the Appendix.

BACKUP CELL
NO YES

Backup Cellular

Backup Cellular option is available if COMM TYPE is set for WIFI. The Backup Cellular tries to send the message after the main communication fails for 60 seconds on WIFI. If the backup cellular fails then the message is discarded.

TEST TIME
00:00 AM

Test Time

Press **CMD** to enter the Test Time. Enter the time of day the panel sends the test report to the SCS-1R Receiver. Use entries between 12:00 to 11:59 and then choose AM or PM.

TEST DAYS: 1

Test Days

Enter how often the panel test report is sent to the receiver. Enter from 1 to 60 days. Enter zero to disable the test report. Default is **1 (one) day**. This option only displays if a test time is entered.

CHECKIN: 0

Check-In Minutes

Check-in reports are a method of supervising the panel for communication with the receiver. Enter the number of minutes between check-in reports. Select from 0 or 3-240 minutes. Entering 0 (zero) disables the check-in option. Default is **0**. If the Cell Check-In option is used, additional cell charges may apply.

FAIL TIME: 240

Fail Time

Fail Time allows the receiver to miss a defined number of check-in minutes before logging that the panel is missing. For example, if CHECKIN minutes is 20 and Fail TIME minutes is 30, the receiver only indicates a Panel Not Responding after 30 minutes. The Fail TIME must be equal to or greater than the CHECKIN minutes: If the CHECKIN is 20 minutes, the FAIL TIME must be 20 or more. The maximum FAIL TIME is 240 minutes. The default FAIL TIME is **240 minutes**.

TEST TIME
COMM TRBL NO **YES**

Send Communication Trouble

Enable communication fail notification by selecting YES at COMM TRBL. Select NO to disable. Default is **YES**. If set to yes, Comm Troubles will be logged in panel events.

When COMM TRBL is YES and the panel detects a failure of communication, the panel sends an S72 (Comm Trouble) message through a backup communication method with notification of the failure. If both primary and secondary methods of communication fail, then two S72 messages will be sent via the third communication method, if programmed. When communication is restored, the panel sends an S73 (Comm Restored) message through the primary communication.

If the primary or secondary communication type is CELL, S72 and S73 messages include the cell signal strength as a -dBm value.

FIRST CELL APN
SECURECOM400

First Cell APN

Enter the first APN (Access Point Name). This allows an access point for cellular communication and is used to connect to a DNS network. The APN may contain two lines of 16 characters to equal 32 characters. Default is set to **SECURECOM400**.

RECEIVER 1 PROG

Receiver 1 Programming

Allows you to set the options for the first receiver the panel attempts to contact when sending reports. The XTLplusINT supports communication to two receivers.

ALARM NO **YES**

Alarm Reports

YES enables Abort, Alarm, Alarm Restoral, Alarm Bell Silenced, Ambush, Exit Error, and System Recently Armed reports to be sent to this receiver. Default is **YES**.

SPV/TRBL NO **YES**

Supervisory/Trouble Reports

YES enables Supervisory, Trouble, Trouble Restoral, Force Armed, Late to Close, and Fault reports to be sent to this receiver. Default is **YES**.

O/C USER NO **YES**

Opening/Closing and User Reports

YES enables Opening/Closing, Code Changes, and Bypass reports by user to be sent to this receiver. Default is **NO**.

TEST RPT NO **YES**

Test Report

Enter **YES** to enable the Recall Test report to be sent to this receiver.

FIRST IP ADDR
000.000.000.000

First IP Address

Enter the first (primary) IP address where the panel sends network or cellular information. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically.

The message is sent using first Cell APN and the first IP Address. If no acknowledgment is received, first Cell APN and the second IP address are used, followed, if needed, by second Cell APN and first and second IP addresses, respectively.

FIRST IP PORT
2001

First IP Port

Enter the first IP port number to be used in conjunction with the first IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

SECOND IP ADDR
000.000.000.000

Second IP Address

Enter the second (secondary) IP address where the panel sends network or cellular information. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically.

SECOND IP PORT
2001

Second IP Port

Enter the second IP port number to be used in conjunction with the second IP address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

RECEIVER 2 PROG

Receiver 2 Programming

Allows you to set the options for the second receiver the panel attempts to contact when sending reports. The XTLplusINT supports communication to two receivers. If you select **YES** for any of the Receiver 2 options, you must have at least one IP address programmed in Receiver 2 programming. Receiver 2 defaults are set to **NO**.

BACKUP? **NO** YES

Receiver 2 Backup?

Select **NO** to allow Receiver 2 to send dual messages to the central station. Select **YES** to allow Receiver 2 to start receiving messages only when Receiver 1 stops working, and to return to its backup state when Receiver 1 returns to its normal state. The default is **NO**.

ALARM **NO** YES

Alarm Reports

YES enables Abort, Alarm, Alarm Restoral, Alarm Bell Silenced, Ambush, Exit Error, and System Recently Armed reports to be sent to this receiver. Default is **NO**.

SPV/TRBL **NO** YES

Supervisory/Trouble Reports

YES enables Supervisory, Trouble, Trouble Restoral, Force Armed, Late to Close, and Fault reports to be sent to this receiver. Default is **NO**.

O/C USER **NO** YES

Opening/Closing and User Reports

YES enables Opening/Closing, Code Changes, and Bypass reports by user to be sent to this receiver. Default is **NO**.

TEST RPT **NO** YES

Test Report

YES enables the Recall Test report to be sent to this receiver. Default is **NO**.

FIRST IP ADDR
000.000.000.000

First IP Address

Enter the first (primary) IP address where the panel sends network or cellular information. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically.

The message is sent using first Cell APN and the first IP Address. If no acknowledgment is received, first Cell APN and the second IP address are used, followed, if needed, by second Cell APN and first and second IP addresses, respectively.

FIRST IP PORT
2001

First IP Port

Enter the first IP port number to be used in conjunction with the First IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

SECOND IP ADDR
2001

Second IP Address

Enter the second (secondary) IP address where the panel sends network or cellular information. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 192168000250. The periods display automatically.

SECOND IP PORT
2001

Second IP Port

Enter the second IP port number to be used in conjunction with the second IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

NETWORK OPTIONS

Network Options are provided to define the network configuration for the panel. This information will be used during communication of messages via network. Wi-Fi must be selected as Communication Type in the Communication section for Wi-Fi Setup to display.

IP addresses and port numbers may need to be assigned by the network administrator. When entering an IP, Gateway, or Subnet Mask address be sure to enter all 12 digits and leave out the periods. For example, IP address 192.168.000.250 is entered as 192168000250.

NETWORK OPTIONS

Network Options

This option is for configuring the desired network settings. Press any select area to select.

Wi-Fi Setup

This option is for connecting to the desired Wi-Fi network and displays when Comm Type is set to Wi-Fi. Press any select area to select.

WPS LIST MANUAL displays. Press the first select area to choose WPS to automatically connect to a WPS enabled router. Press the second select area to choose LIST and see the name and signal strength of any Wi-Fi routers in range. Press the third or fourth select area to choose MANUAL and enter the name of the Wi-Fi router you wish to connect to. Press CMD to display TEST. To select TEST press the first select area to verify connection of your system to the Wi-Fi network. On Graphic Touchscreen Keypads with Version 110 or higher connected to a panel running Version 172 or higher, a Wi-Fi status icon will display at the top of the keypad when the system is connected to the network.

SEARCHING

WPS

When WPS is selected, SEARCHING displays. Press the WPS button on the Wi-Fi network router to which you are attempting to connect. SEARCHING displays for up to two minutes or until connected to the WPS enabled router. Refer to the router's instruction manual for sending a security key to the XTLplusINT Series panel.

If the panel fails to connect to the WPS enabled router, WPS FAILED RETRY? NO YES displays. Press the fourth select area to RETRY or press the third select area to display WPS LIST MANUAL.

SEARCHING

List

When LIST is selected, SEARCHING displays until any Wi-Fi networks are found in range. Once available Wi-Fi networks are found the keypad displays the name of the SSID (Wi-Fi Network name) and signal strength of each network. Press **CMD** to scroll through the list of available Wi-Fi networks. When the desired network is displayed, press any select area to connect.

If the panel is unable to detect the security type, W/L SECURITY with the default security type WPA-PSK displays. If a different security type is required, press **CMD** and WEP WPA NONE displays. Press the select area of the desired security type to choose.

When connecting to the Wi-Fi network the panel also detects the security type in use and W/L KEY: ***** displays.

Enter the W/L KEY and the panel performs a connection test and CONNECTING displays. When successful, CONNECTED displays on the keypad. If the panel does not connect to the Wi-Fi network, NOT CONNECTED displays. Press **CMD** to return to the WIFI SETUP main screen.

MANUAL

Manual

This option allows you to enter the desired network name using the keypad. When MANUAL is selected, the current settings display. Press **CMD** to continue with no change. SecureCom is the default.

WIFI SETUP
ENTER SSID

Use the number keys on the keypad to enter a new or different SSID (Wi-Fi Network name), there is no need to press a select areas. Once the SSID is entered, press **CMD** and SEARCHING displays.

When an SSID is entered for the first time or changed, the panel searches for the SSID entered to ensure communication. The keypad displays SSID FOUND or SSID NOT FOUND. When the SSID is found, the security type is also detected.

Enter up to 32 characters for the SSID from the network router to identify the network LAN. The SSID is blank by default. Use the chart below to enter lowercase or special characters. Each successive press of the select key or area gives additional options. For example, to enter Me5%, you would press 5, select key or area 1 (M); press 2, select key or area 2 twice (e); press 5 (5); press 7, select key or area 4 twice (%).

Number	Select Key or Area 1	Select Key or Area 2	Select Key or Area 3	Select Key or Area 4	When \ is entered, the keypad displays ¥. When - is entered, -> displays.
1	A, a,	B, b	C, c	(, [, {	
2	D, d	E, e	F, f),], }	
3	G, g	H, h	I, i	!, ^, ~	
4	J, j	K, k	L, l	?, ",	
5	M, m	N, n	O, o	/, \, `	
6	P, p	Q, q	R, r	&, \$	
7	S, s	T, t	U, u	@, %	
8	V, v	W, w	X, x	, =	
9	Y, y	Z, z	space, :	_ , ;	
0	-, +	., '	*, <	#, >	

SSID
SSID FOUND

While searching, SEARCHING displays on the keypad. If the panel can not connect to the desired network SSID NOT FOUND displays. Press **CMD** to return to the main menu and WPS LIST MANUAL displays. Press **CMD** again to display TEST.

TEST

Test

Press the first select area to select TEST and the panel will attempt to verify connection of your system to the desired Wi-Fi network.

W/L SECURITY
WPA-PSK

Wireless Security Type

When successful, W/L SECURITY displays. Select the security type based on the network router programming. The default network security type is WPA-PSK. Press any select area to display the other security options. The available options are WEP, WPA, and NONE.

W/L SECURITY
WEP WPA NONE

Press the first select area to choose WEP, press the second select area for WPA, press the third select area for NONE.

W/L KEY

Wireless Network Key

This option displays only if Comm Type is set to Wi-Fi and Security option is not set to NONE. Enter the key provided from the network router's programming. WEP requires a network password of 10 characters (WEP64) or 26 characters (WEP128), using a combination of the number 0-9 and the letters A-F. WPA/WPA-PSK uses a custom key that allows 8 to 32 characters (See the chart above to enter lowercase or special characters). Press **CMD** to save the key.

DHCP NO YES

DHCP

If the panel uses a dynamic IP address Select YES. When set to YES the panel operates in DHCP and will not use the Local IP Address number.

LOCAL IP ADDRESS
192.168.0.250

Local IP Address

Enter the local IP address for the panel. The Local IP Address must be unique and cannot be duplicated on the network. The default local IP address is **192.168.000.250**.

GATEWAY ADDRESS
192.168.0.250

Gateway Address

Enter the local gateway address. The Gateway IP Address is needed to exit the local network. The default gateway address is **192.168.000.001**.

SUBNET MASK
255.255.255.0

Subnet Mask

Enter the local subnet mask assigned to the panel. The default subnet mask address is **255.255.255.000**.

DNS SERVER

192.168.0.1

DNS Server

Enter the IP address of the DNS (Domain Name System) used by the panel to resolve domain names into IP addresses. The default address is **192.168.000.001**. The DHCP programming in the panel must be set to NO.

PROGRAMMING PORT

2001

Programming Port

Enter the programming port number. The programming port identifies the port used to communicate messages to and from the panel. The default Programming Port setting is **2001**.

DEVICE SETUP

DEVICE SETUP

Device Setup

This section allows you to define the XTLplusINT panel wireless keypad configuration. You can install and address up to seven wireless keypads.

DEVICE NO: -

Device Number

Enter the device number of the wireless keypad you are programming. The valid range is 2-8.

Address one is reserved for the XTLplusINT programming keypad attached during programming. After you program each option for the first keypad, repeat these programming steps for each additional keypad.

* UNUSED *

Device Name

This section allows you to define a 16 character alphanumeric name for the device number. If no name is entered, *UNUSED* is displayed.

To remove a keypad from the system, delete the device name by pressing any select area, then press **CMD**. The device name is now displayed as * UNUSED *.

DEVICE SETUP
DOOR? **NO** YES

Door Device Type

When YES is selected, the door device type can be viewed and managed from Virtual Keypad This includes 734 and 1134 devices. Default is **NO**. The door device type is only for devices 2-8 on XTL International Series panels.

NETWORK? NO YES

Network (Display Only)

Select YES to use a 7463 network keypad. Select NO to use a wired or wireless keypad. Default is **NO**.

For XTL Series panels connected over Wi-Fi, one network keypad is able to be connected. An error message will display if you attempt to connect additional network keypads.

WIRELESS? **NO** YES

Wireless

Select YES to use a wireless keypad. Default is **YES**.

SERIAL #:XXXXXXXX

Serial Number

Enter the eight-digit serial number found on the wireless keypad.

SUPERVSN TIME: **240**

Supervision Time

Press any top row key to select the supervision time required for the device. Press **CMD** to accept the default time. Default is **240 minutes**.

SELECT MINUTES:
0 60 240

Press the select area under the required number of minutes. The device must check in at least once during this time or a missing condition is indicated for that device. Zero (0) indicates an unsupervised wireless keypad.

When the panel is reset, panel is powered down and powered up, or programming is complete, the supervision timer restarts for all wireless keypads.

REMOTE OPTIONS

REMOTE OPTIONS

Remote Options

This section allows you to enter the information needed for Remote Command/Remote Programming operation via Wi-Fi communication. A description of the Remote Options follows:

REMOTE KEY

Remote Key

This option allows you to enter a code of up to eight digits for use in verifying the authority of an alarm or to allow remote connections to perform a remote command/programming session. The receiver must give the correct key to the panel before being allowed access. All panels are shipped from the factory with the Remote Key preset as blank.

To enter a new Remote Key, press any select area and enter any combination of up to 8 digits. The numbers you enter appear as asterisks. Press **CMD**.

REMOTE DISARM?

NO YES

Remote Disarm

Enter YES to enable the panel to be disarmed remotely. Selecting NO disables remote disarming. Default is **YES**.

APP KEY:

App Key (For EASYconnect only)

Enter the eight digit App Key obtained in your Dealer Settings tab at dealer.securecomwireless.com.

This communication option is used to eliminate the need for a static IP address programmed in Network Options.

To enter the App Key, press any select area and enter any combination of 8 digits. Press **CMD**. The default for this option is blank.

SYSTEM REPORTS

SYSTEM REPORTS

System Reports

This function allows you to select the reports the XTLplusINT sends to the receiver.

O/C RPTS **NO** YES

Opening/Closing Reports

NO - No Opening/Closing Reports are sent.

YES - Sends Opening/Closing Reports for each programmed area.

ABORT **NO** YES

Abort Reports

YES allows the panel to send an Alarm Abort Report to the receiver any time an area is disarmed during Transmit Delay before an alarm report is sent and the Bell Cutoff Time has not expired. See the Bell Cutoff section. The area must be disarmed and no zones that were in alarm can still be armed.

YES also allows a Bell Silenced Report to be sent if the alarm bell is silenced with a valid user code during an alarm. Default is **NO**.

Alarm Cancel or Verify Reports are sent if the alarm is canceled or verified after being sent to the alarm receiver, if the Bell Cutoff timer has not expired. The Abort Reports option does not affect Cancel or Verify reports.

The panel will not send Abort reports for Fire zones, or Supervisory-type zones.

RESTORAL: **YES**
NO YES DISARM

Zone Restoral Reports

This option allows you to specify whether the panel sends zone restoral reports and when they will be sent.

NO - Restoral reports are not sent by the panel.

YES - The panel always sends zone restoral reports at the time the zone restores from an alarm or trouble condition.

DISARM - The panel sends zone restoral reports when a zone that has restored from an alarm or trouble is disarmed. Twenty-four hour zones send restorals immediately.

BYPASS NO **YES**

Bypass Reports

YES allows the panel to send all zone bypass, reset, and force arm reports to the receiver. The bypass report includes the zone number, zone name, and the user number of the individual bypassing the zone.

CODE CHG NO **YES**

Code Change Reports

YES allows the panel to send all code additions, changes, and deletions to the receiver. The code change report includes the user number added or deleted and the user number of the individual making the change.

SEND STORED
MESSAGES? **NO** YES

Send Stored Messages

If a panel loses communication with the receiver, it will store any messages that are not able to be sent while communication was down. Selecting YES allows the panel to send all stored messages to the receiver once communication is restored. The time at which each message was generated is also sent. Default is **NO**.

If the panel is programmed to communicate to a second IP address (IP2), Send Stored Messages must be enabled for the panel to send a special check-off message to IP2 once communication is restored to the primary IP address (IP1).

AMBUSH **NO** YES

Ambush

YES allows an ambush report to be sent any time user code number one is entered at a keypad.

Selecting NO disables the ambush report and allows user code number one to operate the same as all other codes.

LATE TO OPEN
MINUTES: **0**

Late To Open

Enter 1-240 as the number of minutes to elapse that the system may remain armed after the opening time of a schedule without sending a Late To Open message. If the system continues to be armed after the Late to Open minutes expire, a Late To Open message is sent to the central station. Default is **0**, which disables the Late To Open option.

EARLY TO CLOSE
MINUTES: **0**

Early To Close

Enter 1-240 as the number of minutes that the system can be armed prior to the scheduled closing time. If the system is armed prior to the Early to Close minutes, an Early To Close message is sent to the central station. Default is **0**, which disables the Early to Close option.

ENTRY CHECKIN
NO YES

Entry Check-in Protection

If YES is selected, this enables the panel to send a Serial 1 check-in message when an Entry Delay begins. The fail time included in this message is the programmed Entry Delay (rounded up to the nearest minute) plus one minute.

When the System is Disarmed, (either before or after going into Alarm, regardless of Transmit Delay) another check-in message will be sent. The fail time for this check-in message is 0 if regular check-ins are not programmed and is the normal fail time if check-ins are programmed. During the time frame between the beginning of the Entry Delay and the following check-in message, regular check-in messages are suspended. The default is **YES**.

SYSTEM OPTIONS

SYSTEM OPTIONS

System Options

This section allows you to select system wide parameters used in the operation of the XTLplusINT panel. A description of each System Option follows:

SYSTEM: HOME/AWAY
AREA A/P H/A

System

This configures the panel as either a Home/Away system (Perimeter, Interior, and Bedrooms), an All/Perimeter system (Perimeter/Interior), or a six Area system. Zones must be assigned to Bedrooms for the area to be active.

Wireless zones in an Area or All/Perimeter system resound the trouble buzzer every four hours when zone trouble or low battery is displayed.

CLS CODE NO YES

Closing Code

When YES is selected, a code number is required for system arming. If NO is selected, a code number is not required for system arming. Default is **NO**.

CLS CHK NO YES

Closing Check

Select YES to enable the panel to verify that all areas have been armed after a schedule expires. If the Closing Check finds any areas disarmed past the scheduled time, all keypads emit a steady beep and display CLOSING TIME!. The user must extend the schedule or arm the system within 10 minutes or a Late to Close message is sent to the central station. Default is **NO**.

ENTRY DLY 1: 30
ENTRY DLY 2: 60

Entry Delay

Enter the entry delay time for all exit type zones programmed to use Entry Delay 1. When an armed Exit type zone is faulted, the keypad prewarn tone begins sounding. ENTER CODE: - and the name of the zone causing the Entry Delay displays on all keypads.

When the first digit of a code is entered, the prewarn tone stops at the keypad. If, within five seconds, a valid user code is not entered or an invalid user code is entered, the prewarn tone begins sounding again. Fifteen seconds must elapse before entering a digit silences the prewarn tone again.

The area must be disarmed before the entry delay expires or an alarm is detected. All Burglary type zones in all areas are delayed along with the Exit zone.

Entry delay times can be from 30 to 250 seconds. Repeat the above for Entry Delay 2 if it is being used. Default is **30 seconds** for Entry Delay 1.

Specific Exit Error operation is based on the Entry Delay used (1 or 2) with an EX type zone. See Exit Delay.

EXIT DELAY: 60

Exit Delay

Enter the Exit Delay time for all Exit type zones. When the exit delay time starts, all activity on exit and burglary zones is ignored until the exit delay expires. The keypad displays the Exit Delay time countdown and annunciates the Exit Delay tone at 8 second intervals until the last 10 seconds when annunciation is at 3 second intervals. The exit delay can be from 45 to 250 seconds. Default is **60 seconds**. During Exit Delay, if an exit zone trips, then restores, and trips again, the Exit Delay timer restarts. This restart can occur only once.

Exit Error Operation: At arming, when an entry/exit zone (EX) is faulted at the end of the exit delay then one of two sequences occur:

For Entry Delay 1 EX type zones:

- The bell sounds for the length of time set in Bell Cutoff programming
- The Entry Delay operation starts, requiring code entry to disarm
- If not disarmed, a zone alarm and an Exit Error are sent to the receiver

For Entry Delay 2 EX type zones:

- The zone is force armed and a zone force arm message is sent to the receiver
- An Exit Error is sent to the receiver
- The bell sounds for the length of time set in Bell Cutoff programming

CRS ZONE TM:	4
--------------	---

Cross Zone Time

Enter the time allowed between zone faults. When a zone programmed for cross zoning faults, the panel begins counting down the Cross-Zone Time entered here. If the same zone or another cross-zoned zone faults within this time, an alarm report is sent to the receiver.

If the Cross-Zone Time expires without the second zone fault, only a zone fault report from the first zone is sent to the receiver. The Cross-Zone Time can be from 4 to 250 seconds in one second increments. Enter 0 (zero) to disable the Cross-Zone Time feature. Default is **0 (zero)**. See the Appendix.

PWR FAIL HRS:	1
---------------	---

Power Fail Delay

This option tracks the duration of an AC power failure. The delay time can be from 1 to 9 hours. When the AC power is off for the length of the programmed delay time, an AC power failure report is sent to the receiver. For example, if the power failure delay is set for two hours, then the AC power failure report will be sent between 2-3 hours. Entering a 0 (zero) sends the AC power failure report within 15 seconds. Default is **1**.

SWGRBYP TRIPS:	2
----------------	---

Swinger Bypass Trips

Enter the number of times (1-6) a zone can go into an alarm or trouble condition within one hour before being automatically bypassed. Bypassed zones are automatically reset when the area they are assigned to is disarmed. All 24-hour zones are reset when any area of the system is disarmed. A programming Stop operation restores a bypassed zone. Entering 0 (zero) disables this function. Default is **2**.

How it works

The panel hour timer starts at 59 minutes past the hour. If the hour timer expires before the trip counter is exceeded, the trip counter returns to 0 (zero). If the trip counter is exceeded before the hour expires, the zone is automatically bypassed by the panel. A Bypass Report is sent to the receiver if Bypass Reports is YES.

RST SBYP	NO	YES
----------	-----------	-----

Reset Swinger Bypass

When YES is selected, an automatically bypassed zone is reset if it remains in a normal condition for one complete hour after being bypassed. A report of the automatic reset is sent to the receiver if Bypass Reports has been selected as YES. Default is **NO**.

ZN ACTY HRS:	0
--------------	---

Zone Activity Hours

This option provides supervision of a person living alone for non-activity. Enter the number of hours, 0 to 9, allowed to elapse without a disarmed zone being tripped before a message is sent to the receiver. Default is **0 (zero)**.

When the system is disarmed, the timer begins to countdown the number of hours programmed. Each time activity occurs, the timer restarts the countdown. Before the countdown time expires, the keypad sounds a tone and PRESS ANY KEY displays to allow the user to restart the activity timer. The duration of the tone is the number of seconds programmed for Entry Delay 2.

Select the SUPV/TRBL receiver option in communication programming to send S93 ALARM: User Activity Not Detected, S94 Alert: Activity Check Enabled, and S95 Alert: Activity Check Disabled messages.

When an open/close schedule is programmed, the timer only counts down during the scheduled open period. Also, when a schedule is programmed, if the timer is counting down and the scheduled open time occurs, the timer resets and begins the countdown again.

ARM ACTY DAYS: 0

Arm Activity Days

This allows selection of the number of days a countdown timer is set for area arming and disarming activity. The range for the countdown timer is 00 to 99.

When the timer counts down to zero because of no arming or disarming activity, the panel sends a "No Arming/Disarming" message to the receiver at 10:00 AM. Each time an area is armed or disarmed, the timer is restarted. When the countdown timer expires because of no arming or disarming activity, and a message is sent, the timer does not restart until a panel reset occurs or an area is armed or disarmed. The SUPV/TRBL receiver option must be selected in communication programming for the message to be sent.

TIME CHG NO YES

Time Zone Changes

This option allows the panel to request automatic time changes from the DMP SCS-1R Receiver. For the receiver to send time changes, it must be programmed to send time changes and must be receiving time change updates from the host automation computer at least every 24 hours. Default is **YES**.

HRS FROM GMT: 6

When time zone is programmed YES, enter the number (0-23) that indicates the Greenwich Time zone (GMT) where the panel is located. The default is **6**. See table for GMT values.

GMT	City/Time Zone
0	London, Monrovia, Lisbon, Dublin, Casablanca, Edinburgh
1	Cape Verde Island, Azores
2	Mid-Atlantic, Fernando de Noronha
3	Buenos Aires, Georgetown, Brasilia, Rio de Janeiro
4	Atlantic Time (Canada), Caracas, La Paz, Santiago
5	Eastern Time (US, Canada) Bogota, Lima, Arequipa
6	Central Time (US, Canada), Mexico City, Saskatchewan
7	Mountain Time (US, Canada), Edmonton
8	Pacific Time (US, Canada), Tijuana
9	Alaska
10	Hawaii
11	Midway Island, Samoa
12	Fiji, Marshall Island, Wellington, Auckland, Kwajalein, Kamchatka

GMT	City/Time Zone
13	New Caledonia
14	Guam, Sydney
15	Tokyo, Seoul
16	Hong Kong, Singapore
17	Bangkok, Hanoi
18	Dhaka, Almaty
19	Islamabad, Karachi
20	Abu Dhabi, Kazan
21	Moscow, Bagdad
22	Eastern Europe
23	Rome, Paris, Berlin

TIME DSP NO YES

Time Display

YES allows the keypad to display the time and day in the Status List. When NO is selected, time and day of the week are not displayed.

WIRELESS HOUSE CODE: 0

House Code

A Wireless House Code between 1 and 50 is pre-programmed at the factory. To change the house code, press any select area. Enter a House Code from 1 to 50 and press CMD. The XTLplusINT automatically programs the house code into the wireless transmitters when the unique transmitter serial number is programmed into the panel. See Wireless programming in Zone Information. The house code identifies the panel, receiver, and transmitters to each other. When operating, the receiver listens for transmissions that have the programmed house code and transmitter serial number.

DETECT WIRELESS JAMMING: NO YES

Detect Wireless Jamming

When enabled and the receiver detects jamming, a trouble or alarm message is sent to the receiver and displays in the Status List. Select YES to enable jamming messages to display in the Status List. Select NO to disable jamming messages. Default is **NO**.

TRBL AUDIBLE: DAY

Trouble Audible Annunciation

Press any top row key to select the keypad buzzer annunciation method for wireless low battery and missing messages.

Select ANY to enable annunciation anytime.

Select DAY to enable annunciation except during sleeping hours (9 PM to 9 AM).

Select MIN (minimum) to annunciate only Fire and CO zones during daytime hours (9 AM to 9 PM). Default is **DAY**.

KEYPAD PANIC KEYS
ENABLED: NO **YES**

Enable Keypad Panic Keys

This option allows the two-button panic key operation selected at a keypad to send the Panic, Emergency, or Fire message to the central station receiver. Select YES to enable the two-button panic operation. To disable the two-button panic operation, select NO. Default is **YES**.

1100 ENCRYPTION
ALL BOTH **NONE**

Wireless Encryption

Encryption allows the panel to communicate with encrypted 1100INT Series wireless devices that are v700 and higher. Select ALL to allow encryption for all the wireless devices programmed into the panel. Select BOTH to allow both encrypted and non-encrypted wireless devices to be programmed into the panel. Select NONE to don't allow encryption for wireless devices programmed into the panel. The default is **NONE**.

1100 PASSPHRASE

Enter Passphrase

ENTER PASSPHRASE displays if you select ALL or BOTH for wireless encryption. In order for the panel to support encrypted 1100INT Series wireless devices, a passphrase must be entered. The passphrase must be an 8-digit hexadecimal number which determines the system's encryption key.

OCCUPIED
PREMISES: NO **YES**

Occupied Premises

Select YES to allow the panel to automatically disarm the interior area(s) when arming all areas and a perimeter zone is not tripped during the exit delay.

This False Alarm Reduction feature keeps a user from arming the entire system when they do not exit and remain in the premises. Select NO to not automatically disarm interior area(s). Default is NO.

USE FALSE ALARM
QUESTION NO **YES**

Use False Alarm Question

Select YES to display IS THIS A FALSE ALARM? NO YES at the keypad in place of CANCEL VERIFY when a burglar alarm occurs. Select NO to display CANCEL VERIFY for burglar alarms. This operates for ALL/PERIM and HOME/SLEEP/AWAY arming systems. Default is **YES**.

ENTER WEATHER
ZIP CODE: **0**

Weather Postal Code

This option allows local weather updates to display on the keypad. Enter the postal code of the user at this option. Press CMD and enter the two-letter country code (ISO2). When no number is entered weather conditions are not displayed. Default is -.

BELL OPTIONS

BELL OPTIONS

Bell Options

This section allows you to program the panel bell output functions. If using the Model 1135INT Wireless Siren, the Trip with Panel Bell option should be selected in the Output Setup programming for the siren.

BELL CUTOFF: 5

Bell Cutoff Time

Enter the maximum time from 1 to 15 minutes that a wireless output remains on. If the output is manually silenced or the system is disarmed, the cutoff time is reset. Default is 5.

BELL TST NO YES

Automatic Bell Test

When YES is selected, the 1135INT wireless siren is turned on for two seconds when all areas in the system are armed. The Bell Test only occurs when the areas are armed from a keypad. Arming performed from an Arming zone does not activate the Bell Test.

Closing Wait operation

When Bell Test is set to YES, the closing wait function also operates. Closing Wait provides a delay time before a monitored system arms until the panel receives an acknowledgment of the closing report from the central station receiver. During the delay, the keypad displays ONE MOMENT . . . Once the closing is acknowledged, the keypad buzzes for one second and then displays the ALL SYSTEM ON message. If communication fails, the message LOCAL ALARM ONLY appears.

BELL OUTPUT: 0

Bell Output

Enter the output number (51-54, 61-64) when it is necessary to follow the on and off condition of the bell action. Enter 0 (zero) to disable.

When BELL ACTION below is set to T for Temporal Code 3, this Bell Output action will be Pulse for wireless outputs 51-54 and 61-64.

BELL ACTION

Bell Action

This defines the type of Bell Action from zone alarms that will occur. Trouble conditions do not activate Bell Action. There are eight zone types you can program individually for Bell Output. To provide a steady Bell Output, enter S. For a pulsed output, enter P. For a Temporal Code 3 output, enter T, enter 4 for a Temporal Code 4 output, and for no bell action, enter N.

FIRE TYPE: T

Fire

Defines Bell Action for Fire Type Zones. The default is set at T.

BURGLARY TYPE: S

Burglary

Defines Bell Action for Burglary Type Zones. The default is set at S.

SUPRVSRY TYPE: N

Supervisory

Defines Bell Action for Supervisory Type Zones. The default is set at N.

PANIC TYPE: N

Panic

Defines Bell Action for Panic Type Zones. The default is set at N.

EMERGENCY TYPE: N

Emergency

Defines Bell Action for Emergency Type Zones. The default is set at N.

AUXLRY 1 TYPE: N

Auxiliary 1

Defines Bell Action for Auxiliary 1 Type Zones. The default is set at N.

AUX 2 TYPE:	N
-------------	----------

Auxiliary 2

Defines Bell Action for Auxiliary 2 Type Zones. The default is set at **N**.

CO TYPE:	4
----------	----------

Carbon Monoxide (CO)

Defines Bell Action for Carbon Monoxide (CO) Type Zones. The default is set at **4**.

OUTPUT OPTIONS

OUTPUT OPTIONS

Output Options

This section allows you to program output options. Select from the following output numbers:

- 51 to 54
- 61 to 64
- F01 to F20 (To Activate Z-Wave Favorites)

COM FAIL OUT:	0
---------------	---

Communication Failure Output

This output/Favorite turns on when the panel fails to communicate with the receiver after three communication attempts. Enter 0 (zero) to disable this output.

To turn off the Communication Failure Output, disarm the panel or turn the output off using the User Menu Outputs On/Off function.

FIRE ALR OUT:	0
---------------	---

Fire Alarm Output

This output turns on any time a fire type zone is placed in alarm. The output turns off using the Sensor Reset option when no additional fire type zones are in alarm. Enter 0 (zero) to disable this output.

FIRE TRB OUT:	0
---------------	---

Fire Trouble Output

This output/Favorite turns on any time a fire type zone is placed in trouble or when a supervisory type zone is placed in alarm or trouble. The output turns off when all fire and supervisory type zones restore to normal. Enter 0 (zero) to disable.

AMBUSH OUT:	0
-------------	---

Ambush Output

This output/Favorite turns on any time an Ambush code is entered at a keypad.

The output turns off using the Sensor Reset option. Enter 0 (zero) to disable this output.

BEG EXIT OUT:	0
---------------	---

Begin Exit Output

This output/Favorite turns on any time an exit delay time starts. The output turns off when the system arms or when the arming has been stopped. Enter 0 (zero) to disable.

END EXIT OUT:	0
---------------	---

End Exit Output

This output/Favorite turns on any time an exit delay time ends. The output turns off when the system disarms. Enter 0 (zero) to disable.

READY OUT:	0
------------	---

Ready Output

This output/Favorite turns on whenever all disarmed zones are in a normal state. The output turns off when any disarmed zone is in a bad state. Enter 0 (zero) to disable.

ARMED HOME:	0
-------------	---

ARMED SLEEP:	0
--------------	---

ARMED AWAY:	0
-------------	---

ARMED ALL:	0
------------	---

ARMED PERIM:	0
--------------	---

ARMED OUT:	0
------------	---

Armed Output

The entered output turns on any time the system is armed. The keypad display is dependent on the system's arming type.

For Home/Away systems, only the HOME and AWAY screens display. If a Bedroom area is programmed into the panel, the SLEEP screen also displays. For All/Perimeter systems, the ALL and PERIM screens display. For Area systems, the OUT screen displays.

All options are defaulted to 0 (zero). The output turns off when the system completely disarms. Enter 0 (zero) to disable this output.

DISARMED OUT:	0
---------------	---

Disarmed Output

This output/Favorite turns on when all areas of the panel are disarmed. The output turns off when an area is armed.

BURGLARY OUT: 0

Burglary Output

This output/Favorite turns on any time a burglary zone goes into alarm. The output turns off when the area in which the alarm occurred disarms and no other burglary zones are in alarm. Enter 0 (zero) to disable this output.

ARM-ALARM OUT: 0

Arm-Alarm Output

Enter the output/Favorite to turn on steady when any area of the system is armed. If an alarm occurs causing the keypads to turn Red, this output pulses and continues to pulse for approximately three (3) minutes after the panel is disarmed. Enter 0 (zero) to disable.

HEAT SAVER
TEMPERATURE: 0

Heat Saver Temperature

Enter the desired temperature setting for all Z-Wave thermostats when the system is armed ALL or AWAY. When the system is disarmed the thermostats return to their previous settings. The range is 55-95 degrees. Enter 0 (zero) to disable.

COOL SAVER
TEMPERATURE: 0

Cool Saver Temperature

Enter the desired temperature setting for all Z-Wave thermostats when the system is armed ALL or AWAY. When the system is disarmed the thermostats return to their previous settings. The range is 55-95 degrees. Enter 0 (zero) to disable.

OUTPUT OPTIONS
CO ALRM OUT: XXX

Carbon Monoxide Alarm Output

This output turns on any time a Carbon Monoxide Zone (CO) is placed in alarm. The output is turned off using Sensor Reset option while no additional CO type zones are in alarm.

OUTPUT OPTIONS
ZN MNTR OUT: XXX

Zone Monitor Output

This output turns on momentarily when a zone monitor tone is activated on keypads. If zone monitoring is turned off, the zone monitor output will not trigger.

OUTPUT SETUP

OUTPUT SETUP

Output Setup

This section allows you to program and name wireless outputs into the panel.

OUTPUT NUMBER

Output Number

Enter an output number. Select from the following output numbers:

- 51 to 54 — Slow response time* wireless outputs (activate within 15 seconds)
- 61 to 64 — Fast response time* wireless outputs (activate within 1 second)

Addresses 51 to 54 and 61 to 64 are available for wireless outputs or wireless key fob zones and can only be assigned to one device.

* The response time of a wireless output is the time it takes for a wireless output to activate once the panel event occurs. You determine whether a wireless output is a slow or fast response based on the output number assigned. A slow response output number extends battery life, but response time may be up to 15 seconds. A fast response output number responds within 1 second, but reduces battery life. Refer to the specific wireless output installation guide to determine battery life.

OUTPUT NAME

Output Name

This section allows you to define a 16 character alphanumeric name for any wireless output.

An output that is not part of the system must be marked * UNUSED *. To mark an output unused, press any select area to display the default name, then press **CMD**. The programmer automatically programs the name as * UNUSED *.

SERIAL#: XXXXXXXX

Serial Number

Enter the eight-digit serial number found on the wireless device.

Already in Use displays when the serial number is already programmed for another output or zone. The programmed output or zone number displays.

SUPERVSN TIME: 240
0 3 60 **240**

Supervision Time

Press any top row key to select the supervision time required for the wireless output. Press **CMD** to accept the default time. Default is **240 minutes**.

Select the required number of minutes. The transmitter must check in at least once during this time or a missing condition is indicated for that zone. 1100INT Series transmitters automatically check in based on the supervision time selected for the wireless zone, no additional programming is needed. Zero (0) indicates an unsupervised transmitter.

The 3 minute supervision time is only available if using an 1135INT Wireless Siren.

When the panel is reset, a receiver is installed or powered down and powered up, or programming is complete, the supervision timer restarts for all wireless outputs.

TRIP WITH PANEL
BELL NO **YES**

Trip with Panel Bell Option

This option displays when the wireless device is an 1135INT wireless siren. Select YES to have the 1135INT wireless siren follow the panel bell output. Default is **YES**.

AREA INFORMATION

AREA INFORMATION

Area Information

This section allows you to assign functions to individual areas for XTLplusINT panels. All non-24-hour zones must be assigned to an active area. See section 33.1 in Zone Information.

Activate an area by assigning it a name. A name is given to each active area to assist the user during arming and disarming.

AREA NO: -

Area Number

Enter the number of the area to program. In an area system, select from areas 1 to 6. In an All/Perimeter system, select Interior or Perimeter. In a Home/Away system, select interior, Bedroom, or Perimeter.

* UNUSED *

Area Name

In an area system, enter up to 16 characters for the area name. Only those areas given names can have zones assigned to them. All others are marked *UNUSED*.

To add an area name to the system, press any select area and then enter up to 16 characters for the new name. Refer to the Entering Alpha Characters section. Press **CMD** to continue.

To mark an active area as unused, delete the old name by pressing any select area then press **CMD**. The panel automatically sets the name as *UNUSED*. If you have already Initialized the panel, all areas will be marked as *UNUSED*. See section 2.3.

AUTO ARM **NO** YES

Automatic Arming

Select YES to allow this area to arm automatically according to the opening and closing schedule.

If Closing Check is selected as YES, the automatic arming does not take place until the expiration of a 10-minute Closing Check delay. If the area has been disarmed outside a schedule, the Closing Check delay occurs one hour after the area is disarmed.

At arming, faulted zones are handled according to the option selected in Bad Zones. If a Closing report is sent, the user number is indicated as SCH on the SCS-1R Receiver. Select NO to disable automatic arming for this area. Default is **NO**.

BAD ZONES: **BYP**

Bad Zones

At the time of automatic arming, some zones in the area may not be in a normal condition. This option allows you to program the panel's response to these bad zones. This option is not displayed if AUTO ARM is NO.

BYP FORC REF

BYP - All bad zones are bypassed. A report of the bypass is sent to the receiver if Bypass Reports has been selected as YES. See the Bypass Reports section. The report indicates SCH as the user number.

FORC - All bad zones are force armed. Zones force armed in a bad condition are capable of restoring into the system and reporting alarms if tripped. A report of the force arm is sent if Bypass Reports is YES. See the Bypass Reports section. The report indicates the user number as SCH.

REF - The automatic arming is refused and no arming takes place. A No Closing report is sent to the receiver regardless of the Closing Check selection. For listed installations, set Bad Zones to REF.

AUTO DIS **NO** YES

Automatic Disarming

NO disables automatic disarming by schedule for this area. Select YES to allow this area to automatically disarm according to a schedule. If an Opening report is sent to the receiver, the user number is indicated as SCH.

ZONE INFORMATION

ZONE INFORMATION

Zone Information

This allows you to define the operation of each protection zone used in the system.

ZONE NO: -

Zone Number

Zone numbers on the XTLplusINT panel default to the following settings. The settings can be changed as described in the following sections. Zones 51-54 can be wireless zones, key fobs or slow outputs. Zones 61-64 can be wireless zones, key fobs, or fast outputs.

KEY FOB **NO** YES

Key Fob

Select YES to program an 1144INT Series Key Fob for zones 51-54 or 61-64. When YES is selected, programming continues at the 1144INT Series Key Fobs Section. Default is **NO**.

* UNUSED *

Zone Name

Press any select area to display the default zone name. To change the default zone name, press any select area to clear name. Enter up to 16 characters for the new zone name. This name is displayed at the keypads when the zone is bad or viewed in Display Events. The zone name is also sent to the receiver as part of a zone event report. A zone that is not part of the system must be marked *UNUSED*. To mark a zone unused, delete the old name by pressing any select area, then press **CMD**. The programmer automatically programs the name as * UNUSED *. If you selected ZONES? NO YES to clear the panel's memory during Initialization, the zones will already be marked * UNUSED *. See the Initialization section.

ZONE TYPE: BLANK

Zone Type

The Zone Type defines the panel's response to the zone being opened or shorted. Each zone has a default type. When you assign a Zone Type to a zone, responses are made automatically for the zone. There are 13 Zone Types to choose from including Blank. The functional details of each response are described in Zone Type Defaults in the Appendix.

-- NT DY EX

To change the Zone Type, press any select area. The display lists the four Zone Types shown below. When the Zone Type you want to select displays, press the select area below the name.

FI PN EM SV

Blank, Night, Day, or Exit. Press **CMD** to display additional zone types.

A1 A2 FV AR

Fire, Panic, Emergency, or Supervisory. Press **CMD** to display additional zone types.

CO IN DB

Auxiliary 1, Auxiliary 2, Fire Verify, Arming, and CO for use with Carbon Monoxide detectors, Instant, and Doorbell. Press the Back Arrow key to display the previous zone types.

If you select Blank, Night, Day, Exit, Auxiliary 1, Auxiliary 2, or Instant as the Zone Type, the zone must be assigned to an area. If you select Fire (FI), Panic (PN), Emergency (EM), Supervisory (SV), or Carbon Monoxide (CO) as the Zone Type, these are 24-hour zones that are always armed and no area assignment is needed. Press **CMD** to continue.

ARM AREA: **PERIM**

Arming Zone Assignment

For Area systems, this option specifies the areas to be armed by the Arming Type zone. Press the appropriate number keys on the keypad to assign areas 1 to 6. When disarmed, all programmed areas are disarmed.

For All/Perimeter systems, choose PERIM or ALL. For Home/Away systems, choose HOME, SLEEP, or AWAY.

PERIM ALL

Perimeter/All - Specify whether the arming zone arms just the Perimeter (PERIM) or the Perimeter and Interior areas (ALL) for All/Perimeter systems. When disarming, all areas are disarmed.

HOME SLEEP AWAY

HOME/SLEEP/AWAY - Specify whether the arming zone arms the Perimeter (HOME), the Perimeter and Interior (SLEEP), or all three areas (AWAY). When disarming, all areas are disarmed.

Arming zone operation

If a bad (faulted) Priority zone is in the area being armed by an Arming zone, the arming is stopped. If there are no Priority zones, or they are all in a normal condition, the following applies:

When a non-Priority zone is bad when an area is armed with a keyswitch on an Arming zone, the arming is delayed for five seconds. If, during the five-second delay, the keyswitch is turned to disarm, the arming stops. If the keyswitch is held in the arming position for the full five seconds, the bad zone is force armed and the area is armed.

The ability to stop the arming does not apply if a wireless arming device is being used. Refer to the Appendix.

This operation does not affect arming from a zone or Wi-Fi.

AREA NO: -

Area Assignment

To change the default area, press any select area.

For Area systems, enter the area number from 1 to 6 where this zone is being assigned.

For All/Perimeter systems, choose INTERIOR or PERIMETER.

For Home/Away systems, choose INTERIOR, PERIMETER, or BEDROOMS.

- INT (Interior) - Assigns the zone to area 2, Interior.
- BDRM (Bedroom)- Assigns the zone to area 3, Bedrooms. This option is only displayed in Home/Away systems.
- PERIM (Perimeter) - Assigns the zone to area 1, Perimeter.

INT PERIM

STYLE:

Style

This option specifies the style for the arming/disarming operation. The default for STYLE: is TGL (toggle). Pressing any select area displays the STYLE options. To view more style options press **CMD**. The following is a description of the action for each option condition.

TGL ARM DIS STEP

TGL (Toggle) - When the zone changes from normal to shorted, the programmed areas toggle between the armed or disarmed condition. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported. When opened from a shorted (armed) state, an alarm is reported and the zone is disabled until you disarm the area(s) from a keypad.

ARM - When the zone is shorted, the programmed areas are armed. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported. When opened from a shorted (armed) state, an alarm is reported.

DIS (Disarm) - When programmed as an Area system, a short will disarm the programmed areas. When programmed as a ALL/PERIM or HOME/AWAY system, a short will disarm ALL areas. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported.

STEP - When programmed as an area system, a short will arm the areas and beep the keypads once. When programmed as ALL/PERIM or HOME/AWAY, on the first short HOME will arm and beep the keypad once. On the second short, SLEEP will arm and beep the keypads twice. On the third short, AWAY will arm and beep the keypad three times. A normal condition will cause no action. An open condition will disarm the programmed areas and beep the keypads for one second.

This arming style is designed for wireless arming pendants. When using a arming/disarming keyswitch, locate the keyswitch within the protected area.

MNT

MNT (Maintain) - When the zone is shorted, the programmed areas are armed. When restored to normal, the programmed areas are disarmed and any alarm bells are silenced. When the zone is opened from a normal (disarmed) state, a trouble is reported. If opened from a shorted (armed) state, an alarm is reported and the zone is disabled until you disarm the area(s) from a keypad.

DMP Wireless

For wireless key fob programming see the 1144INT Series Key Fob section.

All wireless programming is stored in the XTLplusINT panel. Each time the panel powers up, when the programmer STOP routine is selected or the panel is reset, the wireless receiver memory refresh could take up to 45 seconds to complete depending on the number of wireless zones programmed and the Red LED remains on during this time. Normal wireless receiver operation is inhibited during the memory refresh period.

TRANSMITTER
SERIAL#: XXXXXXXX

Serial Number Entry

Enter the eight digit serial number, including leading zeros, found on the wireless device.

TRANSMITTER
CONTACT: XXXXXXXX

Contact

This option displays if the serial number entered is for an 1103INT Universal Transmitter. Press any top row key to select the contact.

TRANSMTR CONTACT
INT EXT

This option displays when programming an 1103INT Universal Transmitter. Select INT to use the internal reed switch contacts. Select EXT to connect an external device to the 1103INT terminal block. Default is **INTERNAL**.

By allowing both of the transmitter contacts (INT and EXT) to be used at the same time, two zones may be programmed from one transmitter. When using multiple contacts, you must use consecutive zone numbers.

TRANSMITTER
SUPRVSN TIME: 240

Supervision Time

Press any top row key to select the supervision time required for the wireless zone. Press CMD to accept the default time.

SELECT MINUTES:
0 3 60 **240**

Select the required number of minutes. The transmitter must check in at least once during this time or a missing condition is indicated for that zone. 1100INT Series transmitters automatically check in based on the supervision time selected for the wireless zone, no additional programming is needed. If two zones share the same transmitter, the last programmed supervision time is stored as the supervision time for both zones. Zero (0) indicates an unsupervised transmitter.

When the panel is reset the supervision timer restarts for all wireless zones.

LED OPERATION
NO **YES**

LED Operation

This only displays when programming a panic or pendant transmitter. Select YES to turn a panic or pendant LED on during normal operation. Select NO to turn the LED off during normal operation. The LED always operates on all transmitters when the transmitter case is open and the tamper is faulted. Default is **YES**.

DISARM DISABLE
NO **YES**

Disarm/Disable

Select YES to disable the Zone Tripped message on 1103INT Universal Transmitters or 1122INT PIRs during the disarmed period. When disarmed, the transmitter or PIR only sends Supervision, Tamper, and Low Battery messages to extend transmitter battery life. For transmitters, a Zone Tripped message is sent if the zone remains tripped for 20 seconds. Leaving the panel defaulted to NO causes the panel to always send Zone Tripped messages in addition to Supervision, Tamper, and Low Battery.

WIRELESS PIR
PULSE COUNT: 4

Wireless PIR Pulse Count

This option displays for 1122INT Wireless PIRs. Select the number of infrared pulse counts (2 or 4) the PIR will use before sending a short message. The first infrared pulse starts a timer and count. If no additional infrared pulses occur in 25 seconds, the timer and count are reset. Default is **4**.

WIRELESS PIR
SENSITIVITY: LOW

Wireless PIR Sensitivity

This option displays for 1122INT Wireless PIRs. Select the sensitivity setting for the PIR. Selecting LOW sets the PIR to operate at 75% sensitivity for installations in harsh environments. Selecting HIGH sets the PIR to maximum sensitivity. Default is **LOW**.

WIRELESS PIR PET
IMMUNITY: NO YES

Pet Immunity

This option displays for the 1122INT Wireless PIR Motion Detector. Select whether or not to enable pet immunity. Selecting YES allows pet immunity for animals up to 55 pounds.

NEXT ZONE NO YES

Next Zone

Select YES to return to the ZONE NO: - option to program a new zone. Select NO to display the Alarm Action option.

1144INT Series Key Fobs

Only zones 51-54 or 61-64 can be programmed as 1144INT Series Key Fob zones. Refer to the 1100INT Series Key Fob Programming Sheet (LT-0706INT) and the 1144INT Series Key Fob Install Guide (LT-1449INT) as needed.

To operate arming and disarming properly, the Key Fob should be assigned to a User Number with appropriate area assignments, however, the User Number does not have to exist at the time the Key Fob is programmed. The User Number can be added at the User Menu later by the User.

The following programming continues from when Key Fob YES is selected.

KEY FOB USER
NUMBER: XXXX

Key Fob User Number

Enter the User Number used to identify the key fob user and their arming and disarming authority. Default is **blank**. User number range is 1 to 99

USER XXXX
NOT IN USE

Displays when the User Number entered does not exist in User Code programming. The key fob can be added, but the user must eventually be added to cause the key fob to operate.

TRANSMITTER
SERIAL#: XXXXXXXX

Key Fob Serial Number

Enter the eight-digit serial number found on the wireless device.
When a serial number is already programmed, the zone number displays.

TRANSMITTER
SUPRVSN TIME: 0

Key Fob Supervision Time

Press any top row key to select the supervision time required for the key fob zone. Press **CMD** to accept the default time. Default is **0**.

SELECT MINUTES:
0 60 240

Press the select area under the required number of minutes. The key fob must check in at least once during this time or a missing condition is indicated for that zone. 1144INT Series key fobs automatically checkin based on the supervision time selected for the wireless zone, no additional programming is needed. Zero (0) indicates an unsupervised transmitter. When the panel is reset the supervision timer restarts for all wireless zones.

NO. OF KEY FOB
BUTTONS: X

Number of Key Fob Buttons

Enter the number of buttons (1, 2, or 4) on the key fob being programmed. Default is **four buttons**.

If the key fob is a one-button model, programming continues at the Button Action section. Default button assignment for one-button key fobs is a Panic Alarm (PN) with no output assigned.

BUTTON:
TOP BTM LFT RGT

Key Fob Button Selection (Four Buttons)

This option only displays if the key fob being programmed is a four-button model. Press the select key under the key fob button to program. The following list identifies the default button assignments:

TOP	Arming with areas 1, 2, and 3 assigned
BTM	Disarming with areas 1, 2, and 3 assigned
LFT	Panic Alarm (PN) with no output assigned
RGT	Arming with Area 1 assigned

BUTTON:
TOP BTM

Key Fob Button Selection (Two Buttons)

This option only displays if the key fob being programmed is a two-button model. Press the select area under the key fob button to program. The following list identifies the default button assignments:

TOP Arming with areas 1, 2, and 3 assigned
BTM Disarming with areas 1, 2, and 3 assigned

BUTTON ACTION
YYY: XXXXXXXX

Button Action

This option specifies the Button Action for an individual key fob button. The default action for the button selected is displayed. Press any select area to display the Button Action options. To view more options press **CMD**.

BUTTON ACTION
ARM DIS TGL STA

ARM (Arm) - Arms selected areas and force arms bad zones.

DIS (Disarm) - Disarms selected areas.

TGL (Toggle Arm) - Toggles arm/disarm for selected areas and force arms bad zones when arming.

STA (Status) - Causes the key fob LED to indicate the arm/disarm status of the system.

BUTTON ACTION
PN PN2 EM EM2

PN (Panic) - Triggers a Panic zone type alarm with no restoral.

PN2 (Panic 2) - Triggers a Panic zone type alarm with no restoral when pressed simultaneously with any other Panic 2 button. No action occurs when pressed alone.

EM (Emerg) - Triggers an Emergency zone type alarm with no restoral.

EM2 (Emerg 2) - Triggers an Emergency zone type alarm with no restoral when pressed simultaneously with any other Emergency 2 button. No action occurs when pressed alone.

BUTTON ACTION
OUT RST UN

OUT (Output) - Causes an output to turn on steady, pulse, momentary, toggle or off.

RST (Sensor Reset) - Causes the panel to perform a standard Sensor Reset.

UN (Unused) - The button is not used and performs no action.

BUTTON
PRESS TIME: XXXXX

Button Press Time

This option specifies the amount of time (SHORT or LONG) the user must press the button before the key fob sends a message to the wireless receiver. The default press time displays. Press any select area to set the Button Press Time for Arm, Disarm, Toggle, Status, Output, and Sensor Reset.

The Button Press Time is not programmable on Panic (PN or PN2), Emergency (EM or EM2) or Unused (UN) zones. For those zones the button press time is always two (2) seconds.

PRESS TIME:
SHORT LONG

SHORT - Press the button for one-half (1/2) second to send the message to the wireless receiver.

LONG - Press the button for two (2) seconds to send the message to the wireless receiver.

ARM/DIS AREAS

Arm/Disarm Area Selection

For Area systems, enter the areas 1 to 6, to be armed/disarmed by the Key Fob button being programmed.

This specifies the area to be armed by the Key Fob button being programmed.

For All/Perimeter systems, choose PERIM or ALL.

For Home/Sleep/Away or Home/Away systems, choose HOME, SLEEP, or AWAY.

After selecting the areas, for one-button key fobs the Zone No.: option displays. For two-button or four-button key fobs, the Key Fob Button Selection option displays to program additional buttons.

OUTPUT NO: XXX

Output Number

You can specify a wireless output to operate when OUT (Output), PN (Panic), PN2 (Panic 2), EM (Emergency), or EM2 (Emergency 2) is selected for a key fob Button Action. Valid range is 51-54, 61-64, and F1-F20. For an output turned on by a PN, PN2, EM, or EM2 button action, the output turns off when any area is disarmed.

To enter an output number, press any select area followed by the output number. Press **CMD**.

OUTPUT ACTION:
yyy: XXXXXXXXX

Output Action

This option allows you to define the output action (STD, PLS, MOM, TGL, OFF) for the selected output number. The default is **STEADY**.

OUTPUT ACTION?
STD PLS MOM TGL

STD (Steady) - The output is turned on and remains on.

PLS (Pulse) - The output alternates one second on and one second off.

MOM (Momentary) - The output is turned on only once for one second.

TGL (Toggle) - The output alternates between the on state and off state. Each button press toggles the output state.

OUTPUT ACTION?
OFF

OFF (Off) - The output is turned off. If programmed, the output was turned on by some other means such as another button press, a zone action, or a schedule.

When the output is assigned to PN/PN2 or EM/EM2 button action and is turned on, the output turns off when any area is disarmed.

When the output action is steady, pulse or toggle and the output is turned on, the output remains on until:

- the output cutoff time expires
- the output is reset from the keypad menu
- toggled off

ALARM ACTION . . .

Alarm Action

The Alarm Action section allows you to change or confirm the default alarm characteristics of a zone type.

If you selected the non-24-hour zone type Blank, Night, Day, Exit, Auxiliary 1, Auxiliary 2, or Instant, the Alarm Action programming begins with Disarmed Open.

If you selected the 24-hour zone type Fire, Panic, Emergency, Supervisory, or CO, the Alarm Action programming begins with Armed Open.

DISARMED OPEN

Disarmed Open

Defines the action taken by the panel when the zone is opened while the area is disarmed. There are three actions to define:

- Message to Transmit
- Output Number
- Output Action

You must also make these selections for the Disarmed Short, Armed Open, and Armed Short zone conditions. Press **CMD** to continue.

MSG: TROUBLE
A T L -

Message To Transmit

You can send two report types to the receiver: Alarm and Trouble. These are represented by the characters A and T. Press any select area to display the zone report options.

ALARM - Selecting A allows an alarm report to be sent to the receiver and the wireless siren output to activate according to zone type. See the Bell Action section. The zone name appears in the panel's alarmed zones status lists.

TROUBLE - Selecting T allows a trouble report to be sent to the receiver and the zone name to appear in the panel's alarmed zones status lists.

LOCAL - When you select L, an alarm report is NOT sent to the receiver. The bell output still activates according to zone type and the zone name appears in the panel's alarmed zones status lists.

- (dash) - When you select -, reports are NOT sent to the receiver. The wireless siren output does not activate and there is no display in the panel's alarmed zones status list. Only the programmed Output Number activates.

OUTPUT NO: 0

Output Number

You can specify any of the outputs on the XTLplusINT to be activated by a zone condition. The output can be activated regardless of the report to transmit or whether or not the zone is programmed as local. An output activated by a non-24-hour armed zone is turned off when the zone's area is disarmed by a user.

To enter an Output Number, press any select area followed by the output number 51-54, 61-64, or F1-F20. Press **CMD**.

OUTPUT: NONE

Output Action

Entering an Output Number displays this option that allows you to assign an output action. A description of the available output actions is given below:

STD PLS MOM FOLW

STEADY - The output is turned on and remains on until the area is disarmed, an output cutoff time expires, or the output is reset from the keypad User Menu.

PULSE - The output alternates one second on and one second off until the area is disarmed, an output cutoff time expires, or the output is reset from the keypad User Menu.

MOMENTARY - The output is turned on only once for one second.

FOLLOW - The output is turned on and remains on while the zone is in an off normal, or bad condition. When the zone restores, the output is turned off.

After you have selected the Message To Transmit, the display prompts you for the same three selections for Disarmed Short, Armed Open, and Armed Short conditions. If the zone is a 24-hour type, only the Armed Open and Armed Short conditions are displayed. When you have programmed all of the zone conditions, the Swinger Bypass selection is then displayed.

SWGR BYP NO YES

Swinger Bypass

Selecting YES allows the zone to be swinger bypassed by the panel according to the programming in Swinger Bypass Trips and Reset Swinger Bypass. The Bypassed zone displays in the keypad Status List. Selecting NO disables swinger bypassing for this zone.

How it works

If within one hour, a zone trips the total number of times as specified in Swinger Bypass Trips, the panel bypasses it until the following conditions occur; the area in which the zone is assigned is disarmed, the zone is manually reset through the Bypass Zones keypad User Menu function, the zone remains normal for one hour and the Reset Swinger Bypass is YES.

If the zone trips fewer than the specified times within one hour of the first trip, the bypass trip counter returns to 0 (zero) and the process must be repeated.

A report of the swinger bypass is sent to the receiver if Bypass Reports is YES.

PREWARN KEYPADS:

Prewarn Address

Option is only shown for an Exit zone.

At the start of the entry delay, all keypad addresses display ENTER CODE:-. If you want the prewarn to sound at all addresses, leave the default as shown.

To delete an address, press the matching number on the keypad. To disable prewarning at all keypads, press a top row key to clear the addresses shown. Press **CMD** when the address selection is complete.

The prewarn tone stops at the keypad when the first digit of a user code is entered. If, within five seconds, a valid user code is not entered or an invalid user code is entered, the prewarn tone begins sounding again. Fifteen seconds must elapse before entering a digit silences the prewarn tone again.

CHIME: DOORBELL

Chime

Option is only shown for Night, Exit, and Instant zones. Select either NONE, DB (doorbell), DESC (descend), or ASC (ascend) to assign that tone to a zone. Default is **DOORBELL** for Exit zones and NONE for Night zones.

ENTRY DELAY: 1

Entry Delay

Option is only shown for an Exit zone. Select the entry delay timer for this zone. Entry delay timers 1 and 2 are programmed in Entry Delay in the System Options menu.

CRS ZONE NO YES

Cross Zone

Select **YES** to enable cross-zoning for this zone. Cross-zoning requires this zone to trip twice, or this zone and another cross-zoned zone to trip, within a programmed time before an alarm report is sent to the receiver.

To operate correctly, all cross-zone zones need to be programmed as the same zone type.

When a cross-zoned zone trips, the Output action assigned to the zone activates. See the Bell Action section. The cross-zone time specified in System Options begins to count down. See the Cross-Zone Time section. If another cross-zoned zone in the system faults, or if the first zone restores and faults again before the cross-zone time expires, the bell turns on and the panel sends an alarm report.

If no other cross-zoned zone in the system trips before the cross-zone time expires, the panel sends only a fault report from the first zone to the receiver.

If CRS ZONE is YES, a valid CRS ZN TIME must be programmed in System Options for this feature to be enabled.

Cross-zoning is not compatible and cannot be enabled for Fire Verify zone types.

PRIORITY NO YES

Priority

Selecting **YES** allows you to provide additional protection for a zone by requiring it to be in a normal condition before its assigned area can be armed. A priority zone cannot be bypassed.

A Priority zone not in a normal condition cannot be armed. If a user attempts to arm the area, the keypad displays the bad zone name followed by **PRIORITY ZONE** and the arming is stopped.

TRAFFIC COUNT
NO YES

Traffic Count

This option is displayed for NT or EX type zones. Select **YES** to provide reporting to the receiver of the number of zone trips while in a disarmed state. The number of trips for each zone set as traffic count are added together and included with the area closing message and reported to the central station automation system. Default is **NO**.

ZONE AUDIT DAYS:

Zone Audit Days

Enter the number of days (0 to 99) allowed to elapse without the zone being tripped before a fault message is sent. The message is sent to the receiver(s) programmed to receive Supervisory/Trouble Reports at 10:00 am following the expiration of the timer. Each time the zone is tripped, the Zone Audit Days timer restarts and begins to countdown the number of days programmed. After the countdown expires, a fault message is sent and the Zone Audit Days timer restarts and begins to countdown the number of days programmed. Available for all zone types except fire and fire verify. Enter 0 (zero) to disable this function. Default is **0 (zero)**.

RECEIVER ROUTING

Receiver Routing

This option displays if Zone Type is set for Auxiliary 1 or Auxiliary 2.

Press any top row key to select the Receiver Routing for the selected zone.

- Select NORM to send Alarm and Supv/Trbl messages from this zone to receiver 1 or receiver 2 as programmed within the receiver.
- Select 1 to send Alarm and Supv/Trbl messages from this zone to receiver 1 only, regardless of the programming for that receiver.
- Select 2 to send Alarm and Supv/Trbl messages from this zone to receiver 2 only, regardless of the programming for that receiver.
- Select BOTH to send Alarm and Supv/Trbl messages from this zone to both receivers, regardless of the programming for either receiver.

ZONE NO: -

Zone Number

Enter the zone number you want to program next. Return to section 32.1 and follow the descriptions of each programming option. If all zones are programmed, press the ARROW key at the **ZONE NO: -** display to continue.

STOP



STOP

Stop

At the **STOP** option, pressing any select area allows you to exit the programmer function of the XTLplusINT panel. When selected, the panel performs an internal reset and exits the programmer. The Stop function causes the following conditions to occur:

- All 1100INT Series DMP Wireless transmitters are reset to NORMAL
- The panel's Status List is CLEARED

During the Stop function, all keypad displays are momentarily disabled for two seconds. Afterwards, the programming function is terminated and the keypads return to the Status List display.

SET LOCKOUT CODE

SET LOCKOUT CODE

Set Lockout Code

Pressing **CMD** at the Stop option displays **SET LOCKOUT CODE**. This feature allows you to program a special code that will then be required to gain access to the panel's internal Programmer through the keypad.

Changing the Lockout Code

You can change this code at any time to any combination of numbers from 1 to 5 digits long (1 to 65535). **Do not use leading zeros for the lockout code.**

1. Press any select area. The display changes to **ENTER CODE: -**.
2. Enter a 1- to 5-digit code (do not enter a number higher than 65535). Press **CMD**.
3. Enter the new Lockout Code again. Press **CMD**. The keypad display changes to **CODE CHANGED**.

Once you have changed the code, it is important that you write it down and store it in a safe place. Lost lockout codes require the panel to be sent back into DMP for repair. You may cancel a Lockout Code by entering 00000 at the Set Lockout Code command option.

Lockout Code restriction

Do not set a Lockout Code higher than 65535.

APPENDIX

This section provides additional zone and system information.

Status List

The Status List is the current status of the system or records of recent system events that display on alphanumeric keypads. For example, in Home/Away systems you may see the display **SYSTEM READY**.

If an event were to occur on the system, such as an AC failure, the keypad would also display the **AC POWER -TRBL** message. This is a system event that is placed into the Status List to alert the user to a problem with the system.

Some Status List items remain in the display until manually cleared and some are cleared automatically when the condition returns to normal. Below is a list of status and event displays the keypad can show in the Status List:

- Fire, Carbon Monoxide, and Supervisory zone alarms: Yes, by Sensor Reset.
- Fire, Carbon Monoxide, and Supervisory zone troubles: No, clears when zone restores
- Burglary zone alarms: No, clears at disarming.
- All other zone alarms: No, clears when zone restores
- Zone monitor displays: No, clears after approximately 8 minutes
- Day zone alerts: No, clears after approximately 8 minutes
- System monitor trouble: No, clears when condition restores (AC and battery trouble)
- Armed status display: No (System On)
- Disarmed status displays: No (System Ready, System Not Ready)
- Remote keypad messages: No (Sent to the keypad by your office or central station)

Each item in the list is displayed for four seconds. When there are multiple items in the list, you can use **CMD** or Back Arrow key to scroll forward or back through the items.

Transmission Delay

You can set Abort Reports to **YES** if Opening and Closing reports are not being sent.

If the area where the alarm occurred is disarmed during the Transmit Delay time, only an Abort Report (S45) message is sent to the receiver. If the area where the alarm occurred is disarmed after the alarm message is sent to the receiver but before the Bell Cutoff time expires, even if the alarm was silenced, an Alarm Cancelled (S49) message is sent. The Alarm Cancelled report cannot be disabled.

False Alarm Reduction

System Recently Armed report

The System Recently Armed report (S78) is sent when a burglary zone goes into alarm within two minutes of the system being armed.

Diagnostics Function

The XTLplusINT panel contains a Diagnostics function that allows you to test the integrity of the network communication, integrity of the cellular communication and cellular signal communication of the 265LTE-INT Series to the nearest tower for the cellular carrier. The Diagnostics function also displays the panel settings. To use Diagnostics, reset the panel, enter the Diagnostics code 2313 (DIAG), and press **CMD**.

Panel Settings

Pressing a select area displays the MAC Address, Serial Number, Frequency Offset, Panel Model, and Firmware Version.

MAC Address

Short for Media Access Control address. This hardware address uniquely identifies each network node. Not to be confused with an IP address, which is assignable. In the Diagnostics function, the MAC address is the panel on-board network hardware address. Press any select area to display the panel MAC address. Press **CMD** to view the next option.

Serial Number

This number is the network communicator serial number. Reference this number for communicator date-of-manufacture, hardware version, etc. Press any select area to display the Serial Number. Press **CMD** to view the next option.

Frequency Offset

This menu option displays the frequency offset of the panel.

Panel Model

This menu option displays the panel model number.

Firmware Version

This menu option displays the Firmware Version number of the panel and date it was released.

Communication Status

This option tests the individual components of cellular or wireless network communication. The displayed results are shown on the next page.

Cellular Results:

Successful Display	Failure Display
MODEM OPERATING	NO MODEM FOUND
IDENTIFIED	NO SIM CARD
TOWER DETECTED	NO TOWER
REGISTERED	NOT REGISTERED

SIGNAL: 
CONTINUE? NO YES

This displays the cellular signal strength of the nearest tower for the SIM card carrier. The s represent the signal strength 0-7. Select YES to continue through the remaining component tests. Select NO to stop testing and return to the COMM STATUS option.

Successful Display	Failure Display
CONNECTED	CONNECT ERROR
	NOT ACTIVATED
COMM PATH GOOD	NO ACK RECEIVED

Wireless Results:

Successful Display	Failure Display
LINK OK	LINK ERROR
DHCP OK	DHCP ERROR
GATEWAY FOUND	NO GATEWAY
DEST FOUND	NO DESTINATION
COMM PATH GOOD	NOT CONNECTED NO ACK RECEIVED

Cellular Signal Strength (CELL SIGNAL)

-XX dBm
SIGNAL: 

This option provides a way to test the cellular signal strength of the nearest tower for the cellular carrier. Press any select area to display cell signal strength. The X's represent the numerical value of the cell signal strength in -dBm. The s represent the signal strength 0-7.

265INT Series Activation

Cellular Service is required before you can use the 265LTE-INT Series single transmission. The 265LTE-INT comes ready for activation with SecureCom™ Wireless, LLC. To begin cellular activation, verify the 265LTE-INT SIM number has been added to the panel by using the Dealer Admin Site (dealer.securecomwireless.com) or by calling DMP Customer Service (1-866-266-2826). Refer to the 265LTE-INT Series Cellular Communicator Installation Guide (LT-1703INT) for complete activation instructions.

Wi-Fi Signal Strength (Wi-Fi SIGNAL)



This option tests the signal strength of the selected SSID. Press any select area to display Wi-Fi signal strength. The **|**'s represent the signal strength 0-7.

Wi-Fi Signal Strength	
Number of Bars	Indication
7	Good Signal (Excellent for consistent operation)
6	
5	
4	Average Signal (Expect consistent operation)
3	
2	
1	Weak Signal (Will not operate reliably. Relocate Wi-Fi equipment or add a Wi-Fi extender for better reception.)
0	No Signal

Z-Wave Test Option




This feature allows the installer to test XTLplusINT communication with Z-Wave devices. A successful test indicates a response from a device. Press any select area to view the Z-Wave Device List.



Press **CMD** to advance through each Z-Wave device and press any select area to begin the test on the device displayed.



The name of the device displays above the device number. The current number of successful communications followed by the total number of attempts displays to the right of the device number. The test stops after 99 attempts.

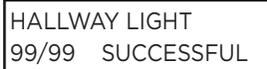

Press **CMD** to view the final number of successful communications.

Initializing Z-Wave Defaults

Only use this function when the Z-Wave network primary controller is missing or otherwise inoperable.

1. Rest the panel and enter **2313** (DIAG) at the keypad to access the Diagnostic menu.
2. Press **CMD** until **INIT Z-WAVE** displays and press a top row select key or area.
3. Select **YES** when **Z-WAVE? NO YES** displays. **INIT SUCCESSFUL** displays when all Z-Wave programming has been initialized

Exiting the Diagnostics Menu

Press **CMD** until **STOP** displays. Press any select area. The keypad returns to the Status List display.

Using the Walk Test

The XTLplusINT panel provides a walk test feature that allows a single technician to test all the protection devices connected to zones on the system. Conduct the Walk Test within 30 minutes of resetting the panel. The Walk Test automatically ends if no zones are tripped for 20 minutes. **TEST IN PROGRESS** displays at all keypads. When five minutes remain, **TEST END WARNING** displays. If any areas are armed the Walk Test does not start and **SYSTEM ARMED** displays.

WALK TEST

Walk Test

To conduct the Walk Test, reset the control panel by pressing the RESET button then wait one minute. From the keypad, enter the code 8144. The keypad displays **WALK TEST**.

STD (Standard Walk Test) - Select STD to Walk Test zones. All programmed zones are included in the test.

WLS (Wireless Test) - Select **WLS** to automatically test 1100INT Series wireless transmitter communications. Includes all wireless devices except key fobs and transmitters programmed for a supervision time of 0 (zero).

PIR (Wireless PIR Walk Test) - The PIR Walk Test allows the installer to verify the 1122INT PIR and 1128INT operation. When enabled, the LED flashes each time motion is detected for up to 30 minutes. This is a local test only and no messages are sent to the Central Station.

Trip Counter For DMP Wireless Test (WLS)

Displays the number of wireless zones that automatically communicate a supervisory check-in message. The test will run for a total of 5 minutes. During the 5 minutes the transmitters are being tested multiple times. In order for a transmitter to pass it must have checked in 3 or more times. At the end of the 5 minutes the results will be displayed. A timer will be displayed at the keypad to indicate that the test is in progress. The results will display which transmitters have failed the test.

The number of zones that check in. (XXX in the example).

- The total number of wireless zones programmed for supervision that should check in. (ZZ in the example).

END - Select END to stop the Wireless Test. When the test ends or a 20-minute timeout expires, normal wireless zone processing returns. If all transmitters check-in, both numbers will match within three (3) minutes. If a transmitter has multiple zones (1101, 1114, etc.), all zones will be included in the counts. Failed wireless zones then display on the keypad.

TRIPS: XXX END

TEST END WARNING

Test End Warning

When no zones have been tripped and five minutes remain on the 20 minute Walk Test timer, the keypad displays **TEST END WARNING** and the keypad tones. If no additional test zone trips occur, the test ends and a final Sensor Reset automatically occurs. The System Test End message is sent to the receiver along with Verify and Fail messages for each zone under WALK test. Faulted zones then display on the keypad.

ZONE: 10 -FAIL
SOUTH LOBBY

Failed Zones Display

Each zone that did not trip at least once during the Walk Test displays on the keypad that initiated the test. Any Fire (FI), Panic (PN), Supervisory (SV), or Carbon Monoxide (CO) 24-hour zone that is faulted at the end of the Walk Test displays a trouble condition for that zone regardless of the message programmed for the open or short condition of the zone and a zone trouble is sent to the receiver. Press **CMD** to display the next failed zone.

For the Wireless Test, failed wireless zones display only on the keypad. Zone Verify/Fail reports are not sent to the central station receiver for the wireless checkin test.

Keypad Speaker Operation

When using LCD Keypads, the panel provides distinct speaker tones from the keypad for Fire, Burglary, Zone Monitor, and Prewarn events. The list below details the conditions under which the speaker is turned on and off for each event.

Fire	On - Fire zone alarm and Bell Output or Fire Bell Output is ON. Off - Alarm Silence.
Burglary	On - Burglary zone alarm and Bell Output or Burglary Bell Output is ON. Off - Alarm Silence.
Zone Monitor	On - One time only when a monitored zone is tripped. Off - After one tone.
CO	On - CO zone alarm and Bell Output are ON. Off - Using Sensor Reset option while no additional CO type zones are in alarm.
Prewarn	On - During Entry Delay. Off - When Entry Delay expires.

Cross Zoning

Caution must be taken when cross zoning devices to ensure that the Cross Zone Time is long enough to allow an intruder to trip both devices before it expires. A Cross Zone Time that is too short may allow an intruder to trip the devices and allow only a zone fault report be sent to the central station.

When a Cross Zoned zone trips, a FAULT report is sent to the SCS-IR Receiver. When two Cross Zoned zones trip within the Cross Zone Time, both zones send ALARM signals to the receiver. For example, if zones 1 and 2 are Cross Zoned zones, and only zone 1 trips, a FAULT report is sent to the receiver for zone 1. If zone 1 trips and zone 2 trips within the Cross Zone Time, an ALARM report is sent to the receiver for zone 1 and zone 2.

To operate correctly, all cross-zone zones need to be programmed as the same zone type.

Zone Type Descriptions

This section describes applications for the default zone types in Zone Information programming.

NT (Night Zone) - Controlled instant zone used for perimeter doors and windows and interior devices such as PIRs.

DY (Day zone) - Used for emergency doors or fire doors to sound the keypad buzzer and display the zone name when the zone is faulted. Day zones also will send alarm reports to the receiver during the system's armed periods.

EX (Exit zone) - Initiates the entry delay timer when its assigned area is fully armed. Also, can initiate an exit delay timer to allow a user to exit an area after the arming process has started.

PN (Panic zone) - Used for connecting to mechanical devices that allow a user to signal an emergency alarm. Panic zones can provide either a silent or audible alarm with or without reporting to a central station receiver.

EM (Emergency zone) - These are used for reporting medical or other non-panic emergencies to the central station.

SV (Supervisory zone) - Used to provide 24-hour zone supervision. Typical applications are high water, and low and high temperature gauges.

FI (Fire zone) - Used for any type of powered or mechanical fire detection device. Typical applications are for smoke detectors, sprinkler flow switches, manual pull stations, and beam detectors.

FV (Fire Verify zone) - Used primarily for smoke detector circuits to verify the existence of an actual fire condition. When a Fire Verify zone initiates an alarm, the panel performs a Fire Reset. If any Fire zone initiates an alarm within 120 seconds after the reset, an alarm is indicated. If an alarm is initiated after 120 seconds, the cycle is repeated.

A1 and **A2** (Auxiliary 1 and Auxiliary 2) - These zones are similar to a Night zone and are typically used to protect restricted areas within a protected premises. Auxiliary 2 zones do not appear in the Status List.

AR (Arming zone) - Allows you to connect a keyswitch to a zone and use it to arm and disarm the system.

CO (Carbon Monoxide) - This output turns on any time a Carbon Monoxide Zone (CO) is placed in alarm. The output is turned off using Sensor Reset option while no additional CO type zones are in alarm.

IN (Instant) - This provides a zone that does not follow entry or exit zones. Choose Instant if you need a zone that will not follow Entry or Exit delay.

DB (Doorbell) - This output is used for zones that are assigned to doorbells. These zones are similar to an Auxiliary 1 zone type.

Zone Type Defaults

The XTLplusINT panel contains 13 default zone types that provide the most commonly selected functions for their applications. All zone types can be customized by changing the variable options listed below.

Key Fob - Indicates if a DMP key fob is programmed.

Type - These are the abbreviations displayed on the keypad for the zone types.

Area - For a ALL/PERIM or HOME/SLEEP/AWAY system, this is either Interior, Bedroom, or Perimeter. For an AREA system use 1 to 6.

Wireless - 1100INT Series Wireless options.

Contact - Indicates if the Universal Transmitter is programmed to use the internal or external contact.

External Contact N/O? - Identifies whether externally installed contacts are programmed as a normally open (N/O) or normally closed (N/C) circuit. Y = N/O Contacts. N = N/C Contacts.

Supervision Time - Selects the number of minutes for DMP wireless supervision.

1142INT LED Operation - Identifies DMP 1142INT Wireless Two-Button transmitter LED operation.

Disarm/Disable - Disables Zone Tripped messages.

Message - A = alarm report, T = trouble report, L = local with no report, – (dash) = no report.

Output - 51 to 54 and 61 to 64 wireless outputs or wireless key fob zones.

Action - This selects the type of relay output:

S = steady, P = pulse, M = momentary, and F = follow

Swinger Bypass - The zone can be automatically bypassed after a programmed number of trips.

Prewarn - This selects the keypad address that sounds the entry prewarn for this zone.

Entry Delay - Selects the entry delay timer used for this zone.

Priority - Requires this zone to be in a normal condition before the area can be armed.

Traffic Count - Provides the number of zone trips per area for Night and Exit type zones in a disarmed state.

Zone Audit Days - Number of days allowed to elapse without a zone being tripped before a message is sent.

Receiver Routing - This selects the routing option for Auxiliary 1 or Auxiliary 2 zone types.

Style - The abbreviations that display on the keypad for arming zone style. TGL = Toggle,

ARM = Arm only, DIS = Disarm only

STEP = Wireless arming, MNT = Maintain

Common Keypad Messages

Message	Meaning	Possible Solutions
INVALID CODE	The user code you have entered is not recognized by the system.	Check the user code and try again.
CLOSING TIME	The schedule has expired but the system has not been armed.	Users still on the premise should arm the system or extend the schedule to a later time.
KEYPAD NAME - NOPWR	Wireless keypad is not getting proper power.	Check that AC/DC transformer is plugged in correctly.
AC TROUBLE	The system AC is low or missing.	Check that the AC connections are good.
BATTERY TROUBLE	The System battery is either low or missing.	Check that the battery connections are good and the battery is still good.
SYSTEM TROUBLE or SERVICE REQUIRED	There is a problem with one or more components in the system.	Press the RESET button for 1-2 seconds.
SYSTEM BUSY	The system is performing another task with a higher priority.	Wait a few moments for the system to complete the task. If the message displays for a long period of time, the processor could be locked up.
TRANSMIT FAIL	The panel has attempted to communicate with the central station 10 times and has not succeeded.	Verify your communication type, account number, and IP address.
ENTER CODE (When entering Programming)	A lockout code has been programmed for the panel.	Enter the lockout code.

ALARM TRANSMISSION SYSTEMS AND EQUIPMENT EN 50136-1 AND -2

Net and Cell Test Days in Communication must be set to 1.

Panel events are stored in non-volatile memory. Part number: Atmel AT24C256C-SSHL-T. The Display Events section of the User Menu is a read-only function.

This equipment shall be installed in accordance with local, national, and European requirements and regulations for attachment to, establishment, and termination of connection and transmission via public telephone and data networks and/or the regulations for transmission via the use of radio, power distribution systems, or cable TV distribution systems.

Messages are sent to the central station using the pass-through method. Messages are processed and sent as they are received.

Premises Wifi network must meet the requirements for 802.11b or higher. A communication test message must be sent to verify sufficient network capacity before the system is commissioned.

The XTLplusINT uses 4-digit user codes for a total of 10,000 possible combinations.

Access to the SPT is protected by a 4-digit service user code and a 4-digit lockout code for a total of 100,000,000 possible combinations.

Failure of the ATP is indicated at the keypad by the CELL -TROUBLE or NET -TROUBLE messages

The network interface is monitored by the Wifi icon on the keypad. Absence of this icon indicates loss of wifi connection

A valid User Code is required to be entered to display the Status List. The display will time out in 60 seconds with no key presses. A valid User Code will be required to be entered again to view list.

The keypad is disabled for 90 seconds when three invalid codes are entered in a 60 second period

In System Options, Closing Check must be ON when using Auto Arm. When arming, Closing Time! is displayed for 10 minutes and the keypad sounds. Bad zones are processed according to the Bad Zones programming in Area Information. Other troubles are automatically overridden.

Features outside the scope of EN50131 may be configured by an access Level 3 user.

The XTLplusINT contains no user serviceable parts.

The XTLplusINT draws an average of 95 mA from the battery when AC power is lost. The 3500 mAh battery (XTL+BAT3500) is required for Grade 2 applications.

SPECIFICATIONS

Weight	.5 kg
Dimensions	14 cm W x 9.5 cm H x 2.5 cm D
Security Grade	2
Environmental Class	II
ATS Category:	SP2 or DP1
ACE Type B Fixed	
Compatible RCT:	SCS-VR and SCS-1R
Operating Temperature	0°C- 49°C
Relative Humidity	80%

LISTED COMPLIANCE SPECIFICATIONS

Intertek (ETL) Listed

EN 50130-5:2011	Alarm systems. Environmental test methods
EN 50131-1:2006+A1:2009	Alarm systems. Intrusion and hold-up systems. System requirements.
EN 50131-3:2009	Alarm systems. Intrusion and hold-up systems. Control and indicating equipment.
EN 50131-5- 3:2005+A1:2008	Alarm Systems Intrusion Systems. Requirements for Interconnections Equipment using Radio Frequency Techniques.
EN 50136-1:201	Alarm systems. Alarm transmission systems and equipment. General requirements for alarm transmission systems.
EN 50136-2:2013	Alarm systems. Alarm transmission systems and equipment. Requirements for Supervised Premises Transceiver (SPT).



CE/RED

EN ETSI 300 220-2 V3.1.1
EN ETSI 301 489-1 V2.2



Designed, engineered, and
manufactured using U.S. and global
components in Springfield, MO.
© 2022 Digital Monitoring Products, Inc.
LT-1434INT 22063 1.01

INTRUSION • FIRE • ACCESS • NETWORK

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

888.436.7832 | DMP.com