


# QUICK START GUIDE




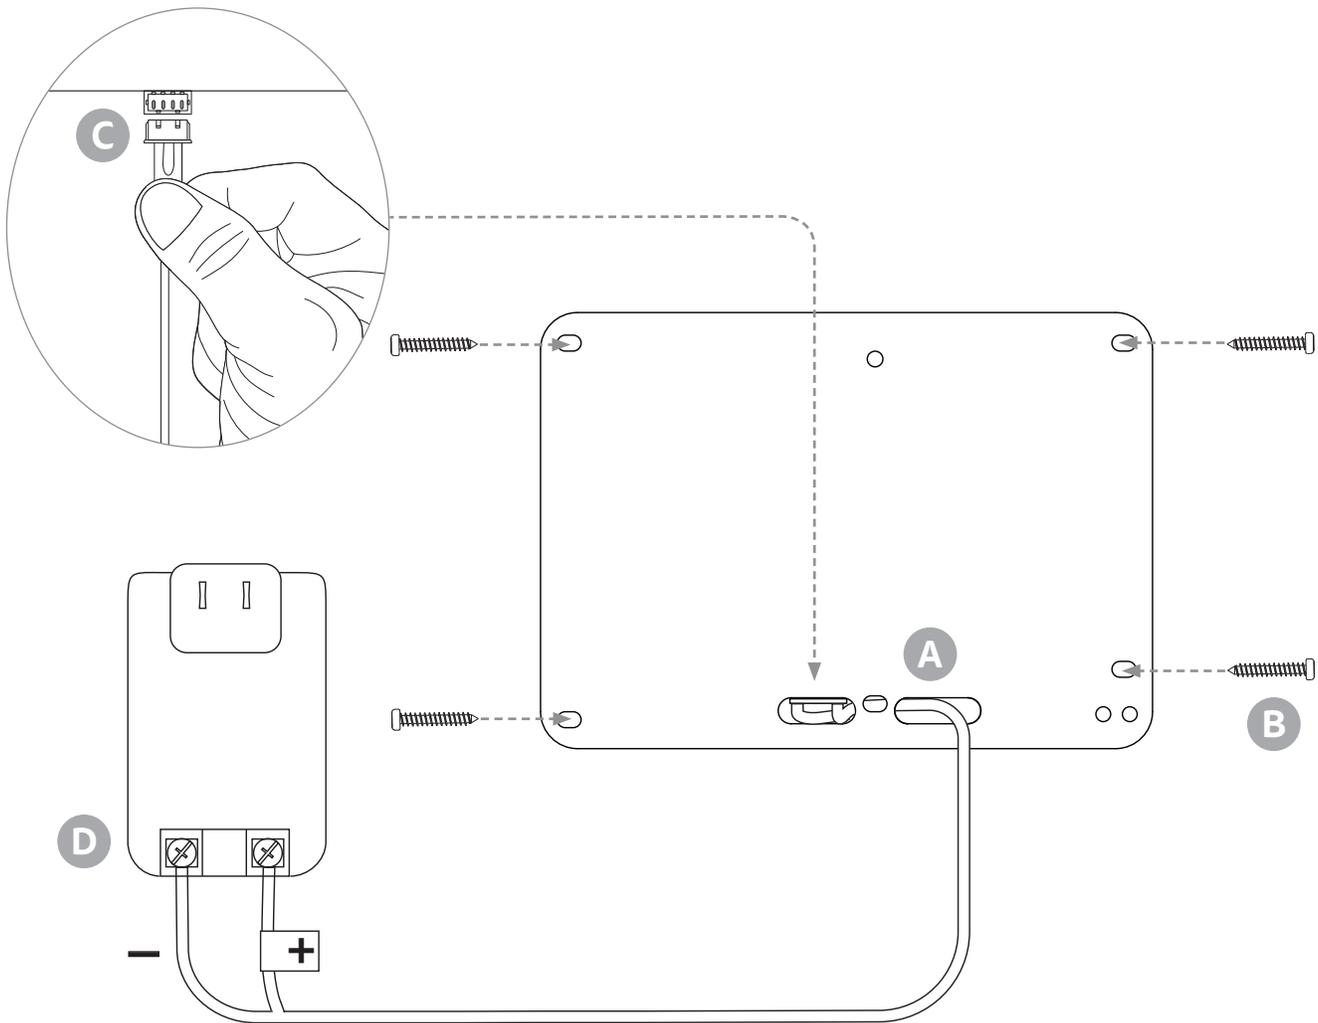


## SecuraTouch™

### 1. POWER IT UP

- ✓ Feed the power supply wire through the opening in the back of the keypad case (A).
- ✓ Mount the back of the keypad case on a wall using the included mounting screws. See the diagram for mounting hole locations (B).
- ✓ Grasp the power supply wire near the base of the connector and press it into the keypad's power supply header (C). Make sure the connector fully attaches.
- ✓ Snap the front of the keypad onto the back of keypad case. Make sure each side snaps into place.
- ✓ On the other end of the power supply wire, connect the smooth black (-) end to the negative terminal on the power supply. Then, connect the ribbed black (+) end to the positive terminal. Be sure to observe polarity (D).
- ✓ Plug the power supply into a wall outlet not controlled by a switch.

# QUICK START GUIDE

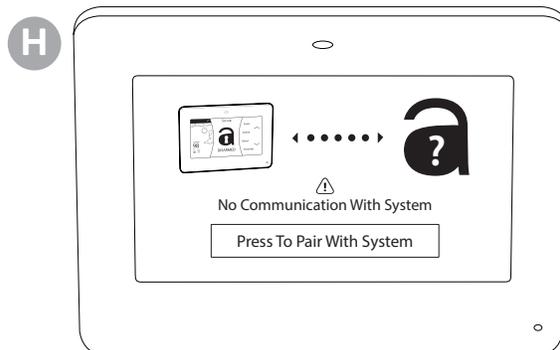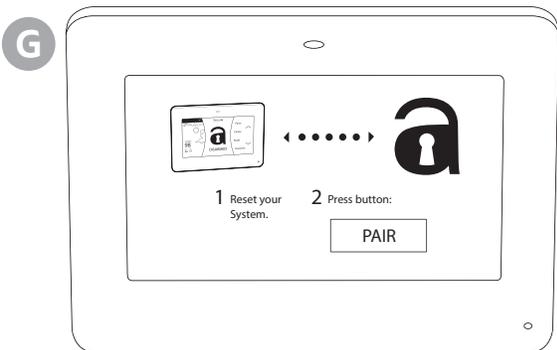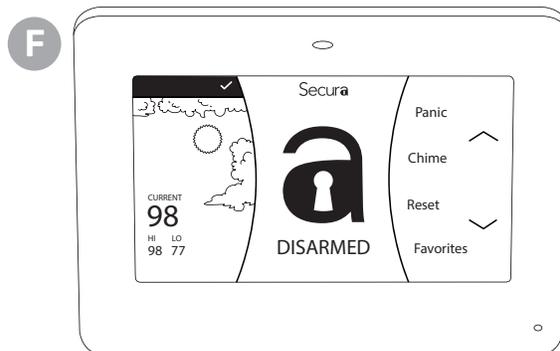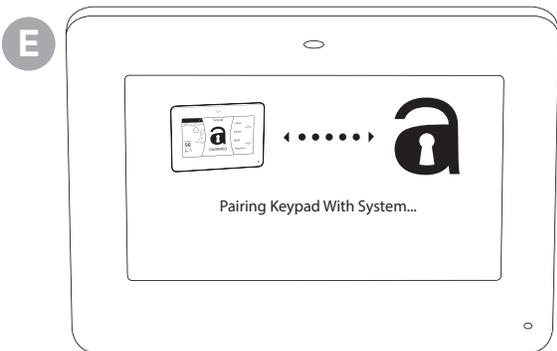

## SecuraTouch™

### 3. AUTO PAIR

When you power your SecuraTouch and SecuraHub™, the auto pairing process begins immediately and a 10-minute auto pairing timer starts. The keypad automatically displays **Pairing Keypad With System** **E**.

If the hub acquires the keypad during the 10-minute auto pairing time period, you will see the home screen display on the keypad, signaling that pairing is complete **F**.

If the hub does not acquire the keypad by the end of the pairing timer, the keypad displays **Pairing Failed**, followed by the **Reset** screen **G**. Press the RESET button on the hub and the **Pair** button on the keypad to restart the pairing process.

If the keypad loses communication with the panel, the **No Communication With System** display appears and gives you the option to reattempt pairing **H**.