



XR150/XR550

Thank you for your purchase!

INCLUDES

- **Full System User Guide QR Code**
- **How to Handle an Alarm**
- **Arm an All/Perimeter System**
- **Disarm an All/Perimeter System**



HOW TO HANDLE AN ALARM

Enter your user code or present your credential to the keypad if it has a built-in proximity reader. You will see:

IS THIS A FALSE ALARM?
YES NO



To view the full **XR150/XR550 System User Guide**, scan this QR code or visit [DMP.com](https://www.dmp.com).



Real Alarm

Press **NO** to notify the emergency monitoring center. Your system will remain armed.

False Alarm

Press **YES** to cancel the alarm. Your system will disarm.

ARM AN AREA SYSTEM

Thinline Keypads

1. Press **CMD** until **ARM DISARM** displays.
2. Select **ARM**. The keypad displays **ALL? NO YES**.
3. To arm all areas, select **YES**. To arm individual areas, select **NO**. The keypad displays each area you have access to. Select **YES** to arm the areas and **NO** to leave the area disarmed.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen.
2. Select **ARM**. The keypad displays a list of areas to arm.
3. To arm all areas, select **ARM ALL**. To arm select areas, tap the area name and then tap **ARM SELECTED**.

DISARM AN AREA SYSTEM

Thinline Keypads

1. Press **CMD** until **ARM DISARM** displays.
2. Select **DISARM**. The keypad displays **ALL? NO YES**.
3. To disarm all areas, select **YES**. To disarm individual areas, select **NO**. The keypad displays each area you have access to. Select **YES** to disarm the areas and **NO** to leave the area unarmed.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen.
2. Select **DISARM**. The keypad displays a list of areas to disarm.
3. To disarm all areas, select **DISARM ALL**. To disarm select areas, tap the area name and then tap **DISARM SELECTED**.