



INSTALLATION AND PROGRAMMING GUIDE



TMSentry™ Panel

CONTENTS

Get Started	5	APN	15
Procedure.....	5	Receiver 1 Programming	15
What's Included.....	5	Alarm Reports.....	15
Step 1: Install The TMSentry	6	Supervisory/Trouble Reports.....	15
Prepare the Backbox for Wiring	6	Opening/Closing and User Reports	15
Install the Backup Battery	7	Test Report.....	15
Wire the Panel.....	7	First IP Address	15
<i>Install the Ethernet Cable</i>	8	First IP Port	15
<i>Install the Keypad</i>	8	Second IP Address	16
<i>Wire the Terminals</i>	8	Second IP Port	16
Install the Antenna	9	Receiver 2 Programming	16
Step 2: Activate Cellular Communication	10	Receiver 2 Backup?.....	16
Step 3: Update the Firmware	11	Alarm Reports.....	16
Step 4: Program The Panel	12	Supervisory/Trouble Reports.....	16
Programming Options	12	Opening/Closing and User Reports	16
Navigate the Programming Menu	12	Test Report.....	16
Initialization	13	First IP Address	16
Initialization.....	13	First IP Port	16
Clear All Codes	13	Second IP Address	17
Clear All Schedules	13	Second IP Port	17
Clear Events	13	Network Options	18
Clear Zone Programming	13	Network Options.....	18
Clear Communication	13	DHCP	18
Clear Remote Key	13	Local IP Address.....	18
Set to Factory Defaults	13	Gateway Address	18
Communication	14	Subnet Mask	18
Communication	14	DNS Server	18
Transmission Delay.....	14	Passphrase.....	18
Communication Type	14	Remote Options	19
Backup Cellular.....	14	Remote Options	19
Test Time	14	Remote Key.....	19
Test Days	14	Remote Disarm	19
Encryption	14	Entré Connection.....	19
Send Communication Trouble	15	Entré Incoming TCP Port	19
		Entré Reports	19

Entré Arm and Disarm Reports.....	19	Output Options.....	28
Entré Zone Reports.....	19	Output Options	28
Entré User Command Reports	20	Output Cutoff Time.....	28
Entré Supervisory Reports.....	20	Communication Failure Output.....	28
Entré IP Address.....	20	Panic Alarm Output	28
Entré Outbound TCP Port	20	Armed Output.....	28
Entré Backup Connection	20	Remote Arming Output	28
Entré Backup IP Address	20	Disarmed Output	28
Entré Backup TCP Port.....	20	Burglary Output	28
Entré Checkin	21	Arm-Alarm Output	28
Entré Passphrase.....	21	Area Information.....	29
App Key (For EASYconnect only).....	21	Area Number	29
System Reports.....	22	Area Name.....	29
System Reports	22	Automatic Arming.....	29
Opening/Closing Reports.....	22	Automatic Disarming	29
Zone Restoral Reports.....	22	Zone Information.....	30
Bypass Reports.....	22	Zone Information	30
Code Change Reports.....	22	Zone Number	30
Send Stored Messages.....	22	Zone Location	30
Ambush.....	22	Zone Name	30
Entry Check-in Protection.....	22	Zone Type.....	30
Send System Information	23	Area Assignment.....	30
System Options.....	24	Arm Areas.....	31
System Options	24	Style	31
Closing Code	24	Next Zone	31
Entry Delay	24	Alarm Action.....	31
Exit Delay	24	Disarmed Open.....	31
Cross Zone Time	24	Message To Transmit	32
Swinger Bypass Trips	25	Output Number	32
Reset Swinger Bypass.....	25	Output Action	32
Time Zone Changes	26	Swinger Bypass	32
Trouble Audible Annunciation	27	Chime	32
Enable Keypad Panic Keys.....	27	Cross Zone.....	33
Use False Alarm Question	27	Zone Audit Days.....	33
Weather Zip Code	27	Zone Number	33
		Stop.....	34

Set Lockout Code	35
Set Lockout Code.....	35
Appendix A: Program Users	36
Enter the User Menu.....	36
<i>Default Master Code</i>	<i>36</i>
Add a User.....	36
Appendix B: Status List	37
Status List Items.....	37
Appendix C: False Alarm Reduction	38
System Recently Armed Report	38
False Alarm Question.....	38
Cross Zoning.....	38
<i>Zone Type Descriptions</i>	<i>38</i>
Appendix D: Diagnostics Function	39
Carrier Selection.....	39
<i>Signal Strength Test</i>	<i>39</i>
Cellular Status	39
Cell Signal	39
Panel Settings	39
Appendix E: 984 Command Function	40
NET.....	40
CELL.....	40
Appendix F: Common Keypad Messages	41
Appendix G: Keypad Speaker Operation.....	42
Burglary Events	42
Zone Monitor Events	42
Ordering Information.....	42

GET STARTED

The TMSentry™ is a small-form panel designed to fit inside ATMs. The feature set is specifically geared towards teller machine security, including user and zone inactivity audits and encrypted communication.

The information in this document covers the installation and programming of the TMSentry panel. Refer to the [TMSentry User Guide](#) for additional information.

Features


- Powered from 12 VDC
- 24-hour backup battery for standby power
- 6 non-powered zones
- Programming header for keypad connection
- LED to indicate armed state
- Encrypted communication to Dealer Admin and the monitoring center
- Onboard network and cellular communication

Procedure




1. Install the TMSentry.
2. Activate cellular communication.
3. Update the firmware.
4. Program the panel.


What's Included

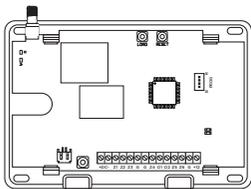


TMSentry Panel and Panel Enclosure

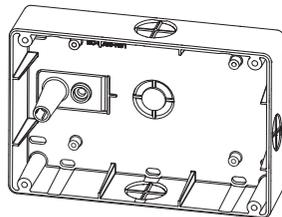


685 Series Conduit Backbox

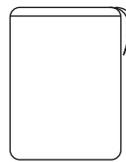


Backup Battery

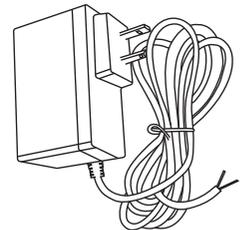

Model 371-500L Plug-In Power Supply

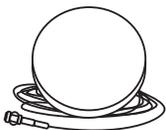

Cellular Antenna

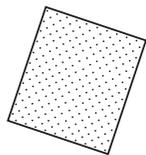


Hook and Loop Strip




Double-Sided Tape



Hardware Pack

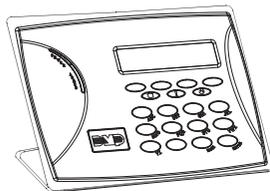

(Kit Only) 7060 Thinline Keypad and 699-W Deskstand

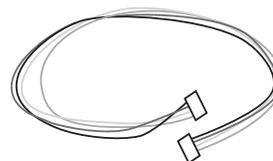

(Kit Only) Model 330-4 Wiring Harness

STEP 1: INSTALL THE TMSENTRY

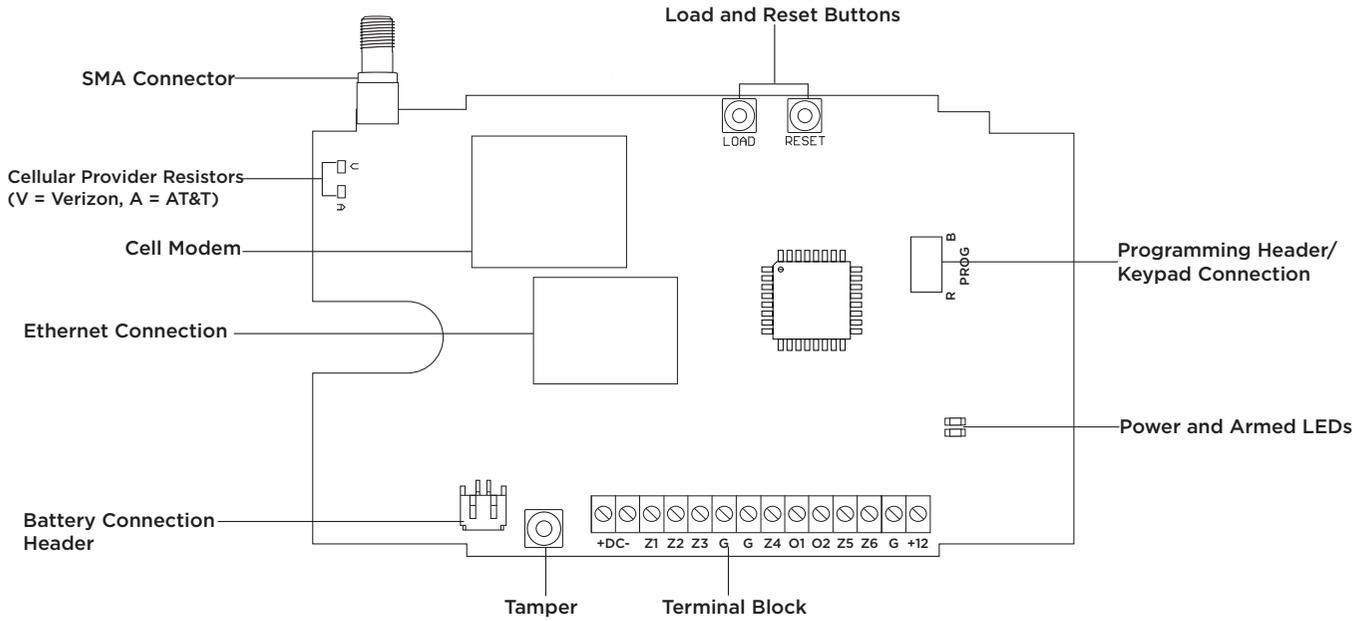


Figure 1: TMSentry Panel Labeled

Prepare the Backbox for Wiring

Drill out the desired **conduit knockouts** for routing wires to the panel. Secure the wires that exit the backbox.

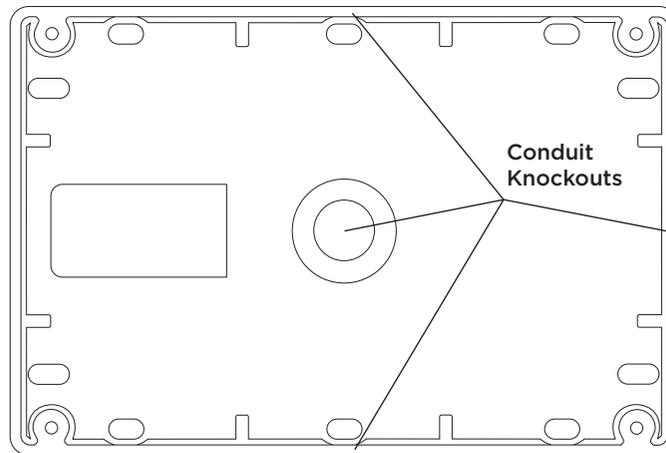


Figure 2: Conduit Knockouts

Install the Backup Battery

The TMSentry has a 24-hour backup battery that provides standby power if the power supply cannot power the panel. The backup battery is charged by the power supply.

1. Secure the **battery** to the backside of the **panel enclosure** with the provided **double-sided tape**. Do not cover the tamper location. Refer to Figure 3.
2. Remove the **front cover** of the panel enclosure and pull the **battery wires** through the wiring cutout.
3. Connect the **battery lead connector** to the battery connection header on the panel. Refer to Figure 4.
4. Replace the front cover of the panel enclosure after completing panel programming.

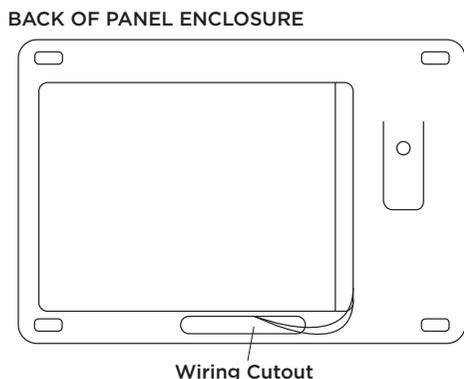


Figure 3: Backup Battery Placement on Panel Enclosure

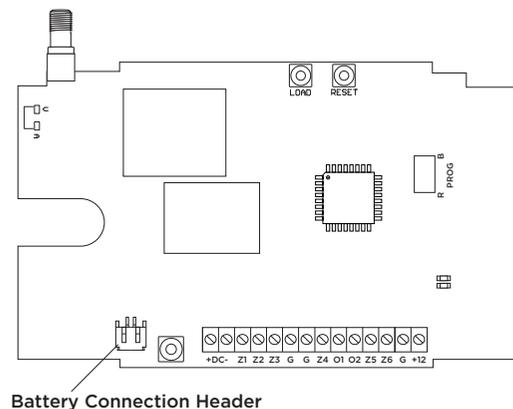


Figure 4: Backup Battery Connection on Panel

Wire the Panel

Route wires from the outside of the backbox through to the inside, then connect them to the panel. Ensure wires do not interfere with the tamper switch. Refer to the following sections for information about wiring the panel.

⚡ Caution: Ensure the power supply is **not** plugged into an outlet before wiring. Failure to do so may result in equipment damage or injury.

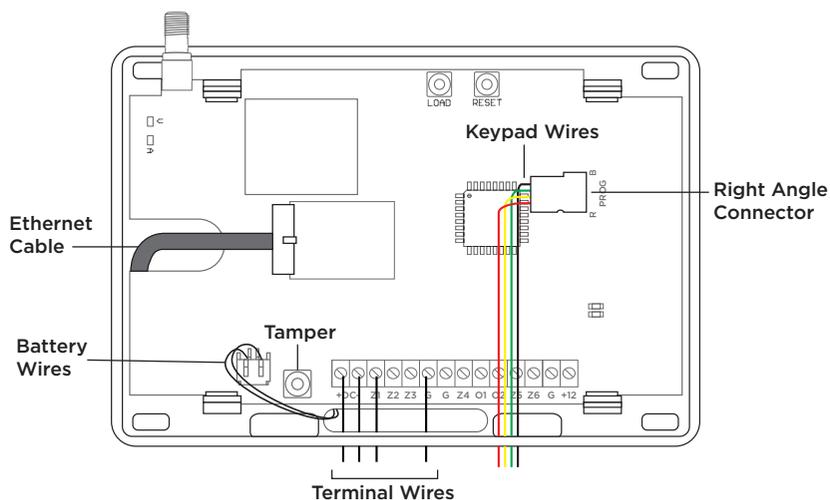


Figure 5: Wire Placement on Panel

Install the Ethernet Cable

The Ethernet cable provides onboard network communication.

1. Remove the **tab** on the back of the panel enclosure to make space for the Ethernet cable.
2. Route the **ethernet cable** through the space, then connect the Ethernet cable to the **panel**.

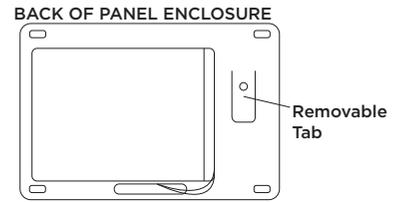


Figure 6: Removable Tab

Install the Keypad

The **7060 Thinline Keypad**, **699-W Deskstand**, and **Model 330-4 Wiring Harness** with right angle connector are included in the TMSentry Kit and may also be ordered separately.

⚡ Caution: Ensure the power supply is **not** plugged into an outlet before wiring. Failure to do so may result in equipment damage or injury.

1. Place the **keypad** on the **deskstand** and put it inside the ATM.
2. Connect the **right angle connector** to the **keypad wiring harness** and then connect it to the **keypad connection header** on the panel. The **black wire** should be on top and the **red wire** should be on the bottom.
3. Secure the wiring harness to the backbox.
4. Program the keypad as a device in the TMSentry and **program** the keypad. Refer to [7000 Series Installation and Programming Guide](#) for more information.

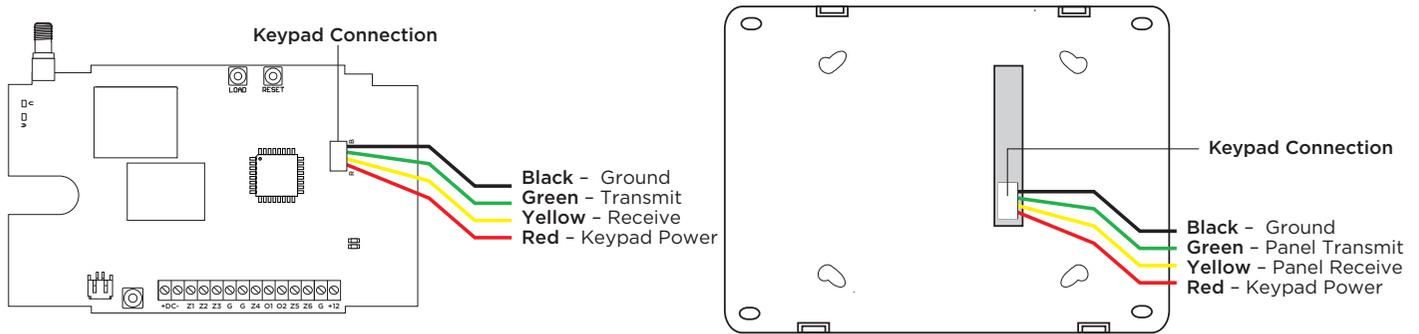


Figure 7: Panel and Keypad Connections

Wire the Terminals

Observe polarity when wiring the **power connection terminals**. Refer to Figure 8 for terminal wiring information. Secure all terminal wires to the backbox.

⚡ Caution: Ensure the power supply is **not** plugged into an outlet before wiring. Failure to do so may result in equipment damage or injury.

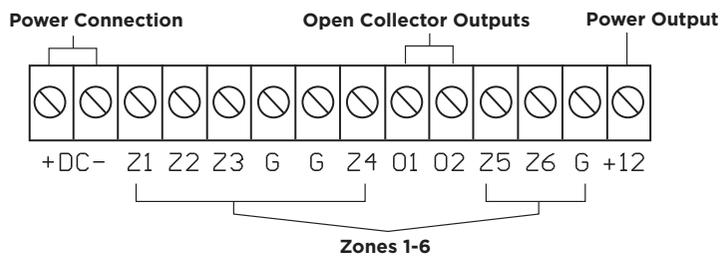


Figure 8: Terminals Labeled

Zones 1-6

Connect up to six devices using **Terminals Z1 to Z6 and G (ground)**. The six zones are non-powered and use 1k Ohm EOL resistors.

Zones 11-14

There are a maximum of four wired zones possible on the Keypad Bus when connecting a keypad with zone expansion, such as the 7070 or 7073 Thinline Keypads. For Keypad Bus expansion zones, address 1 is zones 11-14.

Open Collector Outputs

Connect up to two outputs to **Terminals O1 and O2**, which can be programmed to indicate the activity of the zones or conditions occurring on the system. Maximum voltage is **30 VDC at 50 mA**.

Open collector outputs do not provide a voltage but instead **switch-to-ground** the voltage from another source. The outputs can respond to any of the conditions listed below:

- Activation by zone condition: Steady, Pulse, Momentary, or Follow
- Communication
- Armed area annunciation
- Remote arming output

Power Output

Connect additional devices to the **Power Output terminal** to power devices that use **12 VDC**. The total current draw of all devices powered from the panel must not exceed the panel maximum current rating of **137 mA**.

Power Connection Terminals

Observe polarity when connecting the Model 371-500L plug-in DC power supply.

1. Connect the **positive wire** on the power supply to the TMSentry DC **positive terminal (+)**.
2. Connect the **negative wire** on the power supply to the TMSentry DC **negative terminal (-)**.
3. Plug the power supply in a 120 VAC 60 Hz dedicated outlet that is not controlled by a switch after completing all wiring and installing the keypad.

Mount the TMSentry

1. Remove the **TMSentry PCB** from the **panel enclosure**.
2. Secure the **panel enclosure** to the **685 Series Conduit Backbox** using the four provided **1" #6 screws**.
3. Reattach the **TMSentry PCB** to the **panel enclosure**.
4. Secure the **assembled TMSentry** to the inside of the ATM using the provided **hook and loop strip**.

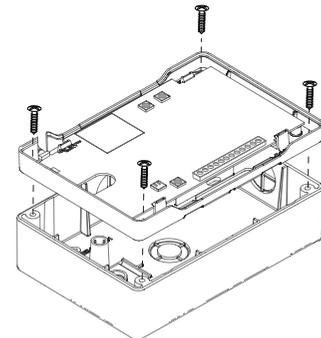


Figure 9: Mounting the TMSentry to the Backbox

Install the Antenna

1. Drill a **1/2" hole** in the outside of the ATM (1) or use the **existing knockout**. DMP recommends installing on the back near the top of the ATM.
2. Route the **antenna wire** through the drilled hole to the inside of the ATM (2).
3. Secure the **antenna puck** to the outside of the ATM using the provided **washers and nut** (3).
4. Place the antenna onto the **SMA connector** on the panel and twist until tightly secured (4).
5. Secure the antenna to the backbox.

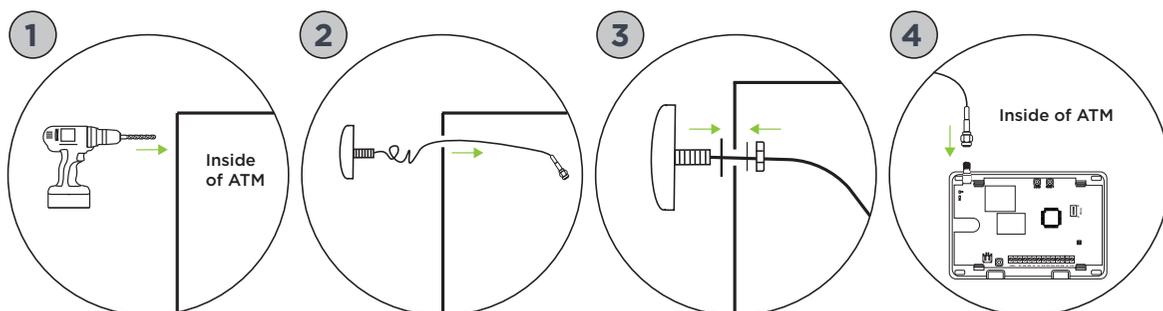


Figure 10: Antenna Installation Procedure

STEP 2: ACTIVATE CELLULAR COMMUNICATION

Activate cellular communication through Dealer Admin.

1. Navigate to the Dealer Admin site (dealer.securecomwireless.com).
2. Go to **Customers** and select the customer name.
3. In **Systems**, select the Add icon.
4. Enter the **System Name**.
5. In **System Type**, select **TMSentry**.
6. In **Communication Type**, select **Cellular** or **EASYconnect + Cell Backup**.
7. In **SIM number**, enter the SIM number and select **Get Status**.



Note: To activate DualSIM, select the checkbox next to **Use DualSIM**. Enter the two requested SIM numbers and select **Get Status**.

8. Select **Activate**.
9. In **Account Number**, enter the system's receiver number followed by the account number.
10. Select a **Rate Plan** for the panel.
11. Enter the panel **Serial Number**.
12. To confirm proper communication, select **Test Connection**.
13. A dialog box displays to ask if you want to perform initial connection to the panel. Select **Yes**.
14. Configure additional options as needed, then select **Save** at the top of the page.

For more information about using Dealer Admin, refer to the [Dealer Admin Help File](#).

STEP 3: UPDATE THE FIRMWARE

Update the firmware through Dealer Admin.

1. Log in to [Dealer Admin](#).
2. Find and select the **customer name**.
3. Select the **TMSentry system** connected to the account. The **System Information** page opens.
4. Go to **Remote Update**.
5. Select **Update System** if there are updates available.

For more information about using Dealer Admin, refer to the [Dealer Admin Help File](#).

STEP 4: PROGRAM THE PANEL

 **Caution:** Before programming the panel, make sure the panel is properly grounded. All wiring connections and grounding instructions are detailed in the Install the TMSentry section of this guide.

Quick Reference

SPECIFICATION	NUMBER
Total Zones	10
Possible Hardwired Zones	10
Areas	6
Event Buffer	200
User Codes	30
Supervised Keypads	1
Onboard Panel Outputs	2

Programming Options

Program the panel using Dealer Admin or a 7060 Thinline Keypad. To add additional expansion zones, use a keypad with zone expansion, such as the 7070 or 7073 Thinkline Keypads.

This guide focuses primarily on programming from a keypad. For information specific to programming with Dealer Admin, refer to the [Dealer Admin Help File](#).

For information about using the keypad, refer to [7000 Series Installation and Programming Guide](#).

Enter the Programming Menu

1. Press the **reset button** on the panel. If more than 30 minutes pass between resetting and programming the panel, reset the panel again. After resetting, cell suppression is disabled for 30 minutes.
2. Enter the code **6653** (PROG). The keypad displays **PROGRAMMER**.
3. Tap a **select key** to enter the programming menu.

TMSENTRY PROGRAMMING MENU ITEMS	
Initialization	Output Options
Communication	Area Information
Network Options	Zone Information
Remote Options	Stop
System Reports	Set Lockout Code
System Options	

Navigate the Programming Menu

To **scroll** through the programming menu items, press **CMD**.

To **select** a menu item, press any select key when the desired menu item displays on the keypad.

To **program** in a menu item, refer to the following information in this guide.

INITIALIZATION

INITIALIZATION

Initialization

This function enables you to set the panel's programmed memory back to the factory defaults.

After you select **YES** to clear a section of memory, the panel asks if you are sure you want to clear the memory. This is a safeguard against accidentally erasing part of your programming. No memory is cleared from the programming until you answer **YES** to the **SURE? YES NO** option.

CODES?	NO	YES
--------	----	-----

Clear All Codes

NO leaves existing codes intact.

YES clears the user code memory and assigns the user code number 99 to user 30.

SCHEDS?	NO	YES
---------	----	-----

Clear All Schedules

NO leaves existing schedules intact.

YES clears all schedules from the TMSentry programming.

EVENTS?	NO	YES
---------	----	-----

Clear Events

NO leaves existing event memory intact.

YES clears all event memory currently held in the panel's Display Events buffer.

ZONES?	NO	YES
--------	----	-----

Clear Zone Programming

NO leaves existing zone information intact.

YES sets all zones in the system to * UNUSED *.

AREAS?	NO	YES
--------	----	-----

Clear Communication

NO leaves existing communication and network intact.

YES clears communication and network programming to factory defaults.

RMT KEY?	NO	YES
----------	----	-----

Clear Remote Key

NO leaves existing remote key intact.

YES resets remote key programming to factory defaults.

DEFAULTS?	NO	YES
-----------	----	-----

Set to Factory Defaults

NO leaves the remainder of the existing panel programming intact.

YES sets the panel's programming back to factory default selections and clears all Communication, Network Options, Remote Options, System Reports, System Options, Output Options, and Area Information from the panel. Selecting YES does not clear the panel's event memory, zone information, user code information, or schedules.

COMMUNICATION

COMMUNICATION

Communication

The Communication section enables you to configure the communication settings for the TMSentry panel.

ACCOUNT NO: 12345

Account Number

Enter the account number sent to the receiver. The range of account numbers for Network and Cell is 1 to 65535. For account numbers of four digits or less, you do not have to enter leading zeros. The panel automatically right justifies the account number.

XMIT DELAY: 30

Transmission Delay

Enter the number of seconds (15 to 45 seconds) the panel waits before sending burglary alarm reports to the receiver. The relay outputs are not delayed during this period. Enter 0 (zero) to disable this function. The default is **30**. If the area where the alarm occurred is disarmed during the Transmit Delay time, only an Abort Report (S45) message is sent to the receiver. If the area where the alarm occurred is disarmed after the alarm message is sent to the receiver, even if the alarm was silenced, an Alarm Canceled (S49) message is sent. The Alarm Canceled report cannot be disabled.

COMM TYPE:

Communication Type

This specifies the communication method the panel uses to contact the receiver. Press any select key to display the following communication options:

NET CELL NONE

NET - Network communication to DMP Model SCS-1R Receivers or SCS-VR Receivers.
CELL - Cellular communication to DMP Model SCS-1R or SCS-VR Receivers.
NONE - For local systems. Selecting this ends communication programming.

The Backup Cellular, Check-in Minutes, and Failed Minutes options revert to their default values when the communication type is changed. All other communication programming items remain at their programmed values.

BACKUP CELL NO YES

Backup Cellular

Backup Cellular option is available if COMM TYPE is set for NET. The Backup Cellular tries to send the message after the main communication fails for 60 seconds on NET. If the backup cellular fails, then the message is discarded.

TEST TIME 00:00 AM PM

Test Time

Press **CMD** to enter the Test Time. Enter the time of day the panel sends the test report to the SCS-1R Receiver. Use entries between 12:00 to 11:59 and then choose AM or PM.

NET TEST DAYS: 1

Test Days

Enter how often the panel test report is sent to the receiver for each communication type programmed. Enter from 1 to 60 days. Enter zero to disable the test report. Default is **1 (one) day**. These options only display if a test time is entered and that particular communication method is being used.

CHECKIN MINS: 200

Check In

Check-in reports are a method of supervising the panel for communication with the receiver for communication. Enter the number of minutes between check-in reports, from 3 to 240, when the panel is armed or disarmed. For CELL, the default is **0**. For NET, the default is **200**. To disable check-in reports, set to **0**.

ENCRYPTION NO YES

Encryption

Select YES to enable encrypted communication from the panel to the monitoring center. Default is **NO**.

COMM TRBL NO **YES**

Send Communication Trouble

Enable communication fail notification by selecting YES at COMM TRBL. Select NO to disable. Default is **YES**.

When COMM TRBL is YES and the panel detects a failure of communication, the panel sends an S72 (Comm Trouble) message through a backup communication method with notification of the failure. If both primary and secondary methods of communication fail, then two S72 messages will be sent via the third communication method, if programmed.

When communication is restored, the panel sends an S73 (Comm Restored) message through the primary communication.

If the primary or secondary communication type is CELL, S72 and S73 messages include the cell signal strength as a -dBm value.

APN
SECURECOM400

APN

Enter the APN (Access Point Name). This enables an access point for cellular communication and is used to connect to a DNS network. The APN may contain two lines of 16 characters to equal 32 characters. Default is set to **SECURECOM400**.

RECEIVER 1 PROG

Receiver 1 Programming

Enables you to set the options for the first receiver the TMSentry panel attempts to contact when sending reports. The TMSentry supports communication to two receivers.

ALARM NO **YES**

Alarm Reports

YES enables Abort, Alarm, Alarm Restoral, Alarm Bell Silenced, Ambush, Exit Error, and System Recently Armed reports to be sent to this receiver. Default is **YES**.

SPV/TRBL NO **YES**

Supervisory/Trouble Reports

YES enables Supervisory, Trouble, Trouble Restoral, Force Armed, Late to Close, and Fault reports to be sent to this receiver. Default is **YES**.

O/C USER NO **YES**

Opening/Closing and User Reports

YES enables Opening/Closing, Door Access, Schedule and Code Changes, Bypass, and Sensor Reset reports by user to be sent to this receiver. Default is **YES**.

TEST RPT **NO** YES

Test Report

Enter YES to enable the Recall Test report to be sent to this receiver. Default is **NO**.

FIRST IP ADDR
0.0.0.0

First IP Address

Enter the First (primary) IP Address where the panel sends network or cell messages. The IP address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods.

For NET: The First and Second IP addresses are alternately used for 8-second intervals until successful communication or 1 minute elapses.

For Cell: The message is sent using APN and the First IP Address. If no acknowledgment is received, APN and the Second IP Address are used, followed, if needed, by the First and Second IP addresses, respectively.

FIRST IP PORT
2001

First IP Port

Enter the First IP Port number to be used in conjunction with the First IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP port setting is **2001**.

SECOND IP ADDR
0.0.0.0

Second IP Address

Enter the Second IP Address where the panel sends network messages. The IP address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods.

SECOND IP PORT
2001

Second IP Port

Enter the Second IP port number to be used in conjunction with the Second IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

RECEIVER 2 PROG

Receiver 2 Programming

Enables you to set the options for the second receiver the TMSentry panel attempts to contact when sending reports. If you select YES for any of the Receiver 2 options, you must have at least one phone number or IP address programmed in Receiver 2 Programming. Receiver 2 defaults are set to **NO**.

BACKUP? **NO** YES

Receiver 2 Backup?

Select NO to allow Receiver 2 to send dual messages to the monitoring center. Select YES to allow Receiver 2 to start receiving messages only when Receiver 1 stops working, and to return to its backup state when Receiver 1 returns to its normal state. The default is **NO**.

ALARM **NO** YES

Alarm Reports

YES enables Abort, Alarm, Alarm Restoral, Alarm Bell Silenced, Ambush, Exit Error, and System Recently Armed reports to be sent to this receiver. Default is **NO**.

SPV/TRBL **NO** YES

Supervisory/Trouble Reports

YES enables Supervisory, Trouble, Trouble Restoral, Force Armed, Late to Close, and Fault reports to be sent to this receiver. Default is **NO**.

O/C USER **NO** YES

Opening/Closing and User Reports

YES enables Opening/Closing, Schedule and Code Changes, Bypass, and Sensor Reset reports by user to be sent to this receiver. Default is **NO**.

TEST RPT **NO** YES

Test Report

YES enables the Recall Test report to be sent to this receiver. Default is **NO**.

FIRST IP ADDR
0.0.0.0

First IP Address

Enter the First (primary) IP Address where the panel sends network or cell messages. The IP address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods.

For NET: The First and Second IP addresses are alternately used for 8 second intervals until successful communication or 1 minute elapses.

For Cell: The message is sent using APN and the First IP Address. If no acknowledgment is received, APN and the Second IP address are used, followed, if needed, by the First and Second IP addresses, respectively.

FIRST IP PORT
2001

First IP Port

Enter the First IP Port number to be used in conjunction with the First IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP Port setting is **2001**.

SECOND IP ADDR
0.0.0.0

Second IP Address

Enter the Second IP Address where the panel sends network messages. The IP address must be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods.

SECOND IP PORT
2001

Second IP Port

Enter the Second IP Port number to be used in conjunction with the Second IP Address. The IP port identifies the port used to communicate messages to and from the panel. The default IP port setting is **2001**.

NETWORK OPTIONS

Network Options are provided to define the network configuration for the panel. This information will be used during communication of messages via network.

IP addresses and port numbers may need to be assigned by the network administrator. When entering an IP, Gateway, or Subnet Mask address be sure to enter all 12 digits and leave out the periods.

NETWORK OPTIONS

Network Options

This option is for configuring the desired network settings. Press any select key to select.

DHCP	NO	YES
------	-----------	-----

DHCP

If the panel uses a dynamic IP address select YES. When set to YES the panel operates in DHCP and will not use the Local IP Address number. When the DHCP option is set to NO, the panel uses the IP address entered in Local IP Address. The default value for DHCP mode is **NO**.

LOCAL IP ADDRESS
192.168.000.250

Local IP Address

Enter the local IP address for the panel. The Local IP Address must be unique and cannot be duplicated on the network. The default local IP address is **192.168.000.250**.

GATEWAY ADDRESS
192.168.000.001

Gateway Address

Enter the local gateway address. The Gateway IP Address is needed to exit the local network. The default gateway address is **192.168.000.001**.

SUBNET MASK
255.255.255.000

Subnet Mask

Enter the local subnet mask assigned to the panel. The default subnet mask address is **255.255.255.000**.

DNS SERVER
192.168.000.001

DNS Server

Enter the IP address of the DNS (Domain Name System) used by the panel to resolve domain names into IP addresses. The default address is **192.168.000.001**.

PASSPHRASE
-

Passphrase

To enable encryption, type an 8- to 16-character Passphrase using alphanumeric characters. If you leave the Passphrase blank, the panel communicates with the SCS-1R Receiver, but the data is not encrypted. The Passphrase is blank by default. The TMSentry can communicate 128-bit encrypted data to an SCS-104 line card installed at the receiver. The TMSentry and the receiver SCS-104 line card must have the same password called a Passphrase.

REMOTE OPTIONS

REMOTE OPTIONS

Remote Options

This section enables you to enter the information needed for Remote Command/Remote Programming operation.

REMOTE KEY

Remote Key

This option allows you to enter a code of up to 16 characters. Remote Link™ and Dealer Admin should be given the correct key to the panel before being allowed any remote functions. All panels are shipped from the factory with the key preset as blank. This can be an optional or required setting.

To enter a remote key or change the current one, press a select key or area and enter any combination of up to 16 digits. Press **CMD**. The current key displays as asterisks.

DISARM?

NO YES

Remote Disarm

Enter YES to enable the panel to be disarmed remotely. Selecting NO disables remote disarming. Default is **YES**.

ENTRE CONNECTION: NONE

Entré Connection

This option displays if the panel has network or cellular capability. Select **NET** to allow a dedicated network connection with Entré. Options are NONE, NET, or CELL. Default is **NONE**.

ENTRE INCOMING TCP PORT: 2011

Entré Incoming TCP Port

This option displays only if NET is chosen for the Entré connection. Enter the programming port number for the incoming Entré connection. The programming port identifies the port used to communicate messages to and from the Entré software. This port cannot be the same port as programmed in Network Programming Port. The default Programming Port setting is **2011**.

ENTRE REPORTS 000.000.000.000

Entré Reports

This option displays only if NET is chosen for the Entré connection. Choose which types of system reports are sent to Entré. Press CMD to view all of the Entré report options. Choose YES to enable arming/disarming, zone, user code, door access, or supervisory message reports. All Entré reports default to **YES**.

ENTRE REPORTS ARM/DIS: NO YES

Entré Arm and Disarm Reports

This option sends arming, disarming and Late to Close events to Entré, including the area number, name and action, the user number and name, and the time and date.

Select **YES** to send arm and disarm reports. Select **NO** to not send reports. Default is **YES**.

ENTRE REPORTS ZONE: NO YES

Entré Zone Reports

This option sends status changes of active zones to Entré, including the zone number, name, type, the action (alarm, trouble, bypass, etc.), user number (if applicable), and area name. If performing a Walk Test, Zone Verify and Zone Fail messages are sent for each zone.

Select **YES** to send zone reports. Select **NO** to not send reports. Default is **YES**.

ENTRE REPORTS
USER CMDS: NO **YES**

Entré User Command Reports

This option sends user code changes, schedule changes, and door access denied events to Entré.

Select **YES** to send user command reports. Select **NO** to not send reports. Default is **YES**.

SUPV MSG: **NO** YES

Entré Supervisory Reports

This option sends system monitor reports to Entré, including AC and battery, and system event reports. Supervisory Reports also sends the following reports:

- Abort
- Exit Error
- Ambush
- System Recently Armed
- Alarm Bell Silenced
- Unauthorized Entry
- Late to Close



Note: Late to Close is only sent as a Supervisory Report if Area Schedules is not enabled, Closing Check is enabled, and an opening/closing schedule has been programmed.

Select **YES** to send supervisory reports. Select **NO** to not send reports. Default is **YES**. To send these reports to the PC Log, enable SUPV MSG.

ENTRE IP

Entré IP Address

This option displays only if NET is chosen for the Entré connection. Enter the Entré IP address where the panel sends network messages. The Entré IP address should be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 198168000250. The periods display automatically. Default is **0.0.0.0**.

ENTRE OUTBOUND
TCP PORT: **2001**

Entré Outbound TCP Port

This option displays only if NET is chosen for the Entré connection. Enter the programming port number for the outbound Entré connection. The programming port identifies the port used to communicate messages to the Entré software. Default is **2001**.

ENTRE BACKUP
CONNECTION: **NONE**

Entré Backup Connection

This option displays to select the type of backup Entré connection. Select **NET** to allow a dedicated network connection with Entré. Options are NONE or NET. Default is **NONE**.

ENTRE BACKUP IP

Entré Backup IP Address

This option displays only if NET is chosen for the backup Entré connection. Enter the backup Entré IP address where the panel sends network messages. The Entré IP address should be unique and cannot be duplicated on the network. Enter all 12 digits and leave out the periods. For example, enter IP address 192.168.0.250 as 198168000250. The periods display automatically. Default is **0.0.0.0**.

ENTRE BACKUP
TCP PORT: **2011**

Entré Backup TCP Port

This option displays only if NET is chosen for the backup Entré connection. Enter the backup programming port number for the incoming Entré connection. The programming port identifies the port used to communicate messages to and from the Entré software. This port cannot be the same port as programmed in Network Programming Port. The default Programming Port setting is **2011**.

ENTRE CHECKIN
MINUTES: 0

Entré Checkin

Select the rate at which check-in messages are sent over the Entré connection. Select 0 (zero) to disable check in messages. Range is 0, 3-240 minutes. Default is 0.

ENTRE PASSPHRASE
-

Entré Passphrase

To enable encryption, enter an 8 to 16-character Passphrase using alphanumeric characters. If you leave the Passphrase blank, the panel communicates with Entré but the data is not encrypted. The Passphrase is **BLANK** by default.

APP KEY:

App Key (For EASYconnect only)

Enter the 8-digit App Key obtained in your Dealer Settings tab at dealer.securecomwireless.com. This communication option is only available for panels with onboard network and is used to eliminate the need for a static IP address programmed in Network Options.

To enter a new App Key, press any select key and enter any combination of 8 digits. Press **CMD**. The default for this option is blank.

SYSTEM REPORTS

SYSTEM REPORTS

System Reports

This function enables you to select the reports the TMSentry sends to the receiver.

O/C RPTS	NO	YES
----------	-----------	-----

Opening/Closing Reports

NO - No Opening/Closing Reports are sent.

YES - Sends Opening/Closing Reports for each programmed area.

RESTORAL:	YES	
NO	YES	DISARM

Zone Restoral Reports

This option enables you to specify whether the panel sends zone restoral reports and also when they will be sent.

NO - Restoral reports are not sent by the panel.

YES - The panel always sends zone restoral reports at the time the zone restores from an alarm or trouble condition.

DISARM - The panel sends zone restoral reports when a zone that has restored from an alarm or trouble is disarmed. Twenty-four hour zones send restorals immediately.

BYPASS	NO	YES
--------	----	------------

Bypass Reports

YES enables the panel to send all zone bypass, reset, and force arm reports to the receiver. The bypass report includes the zone number, zone name, and the user number of the individual bypassing the zone.

CODE CHG	NO	YES
----------	----	------------

Code Change Reports

YES enables the panel to send all code additions, changes, and deletions to the receiver. The code change report includes the user number added or deleted and the user number of the individual making the change.

SEND STORED MESSAGES?	NO	YES
-----------------------	-----------	-----

Send Stored Messages

If a panel loses communication with the receiver, it will store any messages that are not able to be sent while communication was down. Selecting YES enables the panel to send all stored messages to the receiver once communication is restored. The time at which each message was generated is also sent. Default is **NO**.

If the panel is programmed to communicate to a second IP address (IP2), Send Stored Messages must be enabled for the panel to send a special check-off message to IP2 once communication is restored to the primary IP address (IP1).

AMBUSH	NO	YES
--------	-----------	-----

Ambush

YES enables an ambush report to be sent any time user code number one is entered at a keypad. Selecting NO disables the ambush report and enables user code number one to operate the same as all other codes.

ENTRY CHECKIN	NO	YES
---------------	-----------	-----

Entry Check-in Protection

This feature is used primarily for residential systems when Check-In messages are not used.

If YES is selected, this enables the panel to send a Serial 1 check-in message when an Entry Delay begins. The fail time included in this message is the programmed Entry Delay (rounded up to the nearest minute) plus one minute.

When the System is Disarmed, (either before or after going into Alarm, regardless of Transmit Delay) another check-in message will be sent. The fail time for this check-in message is 0 if regular check-ins are not programmed and is the normal fail time if check-ins are programmed. During the time frame between the beginning of the Entry Delay and the following check-in message, regular check-in messages are suspended. The default is **NO**.

SYSTEM INFO	NO	YES
----------------	-----------	-----

Send System Information

If **YES** is selected, the panel family and panel serial number appear as additional identifiers on the end of the Serial 3 message sent to the monitoring center. The addition of the panel family and panel serial number helps monitoring center operators identify the correct system if two panels unintentionally use the same account number.

If **NO** is selected, the Serial 3 message does not include the panel family or panel serial number identifiers. Default is **NO**.



Note: This feature requires a SCS-VR Virtual Receiver or an SCS-1R Network Enabled Receiver with the SCS-150 Main Processor Card at firmware Version 108 (9/23/25).

SYSTEM OPTIONS

SYSTEM OPTIONS

System Options

This section enables you to select system wide parameters used in the operation of the TMSentry system.

CLS CODE **NO** YES

Closing Code

When YES is selected, a closing code is required for system arming. If NO is selected, a closing code is not required for system arming. Default is **NO**.

ENTRY DLY 1: 30

Entry Delay

Enter the entry delay time for all exit type zones programmed to use Entry Delay 1. When an armed Exit type zone is faulted, the keypad prewarn tone begins sounding. ENTER CODE: - and the name of the zone causing the Entry Delay displays on all keypads. All Burglary type zones in all areas are delayed along with the Exit zone. When the first digit of a code is entered, the prewarn tone stops at the keypad. If, within five seconds, a valid user code is not entered or an invalid user code is entered, the prewarn tone begins sounding again. Fifteen seconds must elapse before entering a digit silences the prewarn tone again. The area must be disarmed before the entry delay expires or an alarm will be tripped. Entry delay times can be from 30 to 250 seconds. Default is **30 seconds**.

EXIT DELAY: 60

Exit Delay

Enter the Exit Delay time for all Exit type zones. When the exit delay time starts, all activity on exit and burglary zones is ignored until the exit delay expires. The keypad displays the Exit Delay time countdown and annunciates the Exit Delay tone at 8 second intervals until the last 10 seconds when annunciation is at 3 second intervals. The exit delay can be from 45 to 250 seconds. Default is **60 seconds**. During Exit Delay, if an exit zone trips, then restores, and trips again, the Exit Delay timer restarts. This restart can occur only once. Exit Error Operation: At arming, when an entry/exit zone (EX) is faulted at the end of the exit delay then one of two sequences occur: For Entry Delay EX type zones:

- the bell sounds for the length of time set in Bell Cutoff programming
- the Entry Delay operation starts, requiring code entry to disarm
- if not disarmed, a zone alarm and an Exit Error are sent to the receiver.

CRS ZONE TM: 4

Cross Zone Time

Enter the time allowed between zone faults. When a zone programmed for cross zoning faults, the panel begins counting down the Cross Zone Time entered here. If the same zone or another cross-zoned zone faults within this time, an alarm report is sent to the receiver. If the Cross-Zone Time expires without the second zone fault, only a zone fault report from the first zone is sent to the receiver. The Cross-Zone Time can be from 4 to 250 seconds in one second increments. Enter 0 (zero) to disable the Cross-Zone Time feature.

Refer to Appendix C to learn more about Cross Zoning.

PWR FAIL HRS: 1

Power Fail Delay

This option tracks the duration of an AC power failure. The delay time can be from 1 to 9 hours. When the AC power is off for the length of the programmed delay time, an AC power failure report is sent to the receiver. Entering a 0 (zero) sends the AC power failure report within 15 seconds. Default is **1 hour**.

SWGRBYP TRIPS: 2

Swinger Bypass Trips

Swinger Bypass enables the panel to bypass a zone from the system to avoid repeated false alarms caused by wind, rain, or other environmental factors while still tracking alarm sensor activity.

Bypassed zones are automatically reset when the area they are assigned to is disarmed. All 24-hour zones are reset when any area of the system is disarmed. A programming Stop operation restores a bypassed zone. Entering 0 (zero) disables this function. Default is **2**.

How it works

If within one hour, a zone trips the total number of times as specified in Swinger Bypass Trips, the panel bypasses it until the following conditions occur; the area in which the zone is assigned is disarmed, the zone is manually reset through the Bypass Zones keypad User Menu function, the zone remains normal for one hour and the Reset Swinger Bypass is YES. The panel hour timer starts at 59 minutes past the hour. If the hour timer expires before the trip counter is exceeded, the trip counter returns to 0 (zero). If the trip counter is exceeded before the hour expires, the zone is automatically bypassed by the panel. A Bypass Report is sent to the receiver if Bypass Reports is YES.

RST SBYP **NO** YES

Reset Swinger Bypass

When YES is selected, an automatically bypassed zone is reset if it remains in a normal condition for one complete hour after being bypassed. A report of the automatic reset is sent to the receiver if Bypass Reports has been selected as YES. Default is **NO**.

REQUEST TIME CHG
NO **SCS** SCW

Time Zone Changes

This option allows the panel to request automatic time changes from SecureCom Wireless® or the DMP SCS-1R or SCS-VR Receiver on Path 1. For the SCS receiver to send time changes, program it to send time changes and receive time change updates from the network automation computer at least every 24 hours. The default is **SCS**.

Select **NO** to not request time changes.

Select **SCS** to request time changes from the SCS-1R or SCS-VR Receiver.

Select **SCW** to request time changes from SecureCom Wireless.

DST?
NO **YES**

This option only displays if you selected SCW. The default is YES.

Select **NO** to not observe daylight saving time.

Select **YES** to observe daylight saving time.

HRS FROM GMT: 6

When time zone is programmed YES, enter the number (0-23) that indicates the Greenwich Time zone (GMT) where the panel is located. The default is **6**. See table below for GMT values.

GMT	CITY/TIME ZONE
0	London, Monrovia, Lisbon, Dublin, Casablanca, Edinburgh
1	Cape Verde Island, Azores
2	Mid-Atlantic, Fernando de Noronha
3	Buenos Aires, Georgetown, Brasilia, Rio de Janeiro
4	Atlantic Time (Canada), Caracas, La Paz, Santiago
5	Eastern Time (US, Canada) Bogota, Lima, Arequipa
6	Central Time (US, Canada), Mexico City, Saskatchewan
7	Mountain Time (US, Canada), Edmonton
8	Pacific Time (US, Canada), Tijuana
9	Alaska
10	Hawaii
11	Midway Island, Samoa
12	Fiji, Marshall Island, Wellington, Auckland, Kwajalein, Kamchatka
13	New Caledonia
GMT	CITY/TIME ZONE
14	Guam, Sydney
15	Tokyo, Seoul
16	Hong Kong, Singapore
17	Bangkok, Hanoi
18	Dhaka, Almaty
19	Islamabad, Karachi
20	Abu Dhabi, Kazan
21	Moscow, Bagdad
22	Eastern Europe
23	Rome, Paris, Berlin

TRBL AUDIBLE: DAY

Trouble Audible Annunciation

This option enables you to choose when trouble audibles will announce from the keypad. Press any top row key to select the keypad buzzer annunciation method for wireless low battery and missing messages.

Select ANY to enable annunciation anytime.

Select DAY to enable annunciation except during sleeping hours (9 PM to 9 AM).

Select MIN (minimum) to announce only Fire and Fire Verify zones during daytime hours (9 AM to 9 PM). Default is **DAY**.

KEYPAD PANIC KEYS
ENABLED: NO **YES**

Enable Keypad Panic Keys

This option enables the two-button panic key operation selected at a keypad to send the Panic, Emergency, or Fire message to the monitoring center receiver. Select YES to enable the two-button panic operation. To disable the two-button panic operation, select NO. Default is **YES**.

USE FALSE ALARM
QUESTION NO **YES**

Use False Alarm Question

Select YES to display IS THIS A FALSE ALARM? NO YES at the keypad in place of CANCEL VERIFY when a burglar alarm occurs. Default is **YES**.

ENTER WEATHER
ZIP CODE: **0**

Weather Zip Code

This option enables local U.S.A. weather updates to display on the keypad. Enter the zip code of the user at this option. When no number is entered weather conditions are not displayed. Default is **0 (zero)**.

OUTPUT OPTIONS

OUTPUT OPTIONS

Output Options

This section enables you to program panel output options. Switched Ground (open collector) outputs are available using terminals O1 and O2 as the ground and your control panel for power. Select from outputs 1 or 2.

CO OUTS: - -

Cutoff Outputs

Define the operation of the two on-board outputs. For each programming option, enter the output you wish to activate or 0 for no output. Either or both of the outputs can be programmed here to turn off after the time specified in output cutoff time. To disable this option, press any select key to clear the display of output numbers and then press **CMD**.

CUTOFF TIME: 0

Output Cutoff Time

If a Cutoff Output is assigned, you can enter a Cutoff Time for the output to remain on up to 15 minutes. If the output is turned off manually, the cutoff time is reset. The Cutoff Time can be 1 - 15 minutes. Enter 0 (zero) to provide continuous output.

The output is cutoff within 60 seconds of the programmed cutoff time.

The Cutoff Timer is shared by all outputs. If a second output trips, the timer is not reset. Both outputs turn off when the original time expires.

COM FAIL OUT: 0

Communication Failure Output

This output turns on when the panel fails to communicate with the receiver after three successive dial attempts. Enter 0 (zero) to disable this output. To turn off the Communication Failure Output, disarm the panel.

PANIC ALM OUT: 0

Panic Alarm Output

Enter the output number to turn on when any Panic type zone is placed in an alarm condition. The output is turned off after all Panic zones are restored from an alarm condition and a Sensor Reset is performed. Enter 0 (zero) to disable.

ARMED OUT: 0

Armed Output

This output turns on any time an area of the system is armed. The output turns off when the system completely disarms. Enter 0 to disable this output.

RMT ARMG OUT: 0

Remote Arming Output

When the system is armed or disarmed remotely from a schedule, this output turns on momentarily for 0.75 seconds then turns off. This output can be used for panels that require a momentary short to an arming zone to arm and a momentary short to disarm.

DISARMED OUT: 0

Disarmed Output

This output turns on when all areas of the panel are disarmed. The output turns off when an area is armed.

BURGLARY OUT: 0

Burglary Output

This output turns on any time a burglary zone goes into alarm. The output turns off when the area in which the alarm occurred disarms and no other burglary zones are in alarm. Enter 0 (zero) to disable this output.

ARM-ALM OUT: 0

Arm-Alarm Output

Enter the output to turn on steady when any area of the system is armed. If an alarm occurs causing the keypads to turn red, this output pulses and continues to pulse for approximately 3 minutes after the panel is disarmed. Enter 0 (zero) to disable.

AREA INFORMATION

AREA INFORMATION

Area Information

This section enables you to assign functions to individual areas. All non-24-hour zones must be assigned to an active area.

AREA NO: -

Area Number

Enter the number of the area to program. Enter areas 1 to 6.

* UNUSED *

Area Name

Activate an area by assigning it a name in place of a number to assist the user during arming and disarming. Only those areas given names are active and can have zones assigned to them. All others are marked *UNUSED*.

To add an area name to the system, press any select key and then enter up to 16 characters for the new name.

To mark an active area as unused, delete the old name by pressing any select key, then press CMD. The panel automatically sets the name as *UNUSED*.

AUTO ARM **NO** YES

Automatic Arming

Select YES to allow this area to arm automatically according to the opening and closing schedule.

At arming, faulted zones are handled according to the option selected in Bad Zones. Select NO to disable automatic arming for this area. Default is **NO**.

AUTO DIS **NO** YES

Automatic Disarming

NO disables automatic disarming by schedule for this area. Select YES to allow this area to automatically disarm according to a schedule. If an Opening report is sent to the receiver, the user number is indicated as SCH.

ZONE INFORMATION

ZONE INFORMATION

Zone Information

This enables you to define the operation of each protection zone used in the system.

ZONE NO: -

Zone Number

Enter the number of the zone you intend to program. The TMSentry has six built-in zones and four wired expansion zones (11-14). Press **CMD**.

ZONE LOCATION

Zone Location

This feature is optional and allows you to specify a zone location, separate from the zone name. Enter a descriptive location for the zone, such as 2nd Floor East Wing. The zone location is only sent to the monitoring center to help dispatchers identify where an alarm is triggered and does not display on the keypad. You can enter up to 16 characters for the zone location name.

* UNUSED *

Zone Name

Press any select key and enter up to 16 characters for the zone name. A name must be given to each zone in the system. This name can be displayed at the keypads when the zone is bad or viewed in Display Events. The zone name is also sent to the receiver as part of a zone event report.

ZONE TYPE: BLANK

Zone Type

The Zone Type defines the panel's response to the zone being opened or shorted. When you assign a Zone Type to a zone, responses are made automatically for the zone.

-- NT DY EX

To select a new Zone Type, press any select key. The display lists the four Zone Types listed below. When the Zone Type you want to select displays, press the select key below the name.

FI PN EM SV

- Blank, Night, Day, or Exit. Press CMD to display additional zone types.
- Fire, Panic, Emergency, or Supervisory. Press CMD to display additional zone types.
- Auxiliary 1, Auxiliary 2, Fire Verify, or Arming. Press CMD to display additional zone types.
- Holdup. Press the Back Arrow key to display the previous zone types.

A1 A2 FV AR

HU

If you select Blank, Night, Day, Exit, Instant, Auxiliary 1, or Auxiliary 2 as the Zone Type, the zone must be assigned to an area. If you select Fire, Panic, Holdup, Emergency, or Supervisory as the Zone Type, these are 24-hour zones that are always armed and no area assignment is needed. Press **CMD** to continue.

AREA NO: -

Area Assignment

Select the area that the zone will be armed and disarmed with.

AREA:

Arm Areas

This option specifies the areas to be armed by the Arming Type zone. Press the appropriate number keys on the keypad to assign areas 1 to 6. When disarmed, all programmed areas are disarmed.

STYLE:

Style

This option specifies the style for the arming/disarming operation. The default for STYLE: is TGL (toggle). Pressing any select key displays the STYLE options. To view more style options press **CMD**.

TGL ARM DIS STEP

TGL (Toggle) - When the zone changes from normal to short, the programmed areas toggle between the armed or disarmed condition. When restored to normal, no action occurs. When the zone is opened from a disarmed state, a trouble is reported. When opened from an armed state, an alarm is reported and the zone is disabled until you disarm the area(s) from a keypad.

ARM - When the zone is shorted, the programmed areas are armed. When restored to normal, no action occurs. When the zone is opened from a disarmed state, a trouble is reported. When opened from an armed state, an alarm is reported.

DIS (Disarm) - A short will disarm the programmed areas. When restored to normal, no action occurs. When the zone is opened from a normal (disarmed) state, a trouble is reported.

STEP - When programmed as an AREA system, the Arming Type areas will arm and beep the keypads once. A normal condition will cause no action. An open condition will disarm the programmed areas and beep the keypads for one second.

MNT

MNT (Maintain) - When the zone is shorted, the programmed areas are armed. When restored to normal, the programmed areas are disarmed and any alarm bells are silenced. When the zone is opened from a normal (disarmed) state, a trouble is reported. If opened from a shorted (armed) state, an alarm is reported and the zone is disabled until you disarm the area(s) from a keypad.

NEXT ZN? NO YES

Next Zone

When YES is selected, the programming for the zone is finished and the display returns to ZONE NO: - enabling you to enter a new zone number.

Select NO to make changes to the Alarm Action for a zone.

ALARM ACTION

Alarm Action

The Alarm Action section enables you to change or confirm the default alarm characteristics of a zone type.

If you selected the non-24-hour zone type Blank, Night, Day, Exit, Auxiliary 1, or Auxiliary 2, the Alarm Action programming begins with Disarmed Open.

If you selected the 24-hour zone type Fire, Panic, Emergency, or Supervisory, the Alarm Action programming begins with Armed Open.

When a Fire Verify zone is placed into shorted condition, the panel performs a Sensor Reset and does not send a report. If any Fire Verify or Fire zone initiates an alarm within 120 seconds after the reset, an alarm is indicated. If an alarm is initiated after 120 seconds, the cycle is repeated. If no other Fire Verify or Fire zone is tripped within 120 seconds, a zone fault report is sent to the receiver.

DISARMED OPEN

Disarmed Open

This option defines the action taken by the panel when the zone is opened while the area is disarmed. There are three actions to define:

- Message to Transmit
- Output Number
- Output Action

MSG:	TROUBLE
A	L
T	-

Message To Transmit

ALARM - Selecting A enables an alarm report to be sent to the receiver to activate according to zone type. The zone name appears in the panel's alarmed zones status lists.

TROUBLE - Selecting T enables a trouble report to be sent to the receiver and the zone name to appear in the panel's alarmed zone status lists.

LOCAL - When you select L, an alarm report is NOT sent to the receiver. The zone name appears in the panel's alarmed zones status lists.

- (dash) - When you select -, reports are NOT sent to the receiver. There is no display in the panel's alarmed zones status list. Only the programmed Output Number activates.

OUTPUT NO:	0
------------	---

Output Number

You can specify the outputs on the TMSentry to be activated by a zone condition. The output can be activated regardless of the report to transmit or whether or not the zone is programmed as local.

To enter an Output Number, press any select key followed by the output number 1 or 2. Press **CMD**.

OUTPUT:	NONE
---------	------

Output Action

Entering an Output Number displays this option that enables you to assign an output action to the relay.

STD	PLS	MOM	FOLW
-----	-----	-----	------

STEADY - The output is turned on and remains on until the area is disarmed, an output cutoff time expires, or the output is reset from the keypad User Menu.

PULSE - The output alternates one second on and one second off until the area is disarmed, an output cutoff time expires, or the output is reset from the keypad User Menu.

MOMENTARY - The output is turned on only once for one second.

FOLLOW - The output is turned on and remains on while the zone is in an off normal, or bad condition. When the zone restores, the output is turned off.

After you have selected the Message To Transmit, the display prompts you for the same three selections for Disarmed Short, Armed Open, and Armed Short conditions. If the zone is a 24-hour type, only the Armed Open and Armed Short conditions are displayed. When you have programmed all of the zone conditions, the Swinger Bypass selection is then displayed.

SWGR BYP	NO	YES
----------	----	------------

Swinger Bypass

Selecting YES enables the zone to be bypassed by the panel according to the programming in the Swinger Bypass Trips and Reset Swinger Bypass sections in System options. The Bypassed zone displays in the keypad Status List. Selecting NO disables swinger bypassing for this zone.

How it works

If within one hour, a zone trips the total number of times as specified in Swinger Bypass Trips, the panel bypasses it until the following conditions occur; the area in which the zone is assigned is disarmed, the zone is manually reset through the Bypass Zones keypad User Menu function, the zone remains normal for one hour and the Reset Swinger Bypass is YES.

If the zone trips fewer than the specified times within one hour of the first trip, the bypass trip counter returns to 0 (zero).

A report of the swinger bypass is sent to the receiver if Bypass Reports is YES.

CHIME: DOORBELL

Chime

Option is only shown for Night, Exit, and Instant zones. Select either NONE, DB (doorbell), DESC (descend), or ASC (ascend) to assign that tone to a zone. Default is **DOORBELL** for Exit zones and NONE for Night zones.

CRS ZONE NO YES

Cross Zone

Select YES to enable cross-zoning for this zone. Cross-zoning requires this zone to trip twice, or this zone and another cross-zoned zone to trip, within a programmed time before an alarm report is sent to the receiver. To operate correctly, all cross-zone zones need to be programmed as the same zone type.

When a cross-zoned zone trips, the Output action assigned to the zone activates. The cross-zone time specified in System Options begins to count down. See the Cross-Zone Time section. If another cross-zoned zone in the system faults, or if the first zone restores and faults again before the cross-zone time expires, the panel sends an alarm report.

If no other cross-zoned zone in the system trips before the cross-zone time expires, the panel sends only a fault report from the first zone to the receiver.

If CRS ZONE is YES, a valid CRS ZN TIME must be programmed for this feature to be enabled.

Cross-zoning is not compatible with Fire Verify zone types. You cannot enable cross-zoning for Fire Verify zones.

ZONE AUDIT DAYS:

Zone Audit Days

Enter the number of days (0 to 99) allowed to elapse without the zone being tripped before a fault message is sent. The message is sent to the receiver(s) programmed to receive Supervisory/Trouble Reports at 10:00 am following the expiration of the timer. Each time the zone is tripped, the Zone Audit Days timer restarts and begins to countdown the number of days programmed. After the countdown expires, a fault message is sent and the Zone Audit Days timer restarts and begins to countdown the number of days programmed. Available for all zone types except Fire and Fire Verify. Enter 0 (zero) to disable this function. Default is **0 (zero)**.

ZONE NO: -

Zone Number

Enter the zone number you want to program next. Return to the beginning of this section and follow the descriptions of each programming option. If all zones are programmed, press the ARROW key at the ZONE NO: - display to continue.

STOP

STOP

Stop

At the STOP option, pressing any select key enables you to exit the Programmer function of the panel. When selected, the panel performs an internal reset and exits the programmer.

The STOP routine causes the following conditions to occur:

- All current programming is saved
- The panel Status List is cleared

During the reset, all keypad displays are momentarily blank for two seconds. After the reset, the programming function terminates and the keypads return to the status list display.

The STOP option does not disarm the system. Any new areas or zones that were added during programming are not armed until the system is disarmed and armed again.

SET LOCKOUT CODE

SET LOCKOUT CODE

Set Lockout Code

Pressing CMD at the Stop option displays SET LOCKOUT CODE. Although the TMSentry panel enables you to access the Programmer menu without a lockout code, it is recommended you program one to restrict programming access to authorized individuals only. This feature enables you to program a special code that will then be required to gain access to the panel's internal Programmer through the keypad.

Changing the Lockout Code

You can change this code at any time to any combination of numbers from 1 to 5 digits long (1 to 65535). Do not use leading zeros for the lockout code.

1. Press any select key. The display changes to ENTER CODE: - .
2. Enter a 1- to 5-digit code (do not enter a number higher than 65535). Press **CMD**.
3. Enter the new Lockout Code again. Press **CMD**. The keypad display changes to CODE CHANGED.

Once you have changed the code, it is important that you write it down and store it in a safe place. Lost lockout codes require the panel to be sent back into DMP for repair. You may cancel a Lockout Code by entering 00000 at the Set Lockout Code command option.

Lockout Code restriction:

Do not set a Lockout Code higher than 65535.

APPENDIX A: PROGRAM USERS

This section covers how to program users in the user menu. Refer to [TMSentry User Guide](#) for additional information.

Enter the User Menu

1. Press the **CMD** key until **MENU? NO YES** displays.
2. Select YES. The keypad displays ENTER CODE.
3. Enter the **default master code**. The user menu displays. Press CMD to scroll through the menu items.



Default Master Code

TMSentry panels ship with a unique 4-digit default master code that is used to access the user menu. This code can be modified or deleted. To revert back to the default code 99, use the initialize code option found in panel programming.

Add a User

Add up to 30 users.

1. Press the **CMD** key until **MENU? NO YES** displays.
2. Select **YES**. The keypad displays **ENTER CODE**.
3. Enter the default master code, then press **CMD** until **USER CODES?** displays.
4. Press any select key. The keypad displays **ADD DEL CHG**.
5. Select **ADD** to add a new user code. The keypad displays **USER NUMBER**.
6. Enter a user number, then press **CMD** until **ACTIVE?** displays.
7. Select **YES** to make the user code active, or select **NO** to make the user code inactive. Press **CMD** until **CODE NO** displays.
8. Enter a 4-digit user code, then press **CMD** until **USER NAME** displays.
9. Press any top row key to clear the current text “user name,” then enter a 16-character name to identify the user. Press **CMD**. The keypad displays **MASTER? NO YES**.
10. Select **YES** to make this a Master level user with the authority to access all user menu functions. If YES, skip to step 14.
Select **NO** to make this a Standard level user. Steps 11-13 apply only to Standard level users.
11. When **TEMP CODE NO YES** displays, select **NO** to make it a permanent user code or select **YES** to make this a temporary user code. If **YES**, the keypad displays **TEMP DAYS: -**. Enter the number of days (1 to 250) that the temporary user code can operate. Default is **7** days. Temporary users are deleted from the system at 12:00 AM on the last day.
12. When **AREAS** displays, enter the area numbers where this user is to have access. For example, if you want this user to only have access to areas 1 and 2, enter the numbers 1 and 2. Then, press **CMD**.
13. When **ARM ONLY NO YES** displays, select **NO** to allow this user to arm and disarm the system and access all Standard level functions in the User Menu, or select **YES** to restrict this user to arming only. The Arm Only user code can bypass zones not in a normal condition at the time of arming.
14. When **USER # ADDED** displays, press the Back Arrow key once to add another user or twice to exit the user menu.

APPENDIX B: STATUS LIST

The Status List on the keypad displays the current status of the system and records of recent system events. The Status List alerts the user to a problem with the system. For example, a DC failure would display as DC POWER -TRBL in the Status List.

Status List Items

Some Status List items remain in the display until manually cleared and some are cleared automatically when the condition returns to normal. When there are multiple items in the list, use **CMD** or **Back Arrow key** to scroll forward or back through the items.

The following table includes items that may show in the Status List with information about how to clear the item from the list:

STATUS LIST ITEMS	CLEAR THE ITEM MANUALLY?
Fire, Carbon Monoxide, and Supervisory zone alarms	Yes, by sensor reset
Fire, Carbon Monoxide, and Supervisory zone troubles	No, item clears when zone restores
Burglary zone alarms	No, item clears at disarming
All other zone alarms	No, item clears after zone restores
Zone monitor displays	No, item clears after approximately 8 minutes
Day zone alerts	No, item clears after approximately 8 minutes
System monitor trouble	No, item clears when condition restores (DC and battery trouble)
Armed status display	No (System On)
Disarmed status displays	No (System Ready, System Not Ready)
Remote keypad messages	No (Sent to the keypad by your office or monitoring center)

APPENDIX C: FALSE ALARM REDUCTION

The following information details three of many false alarm reduction features in the TMSentry.

System Recently Armed Report

The System Recently Armed report is sent when a burglary zone goes into alarm within two minutes of the system being armed. This report may lead the monitoring center operator to call the subscriber first instead of immediately dispatching the police to what may be a false alarm.

False Alarm Question

If False Alarm Question is enabled, the keypad displays **IS THIS A FALSE ALARM? NO YES** when a burglar alarm occurs. False Alarm Question is enabled by default.

Cross Zoning

Cross Zoning requires two zone faults to occur within a specific time before the system goes into alarm. When a Cross Zoned zone trips, a FAULT report is sent to the SCS-1R Receiver. When two Cross Zoned zones trip within the Cross Zone Time, both zones send ALARM signals to the receiver.

For example, if Zones 1 and 2 are Cross Zoned zones and only zone 1 trips, a FAULT report is sent to the receiver for Zone 1. If both Zone 1 and Zone 2 trips within the Cross Zone Time, an ALARM report is sent to the receiver for Zone 1 and Zone 2.



Note: Take caution when cross zoning devices to ensure that the Cross Zone Time is long enough to allow an intruder to trip both zones before it expires. A Cross Zone Time that is too short may allow an intruder to trip both zones without causing alarm and only a zone fault report sends to the monitoring center.

To operate correctly, all Cross Zone zones need to be programmed as the same zone type.

Zone Type Descriptions

This section describes applications for the zone types in Zone Information programming.

NT (Night Zone) - Controlled instant zone used for perimeter doors and windows and interior devices, such as PIR motion detectors and glassbreak detectors.

DY (Day zone) - Used for emergency doors or fire doors to sound the keypad buzzer and display the zone name when the zone is faulted. Day zones also will send alarm reports to the receiver during the system's armed periods.

EX (Exit zone) - Initiates the entry delay timer when its assigned area is fully armed. Also, can initiate an exit delay timer to allow a user to exit an area after the arming process has started.

PN (Panic zone) - Used for connecting to mechanical devices that allow a user to signal an emergency alarm. Panic zones can provide either a silent or audible alarm with or without reporting to a monitoring center receiver.

EM (Emergency zone) - Used for reporting medical or other non-panic emergencies to the monitoring center.

SV (Supervisory zone) - Used to provide 24-hour zone supervision. Typical applications are high water and low and high temperature gauges.

FI (Fire zone) - Used for any type of powered or mechanical fire detection device. Typical applications are for smoke detectors, sprinkler flow switches, manual pull stations, and beam detectors.

FV (Fire Verify zone) - Used primarily for smoke detector circuits to verify the existence of an actual fire condition. When a Fire Verify zone initiates an alarm, the panel performs a Fire Reset. If any Fire zone initiates an alarm within 120 seconds after the reset, an alarm is indicated. If an alarm is initiated after 120 seconds, the cycle is repeated.

A1 and **A2** (Auxiliary 1 and Auxiliary 2) - These zones are typically used to protect restricted areas within a protected premises. Auxiliary 2 zones do not appear in the Status List.

AR (Arming zone) - Used to connect a keyswitch to a zone to arm and disarm the system.

HU (Holdup zone) - Used as silent panics, which do not trigger audible or visual alerts on the keypad.

APPENDIX D: DIAGNOSTICS FUNCTION

The Diagnostics function enables you to test cellular communication and cellular signal strength and view panel settings. To enter Diagnostics, reset the panel, enter the Diagnostics code **2313** (DIAG), and press **CMD**. To exit Diagnostics, press **CMD** until STOP displays, then press a select key.

Carrier Selection

This option is only available when DualSIM is active. In the event that remote connectivity is unavailable, carrier options can be manually switched on the keypad. To select a single carrier, press **ATT** or **VZW**. To switch from a single carrier to DualSIM operation, select **BOTH**.

Signal Strength Test

Once DualSIM is activated, the panel automatically selects a primary carrier when the panel is turned on. Once the primary is established, the panel tests the signal strength of the primary every hour. During the test, if the primary's signal drops by 10db or more, the panel then tests the backup carrier. If the backup has a stronger signal, it becomes the new primary. Every five hours, the panel automatically tests the backup's signal strength to determine the stronger signal.

Cellular Status

Cellular Status tests the individual components of the panel's cellular communication. Enter the Cell Status menu to initiate testing.

 **Note:** If DualSIM is active, an option to select **ATT** or **VZW** appears before testing proceeds. Select one of the carriers to test it.

The test proceeds until the first component failure or until all components have been tested with positive results. After each component is tested, the test screen displays for two seconds or until **CMD** is pressed.

Cell Signal



Cell Signal tests the cellular signal strength of the nearest tower for the SIM card provider. Enter the Cell Signal menu item, then press any select key to test and display cell signal strength. The X's represent the numerical value of the cell signal strength in -dBm. The **I**'s represent the signal strength 0-7.

Panel Settings

In Diagnostics, press **CMD** to cycle through panel settings items, including MAC Address, Serial Number, Frequency Offset, Panel Model, and Firmware Version. To view each setting, press a select key when the desired setting displays.

MAC Address (short for Media Access Control Address) displays the hardware address that uniquely identifies each network node. Unlike IP addresses, which can be assigned and changed, MAC Addresses are nonassignable and unchangeable.

Serial Number displays the network communicator serial number. Reference this number for communicator date-of-manufacture, hardware version, etc.

Panel Model displays the model number of the panel.

Firmware Version displays the firmware version number of the panel and the date the firmware version was released.

APPENDIX E: 984 COMMAND FUNCTION

The 984 Command function enables you to connect to a service receiver. There are two options to allow manual seizure: Network and Cell.

To use the 984 Command function, enter **984 + CMD** at the keypad. A remote options menu appears. Press a select key under NET or CELL to enter the respective menu.

NET

NET tests each component of the panel's network communication paths. Enter **984 + CMD** at the keypad, then press the select key under NET to initiate the test. When prompted, enter a Network path. The test runs and the results display on the keypad in the order they were tested: LINK, DHCP, GATEWAY, DEST, NET COMM.

If NET is not a communication option on the panel, NO NETWORK displays on the keypad and the keypad display returns to the Status List.

CELL

CELL tests each component of the panel's cellular communication paths. Enter **984 + CMD** at the keypad, then press the select key under CELL to initiate the test. The keypad displays CELL IS BUSY if the modem is being tested from another keypad.

When prompted, enter a Cellular path. The test runs and the results display on the keypad in the order they were tested: MODEM, TOWER, SIM, APN, CELL COMM. See the Diagnostic Functions section for a description of the Cellular Status results.

If CELL is not a communication option on the panel, NO CELL displays on the keypad and the keypad display returns to the Status List.

APPENDIX F: COMMON KEYPAD MESSAGES

MESSAGE TITLE	MESSAGE DESCRIPTION	POSSIBLE SOLUTION
INVALID CODE	The user code you have entered is not recognized by the system.	Check the user code and try again.
CLOSING TIME	The schedule has expired but the system has not been armed.	Users still on the premise should arm the system or extend the schedule to a later time.
KEYPAD NAME - NOPWR	Keypad is not getting proper power.	Check that DC transformer is plugged in correctly.
DC TROUBLE	The system DC is low or missing.	Check that the DC connections are good.
BATTERY TROUBLE	The system battery is either low or missing.	Check that the battery connections are good and the battery is still good.
SYSTEM TROUBLE OR SERVICE REQUIRED	There is a problem with one or more components in the system.	Make sure there is not a short or open condition on the green data wire to the keypad.
SYSTEM BUSY	There is a problem with one or more components in the system.	Wait a few moments for the system to complete the task. If the message displays for a long period of time, the processor could be locked up.
TRANSMIT FAIL	The panel has attempted to communicate with the monitoring center 10 times and has not succeeded.	Verify your communication type, account number, and phone number. Make sure the telephone line is connected and working properly.
ENTER CODE (When entering Programming)	A lockout code has been programmed for the panel.	Enter the lockout code.

APPENDIX G: KEYPAD SPEAKER OPERATION

The panel provides distinct speaker tones from the keypad for Burglary and Zone Monitor events.

Burglary Events

The speaker tone turns **on** when a burglary zone alarm activates.

The speaker tone turns **off** when the burglary alarm is silenced.

Zone Monitor Events

The speaker makes one tone when a monitored zone is tripped.

ORDERING INFORMATION

TMSENTRY	TMSentry ATM Panel, Verizon
TMSENTRY KIT	TMSentry ATM Panel for Verizon, 7060-W Thinline Keypad, Deskstand for Keypad
BAT10000/8	Replacement 10k mAH Battery (8 pack)
383PUCK	Replacement Puck Style Antenna



Designed, engineered, and
manufactured in Springfield, MO
using U.S. and global components.

LT-2862 25401

© 2025

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

800.641.4282 | DMP.com