



## XTL Series

**Thank you for your purchase!**

### INCLUDES

---

- **Full System User Guide QR Code**
- **How to Handle an Alarm**
- **Arm a Home/Away System**
- **Disarm a Home/Away System**

To view the full  
**XTL Series System  
User Guide**, scan  
this QR code or  
visit [DMP.com](http://DMP.com).



## HOW TO HANDLE AN ALARM

Enter your user code or present your credential to the keypad if it has a built-in proximity reader.

You will see:

### IS THIS A FALSE ALARM?

**YES NO**

## REAL ALARM

Press **NO** to notify the emergency monitoring center. Your system will remain armed.

## FALSE ALARM

Press **YES** to cancel the alarm. Your system will disarm.

## Arm a Home/Away System

Thinline Keypads

1. Press **CMD** until the keypad displays **HOME AWAY**.
2. Select **HOME** if you're staying inside the building, leaving the interior disarmed and arming the exterior. Select **AWAY** if no one will remain inside the building.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen.
2. Select **HOME** if you're staying inside the building, leaving the interior disarmed and arming the exterior. Select **AWAY** if no one will remain inside the building.
3. Enter your user code if prompted.

## Disarm a Home/Away System

Thinline Keypads

1. Enter your user code to disarm the system.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen.
2. Select **DISARM**. The keypad displays a list of areas to disarm.
3. To disarm all areas, select **Disarm All**. To disarm select areas, tap the area name and then tap **Disarm Selected**.

