

### New Features

Additional features and analytics have been added to Dealer Admin for the XV Gateway with AlarmVision®.

#### Line Cross

This feature allows for up to four line cross triggers to be configured per camera, in addition to the four regions already available. For each line created, Entrance, Exit, or Bi-Directional line cross can be enabled, which includes analytics that apply to vehicles, people, or animals. Alarm zones can also be tied to line cross triggers.

#### Direction of Travel

This feature allows directions (Entrance, Exit, and Bi-Directional) to be applied to regions, which monitors when a vehicle, person, or animal moves in a direction that is a part of a programmed region.

#### Vehicle Loitering

This feature allows vehicle loitering time to apply to regions. This can be enabled by choosing the minutes and seconds that a vehicle is allowed to be present before an alert is triggered.

### More Information

To learn more, refer to the following documentation:

- [XV Gateway Installation and Setup: Add and Edit Cameras](#)