

FEATURE UPDATE | DECEMBER 2025

New Feature

Dealer Admin has been updated to include OSDP support for the 734 Access Control Module. To use this feature, the following panel firmware versions are required:

- [XR Series firmware Version 253 \(8/22/25\)](#)
- [XT75 firmware Version 255 \(12/30/25\)](#)

OSDP Support

This update allows XR Series and XT75 Control Panels to receive and send OSDP commands to [7873 Series Touchscreen Keypads with firmware Version 209 \(8/22/25\)](#) and [734 Access Control Modules with firmware Version 108 \(6/15/25\)](#).

To program OSDP options in Dealer Admin, complete the following steps:

1. Log in to Dealer Admin (dealer.securecomwireless.com).
2. Go to **Customers** and select a **System Name**.
3. Go to **Programming**, then go to **Device Setup**.
4. Select the door you want to enable OSDP commands for or select **+ Add Device**, enter a **Device Name**, and set the **Device Type** as a **Door**.
5. Toggle **Program 734 Options** ON.
6. In the **Reader Protocol** drop-down menu, select **OSDP**. Steps 7-9 below only display if **OSDP** is selected.
7. In **OSDP Passphrase**, enter a secure passphrase up to 16 alphanumeric characters that is used to establish encrypted two-way communication between the reader and module.
8. Go to **Custom OSDP Reader Options** and configure the following options if needed:
 - In **Prox**, select **Enable** to allow prox card reads. Select **Disable** to disable prox card readers. Prox is enabled by default.
 - Toggle **Buzzer** ON to enable reader annunciation.
 - Toggle **Tamper** ON to send a tamper alert if the tamper is triggered.
 - Toggle **LED Control** ON to assign LED colors to reader actions.
9. If **LED Control** is enabled, assign one of the 7 LED colors (if compatible with the reader) to the following reader actions:
 - **Disarmed/Locked**
 - **Armed/Locked**
 - **Unlocked**
10. Configure additional options as needed, then select **Send All Changes** at the top of the screen.

Reader Configuration Files

To upload and send custom reader configuration files, 734 modules with firmware Version 108 (6/15/25) is required.

To use a custom reader configuration file, complete the following steps:

1. At the top of **Device Setup**, select **+ Select or Upload File**.
2. To upload a file, click or drag the file to the specified area.
3. In the drop-down menu, choose the reader(s) you want to send the file to, then select **Send to Reader**.

More Information

To learn more, refer to the following documentation:

- [Dealer Admin Help: Retrieve and Send Programming](#)