

TECHNICAL UPDATE | NOVEMBER 2025

Version 255 Update

Updated Version 255 (11/12/25) firmware is now available for XR Series Control Panels.

Host Name Configuration

This update allows you to enter a host name instead of an IP address. This helps eliminate the need to update the IP address programmed in the panel if it changes, allowing you to configure the host name in panel programming only once.

To program host names on Dealer Admin or Entré, refer to [Dealer Admin XR Series Version 255 Support Technical Update](#) or [Entré Version 9.8.3 \(10/22/25\) Technical Update](#).

 **Note:** Ensure the host name has already been set by your IT administrator or network manager before programming the host name in the panel.

To program a host name at the keypad, complete the following steps:

Receiver Host Name

1. At the keypad, enter **6653** (PROG) and select **CMD** to enter the programming menu.
2. Navigate to **COMMUNICATION**, then go to **USE RCVR HOST NAME?** (Use Receiver Host Name). Select **YES**, then select **CMD**.
3. At **RCVR HOST NAME**, enter the host name, then select **CMD**.
4. Configure additional options as needed.
5. Refer to the steps below to program the Entré and Integrator host names, or go to **STOP** to save programming.

Entré and Integrator Host Names

1. At the keypad, enter **6653** (PROG) and select **CMD** to enter the programming menu.
2. Navigate to **REMOTE OPTIONS**, then go to **USE ENTRÉ HOST NAME?** Select **YES**, then select **CMD**.
3. At **ENTRE HOST NAME**, enter the host name, then select **CMD**.
4. If you want to use a backup host name for the Entré connection, go to **BACKUP HOST NAME** and enter the backup host name. Select **CMD**.
5. If you are using an integrator, go to **USE INTEGRATOR HOST NAME?** Select **YES**, then select **CMD**.
6. At **INTGRTR HOST NAME** (Integrator Host Name), enter the host name, then select **CMD**.
7. If you want to use a backup host name for the Integrator connection, go to **BACKUP HOST NAME** and enter the backup host name. Select **CMD**.
8. Configure additional options as needed.
9. Refer to the steps below to program the PC Log Reports host name, or go to **STOP** to save programming.

PC Log Reports Host Name

1. At the keypad, enter **6653** (PROG) and select **CMD** to enter the programming menu.
2. Navigate to **PC LOG REPORTS**, then go to **USE PC LOGS HOST NAME?** Select **YES**, then select **CMD**.
3. At **PC LOGS HOST NAME**, enter the host name, then select **CMD**.
4. Configure additional options as needed.
5. Go to **STOP** to save programming.

Obtaining the New Firmware

XR Series firmware updates are available, free of charge, on Dealer Admin (dealer.securecomwireless.com) or for download from DMP's [Product Software Downloads](#).