

## FEATURE UPDATE | NOVEMBER 2025

## Host Name Configuration

This update allows you to enter a host name instead of an IP address. This helps eliminate the need to update the IP address programmed in the panel if it changes, allowing you to configure the host name in panel programming only once. To use this update, XR Series firmware Version 255 (11/12/25) is required.

 **Note:** Ensure the host name has already been set by your IT administrator or network manager before programming the host name in Dealer Admin.

To program host names at the keypad or on Entré, refer to [XR Series Version 254 \(11/12/25\) Technical Update](#) or [Entré Version 9.8.3 \(10/22/25\) Technical Update](#).

To program a host name in Dealer Admin, complete the following steps:

 **Note:** Enabling the host name disables the **IP Address** toggle.

### Receiver Host Name

1. Log in to Dealer Admin ([dealer.securecomwireless.com](http://dealer.securecomwireless.com)).
2. Go to **Customers** and select the **System Name**.
3. Go to **Programming**, then go to **Communication**.
4. Toggle **Receiver Host Name** ON. Enter a **Receiver Host Name** up to 63 characters. The permitted characters include a-z, A-Z, 0-9, hyphen (-), and dot (.).
5. Configure additional options as needed.
6. Refer to the steps below to program the Entré and Integrator host names, or select **Send All Changes** at the top of the screen.

### Entré and Integrator Host Names

1. Log in to Dealer Admin ([dealer.securecomwireless.com](http://dealer.securecomwireless.com)).
2. Go to **Customers** and select the **System Name**.
3. Go to **Programming**, then go to **Remote Options**.
4. Toggle **Use Entré Host Name** ON. Enter a **Entré Host Name** up to 63 characters. The permitted characters include a-z, A-Z, 0-9, hyphen (-), and dot (.).
5. If you want to use a backup host name, toggle **Use Entré Backup Host Name**, then enter the **Entré Backup Host Name**.
6. If you are using an integrator, toggle **Integrator Host Name** ON, then enter the **Integrator Host Name**.
7. If you want to use a backup host name, toggle **Use Integrator Backup Host Name**, then enter the **Integrator Backup Host Name**.
8. Refer to the steps below to program the PC Log Reports host name, or select **Send All Changes** at the top of the screen.

### PC Log Reports Host Name

1. Log in to Dealer Admin ([dealer.securecomwireless.com](http://dealer.securecomwireless.com)).
2. Go to **Customers** and select the **System Name**.
3. Go to **Programming**, then go to **PC Log Reports**.
4. Toggle **Use Network Host Name** ON. Enter a **Network Host Name** up to 63 characters. The permitted characters include a-z, A-Z, 0-9, hyphen (-), and dot (.).
5. Select **Send All Changes** at the top of the screen.