

Edge-Mount Installation

When installing the iCOM_{SL} or ePAD in an enclosure without an available 3-hole mounting pattern or adequate clearance, you may mount the unit on the edge of the enclosure, as shown in Figure 1.

1. Starting with the end of the unit with the connectors, slide the top edge of the casing onto the top edge of the enclosure.
2. Firmly press the casing until the entire top side is overlapping the edge of the enclosure, as shown in Figure 1.

Important: Do not attempt to edge-mount on an enclosure constructed of metal thicker than 20 gauge.

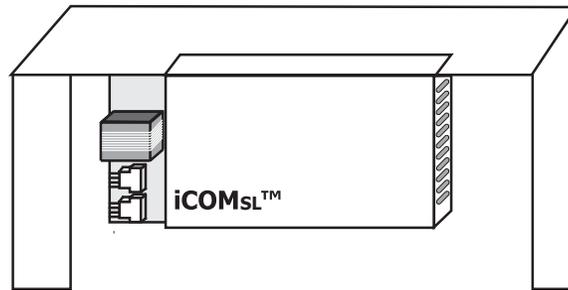


Figure 1: iCOM_{SL} or ePAD Mounted on the Edge of the Enclosure

