

9800 Series Graphic Touchscreen Keypad


Quick Start Guide

This quick start guide walks you through installing the keypad.



Full Installation and Programming Guide

To view the full [9800 Series Graphic Touchscreen Keypad Installation and Programming Guide](#), scan this QR code or visit DMP.com.

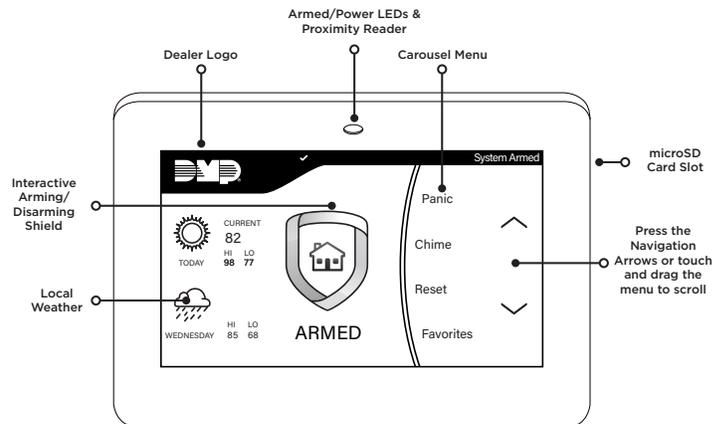

Step 1: Remove the Cover

Insert a slotted-tip screwdriver into one of the slots on the bottom of the keypad and lift the screwdriver upward. Repeat with the other slot. Separate the cover from the base and set the cover containing the keypad components aside.

Step 2: Run Wire

If installing the 9862 keypad with a wire-in power supply, run wire 18-22 AWG from an unswitched power outlet to the keypad mounting location.


Step 3: Mount the Keypad

Mount 9862 with Screws

1. Route the keypad wires through the cutouts in the base.
2. Use the keypad base to mark the holes for the screws on the mounting surface.
3. Set the base aside and drill the holes.
4. Use the included screws to secure the keypad base to the surface. Do not overtighten.
5. Place the keypad cover back onto the base and snap it into place.

Mount 9682USB on Deskstand

For mounting on a deskstand, see the QR code at the beginning of the document.

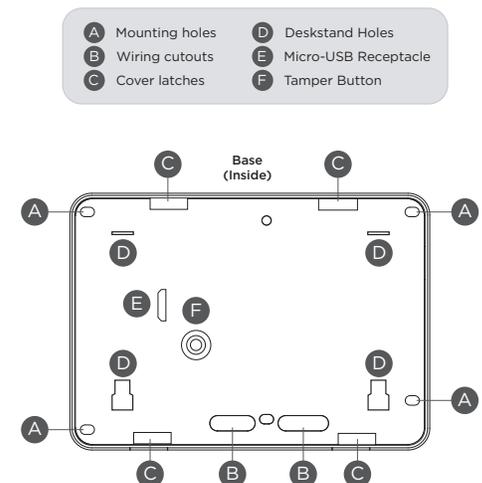


Step 4: Wire the Keypad

⚡ Caution: Disconnect all power before wiring. Failure to do so may result in equipment damage or injury. Observe polarity when making power connections.

9862

1. Plug the 4-wire harness into the back of the keypad with the black wire on position B and the white/black wire on position R.
2. Connect the power supply's positive wire to the white/black wire.
3. Connect the power supply's negative wire to the keypad's black wire.
4. Connect the power supply to power.

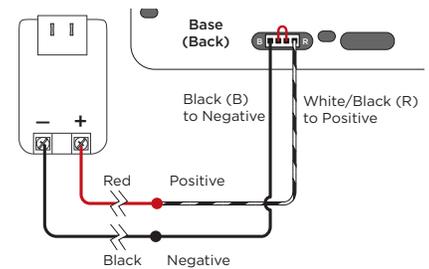

9862USB

1. Plug the cable end with the micro-USB connector into the back of the keypad.
2. Fit the security strap over the adapter with the wire slit facing up. Feed the cable through both slits in the strap.
3. Plug the cable end with the USB connector into the adapter.
4. Remove the center screw from the outlet's wall plate. Thread the outlet screw through the security strap and into the wall plate, then tighten.
5. Plug the adapter into the outlet.

Step 5: Pair the Keypad with the Panel

1. Ensure the panel has a house code programmed in the panel's **SYSTEM OPTIONS**.
2. Enable pairing:
 - a. For the XTLplus or XTLtouch, press the Reset button for 2 seconds.
 - b. For XT Series and XR Series panels, reset the panel three times, allowing the transmit LED (PROG XMIT) to flash between each reset.
3. If pairing doesn't start automatically, tap **Press to Pair** on the keypad screen.

The keypad attempts to pair for 10 minutes.



Paired: The keypad displays the home shield screen.



Not Paired: The keypad displays **Pairing Failed**. Repeat the steps above to reattempt pairing.

Step 6: Program the Panel and Keypad

For all programming instructions, see the QR code at the beginning of the document.

Step 7: Test the Keypad

For all testing instructions, see the QR code at the beginning of the document.



Designed, engineered, and
manufactured in Springfield, MO
using U.S. and global components.

LT-2580 22174

© 2022

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

Domestic: 800.641.4282 | International: 417.831.9362

DMP.com